 
 
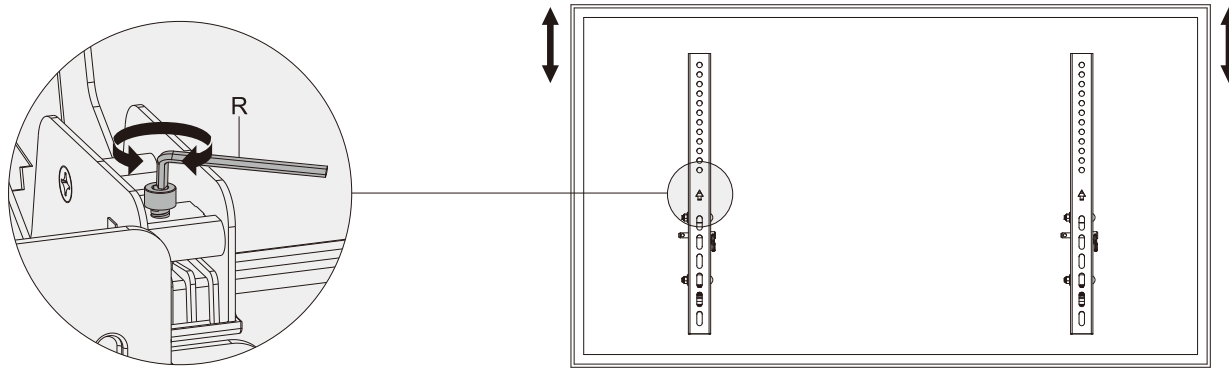 


11. Level Adjustment

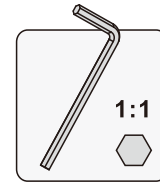


12. Cable Management

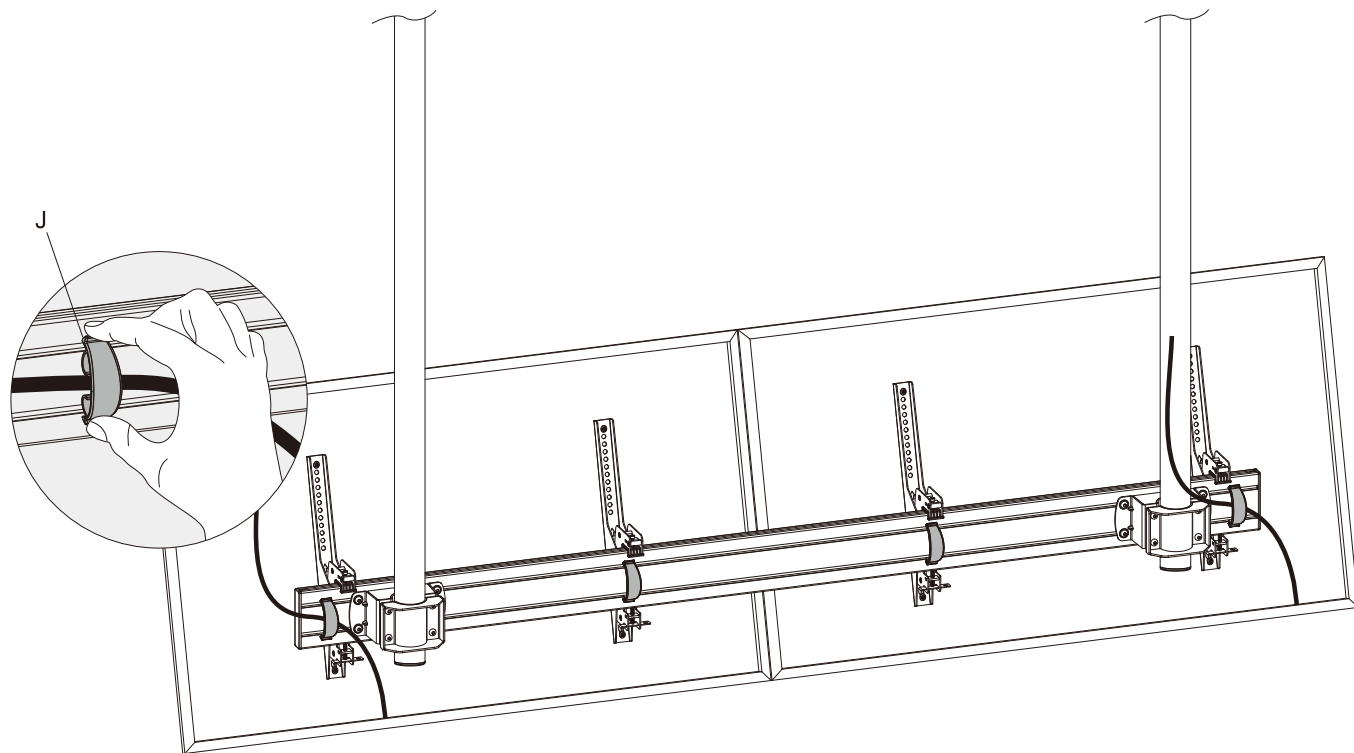

Maintenance

- Check that the bracket is secure and safe to use at regular intervals(at least every three months).

MENU BOARD CEILING MOUNT

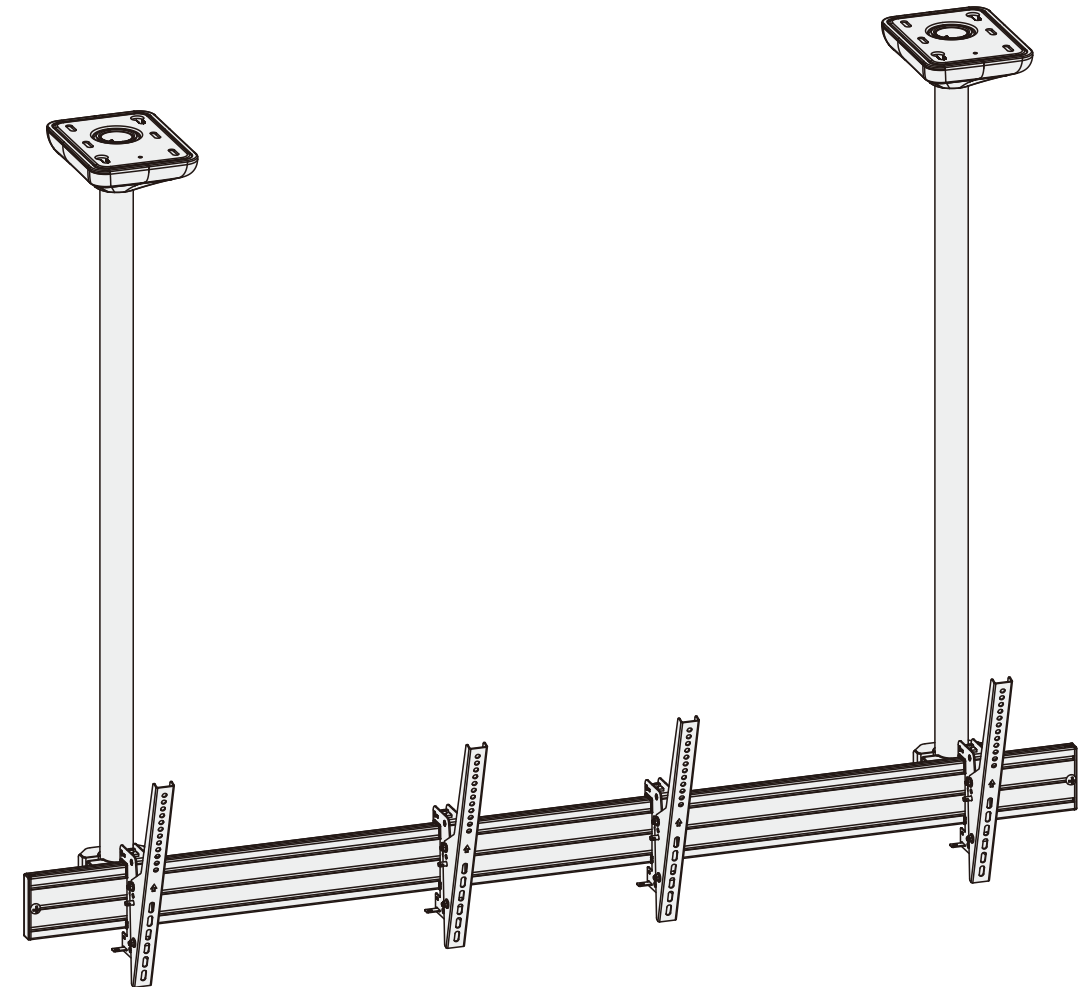

INSTALLATION MANUAL

MTLCMA22L

VESA Compatible
200x200/300x300
400x200/400x400
600x400



rated
50kgx2/110lbsx2

 **Read the entire instruction manual before you start installation and assembly. If you have any questions regarding any of the instructions or warnings, please contact your local distributor for assistance.**

 CAUTION


- Use with products heavier than the rated weights indicated may result in instability causing possible injury.
- Please closely follow the assembly instructions. Improper installation may result in damage or serious personal injury.
- Safety gear and proper tools must be used. This product should only be installed by professionals.
- This product is designed to be installed on concrete ceiling only.
- Make sure that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.
- Use the mounting screws provided and **DO NOT OVER TIGHTEN** mounting screws.
- This product contains small items that could be a choking hazard if swallowed. Keep these items away from children.
- This product is intended for indoor use only. Using this product outdoors could lead to product failure and personal injury.

Required for Installation




Component Checklist


IMPORTANT: Ensure that you have received all parts according to the component checklist prior to installation. If any parts are missing or faulty, contact your place of purchase for a replacement.

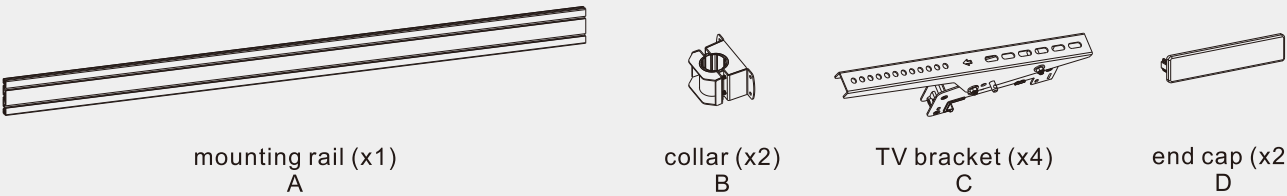


Component Checklist

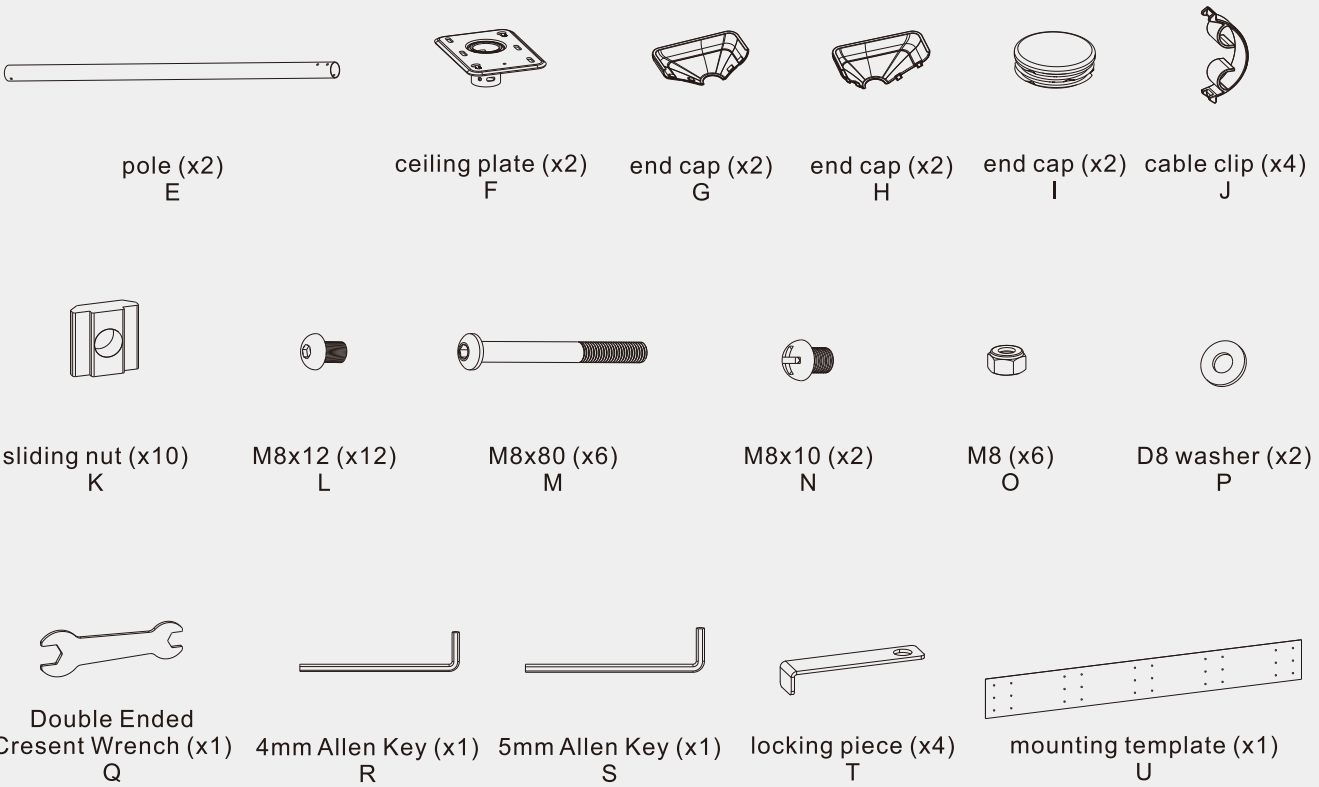


Package M x2

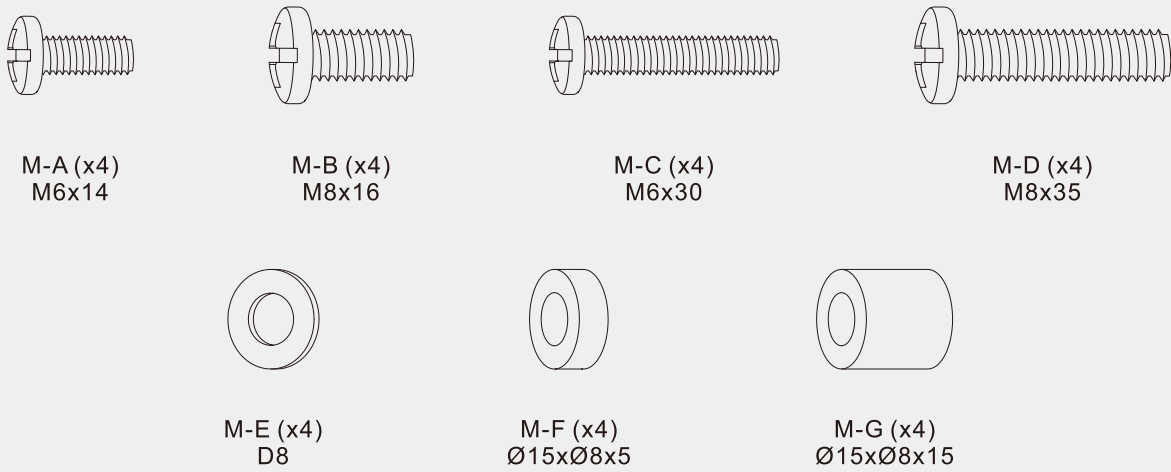




Package W x2

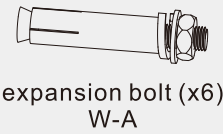


1. Assemble the Pole

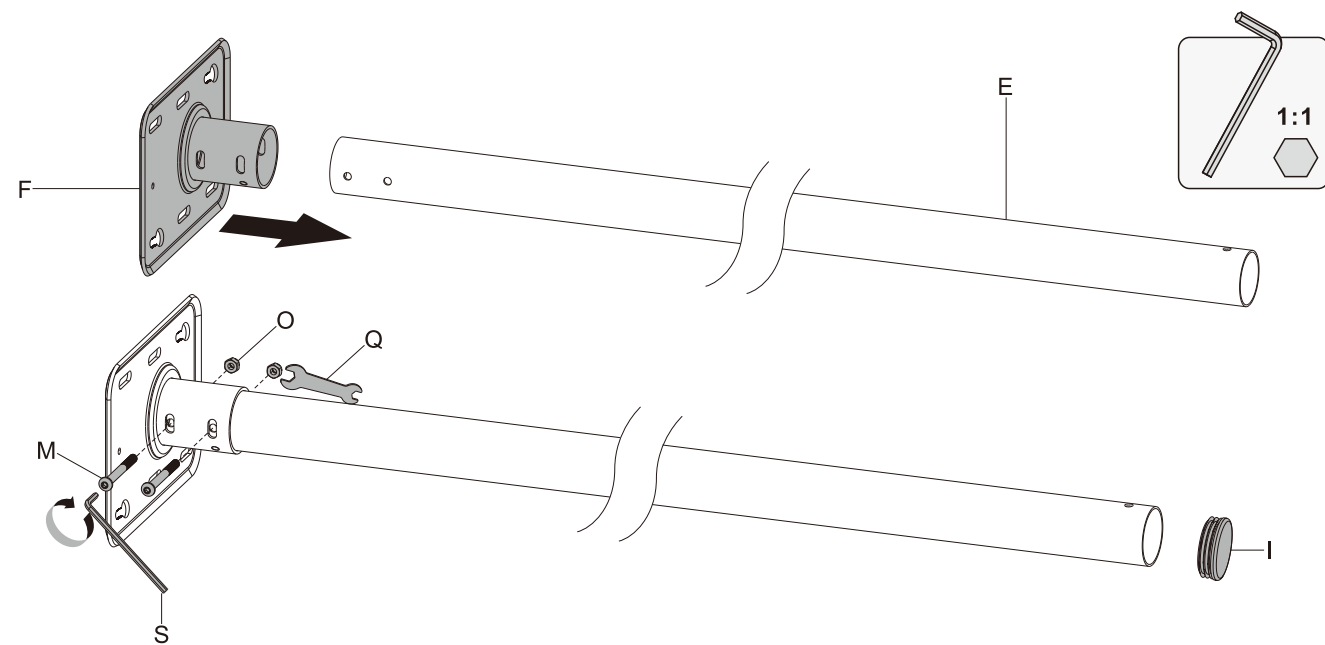


2. Attach Ceiling Plate to the Concrete Ceiling

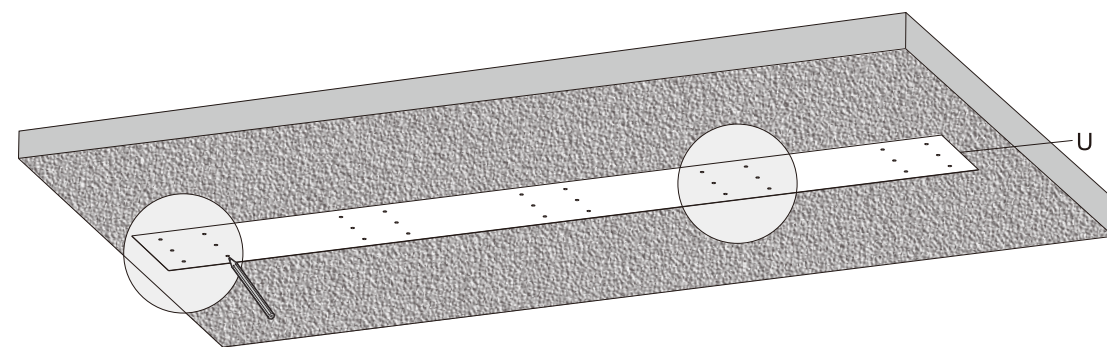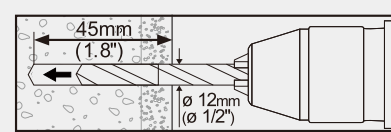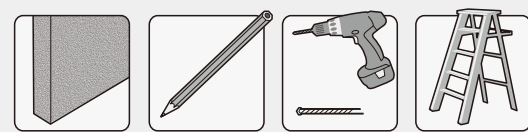



Mark the exact location of mounting holes

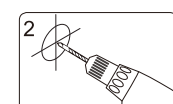





Drill pilot holes

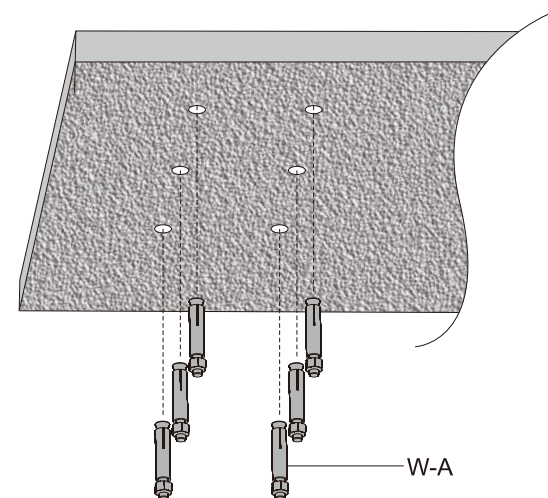

Insert the expansion bolts into the hole as shown. Once inserted, remove the washers and hex nuts.

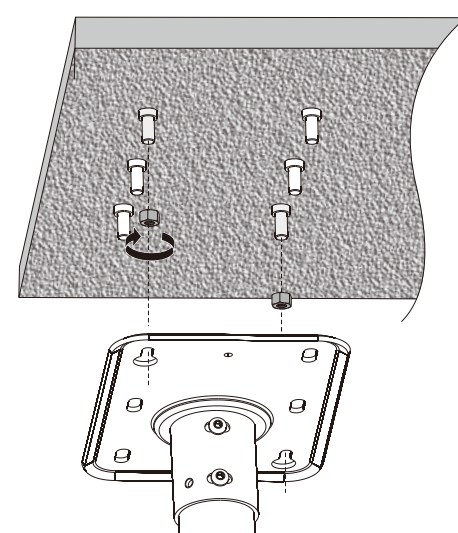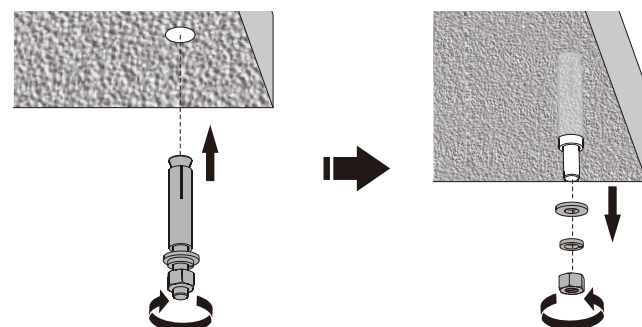


Attach the hex nuts to the expansion bolts corresponding to the keyhole pattern found on the ceiling plate. Do not overtighten and leave a small gap so the ceiling plate will slide into the keyhole slots.

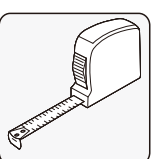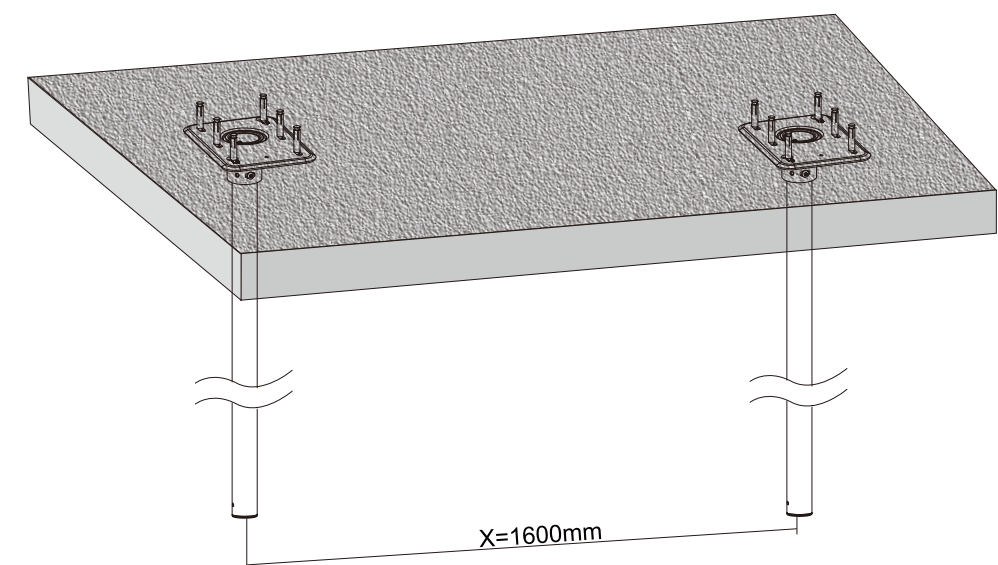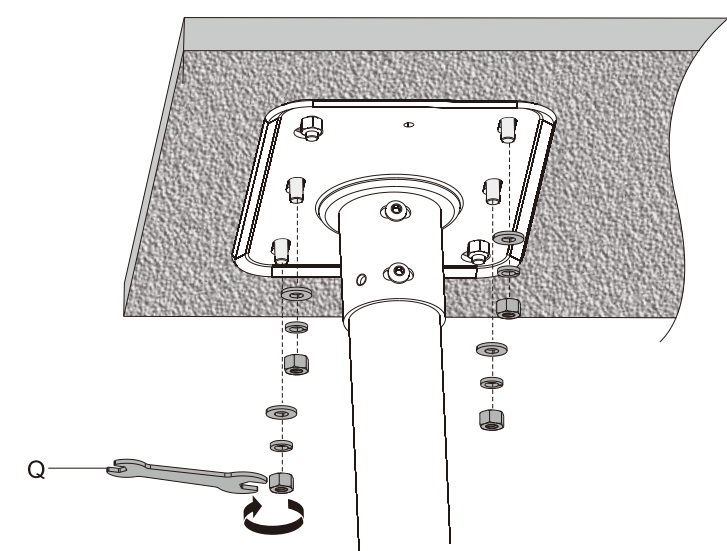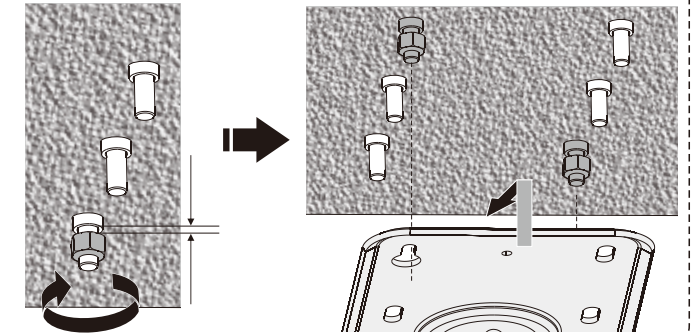


WARNING

Installers must verify that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.


3. Attach Collar to the Mounting Rail

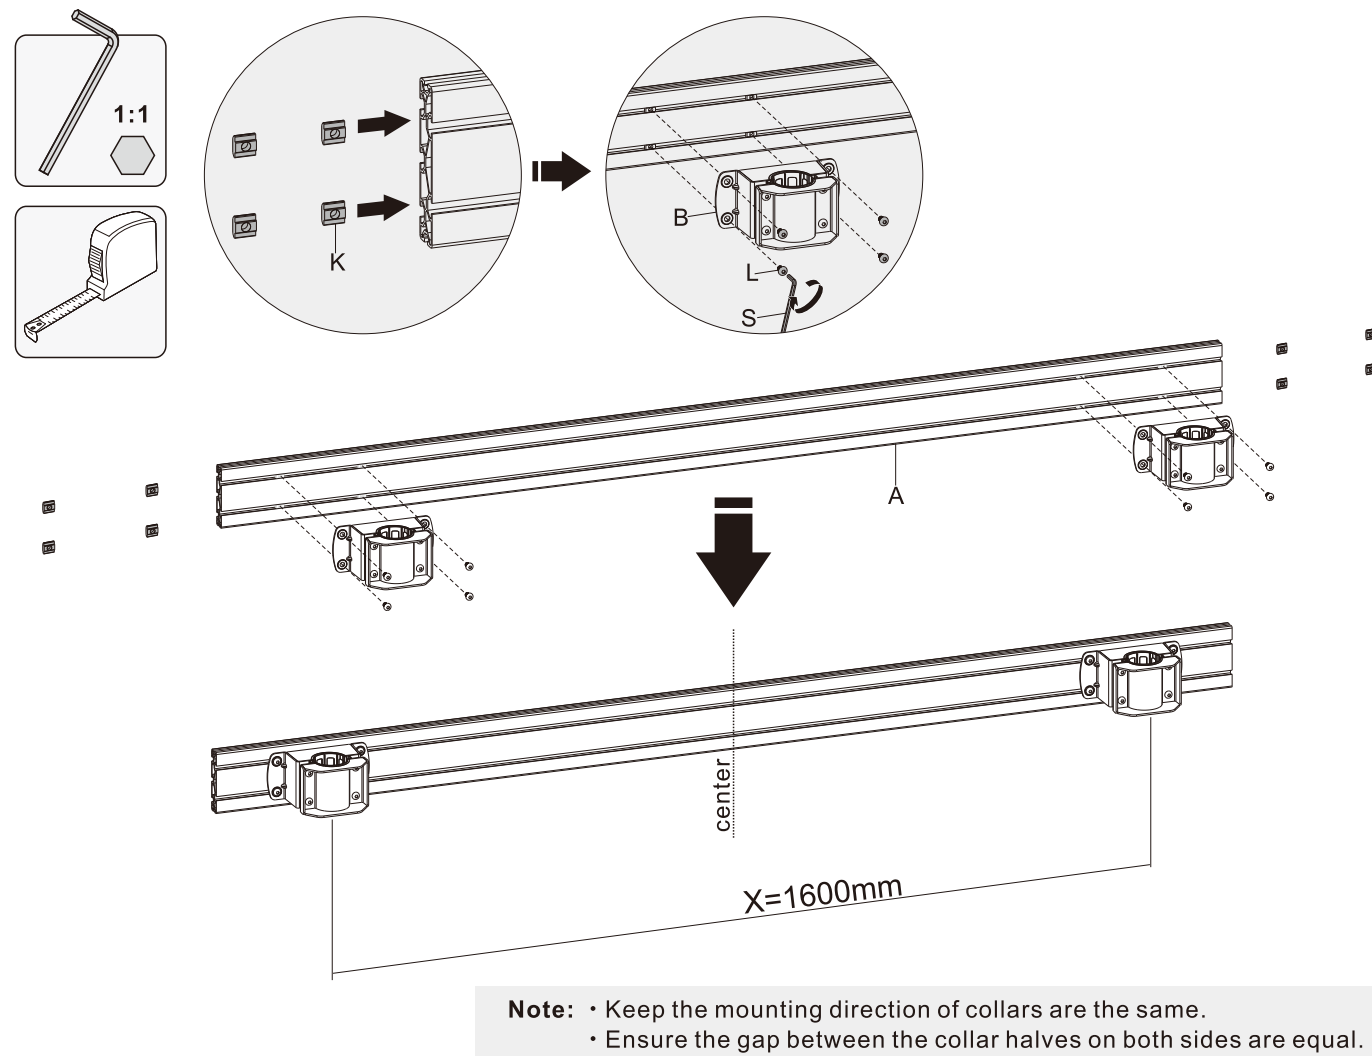


4. Install the End Cap

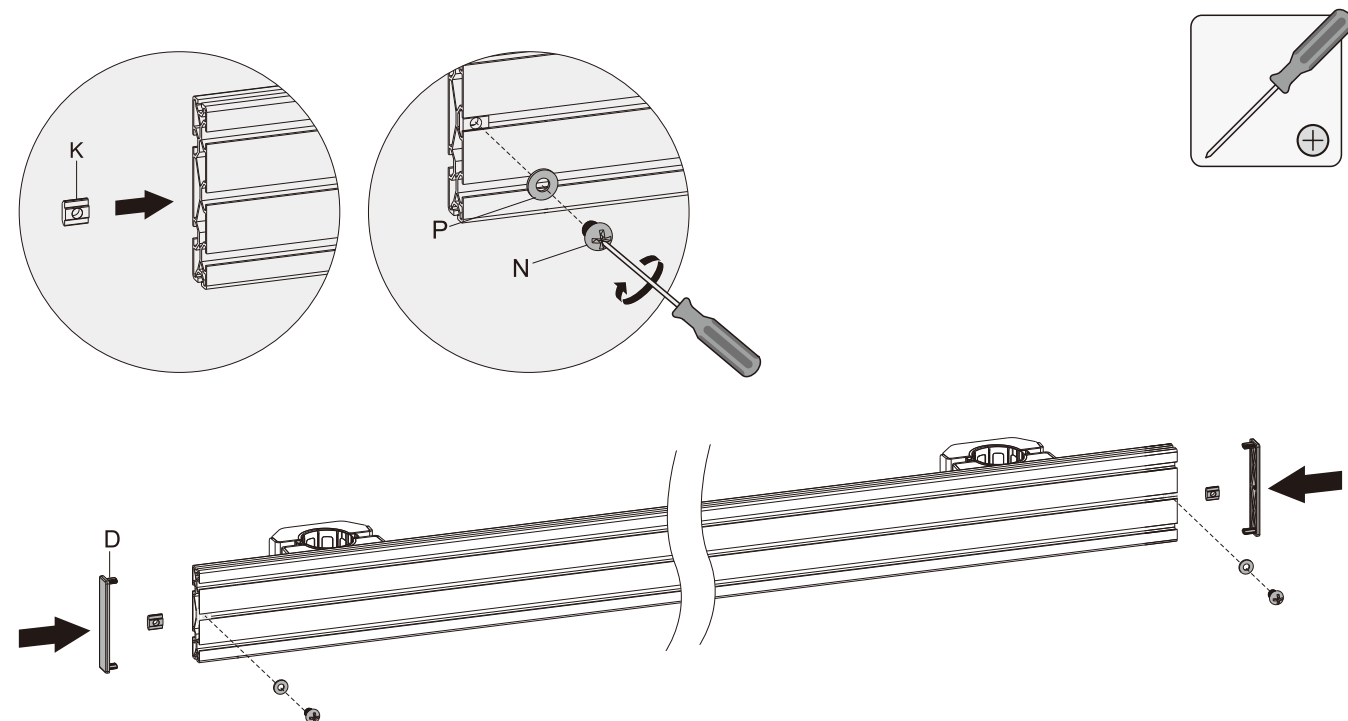


5. Attach Mounting Rail to Pole

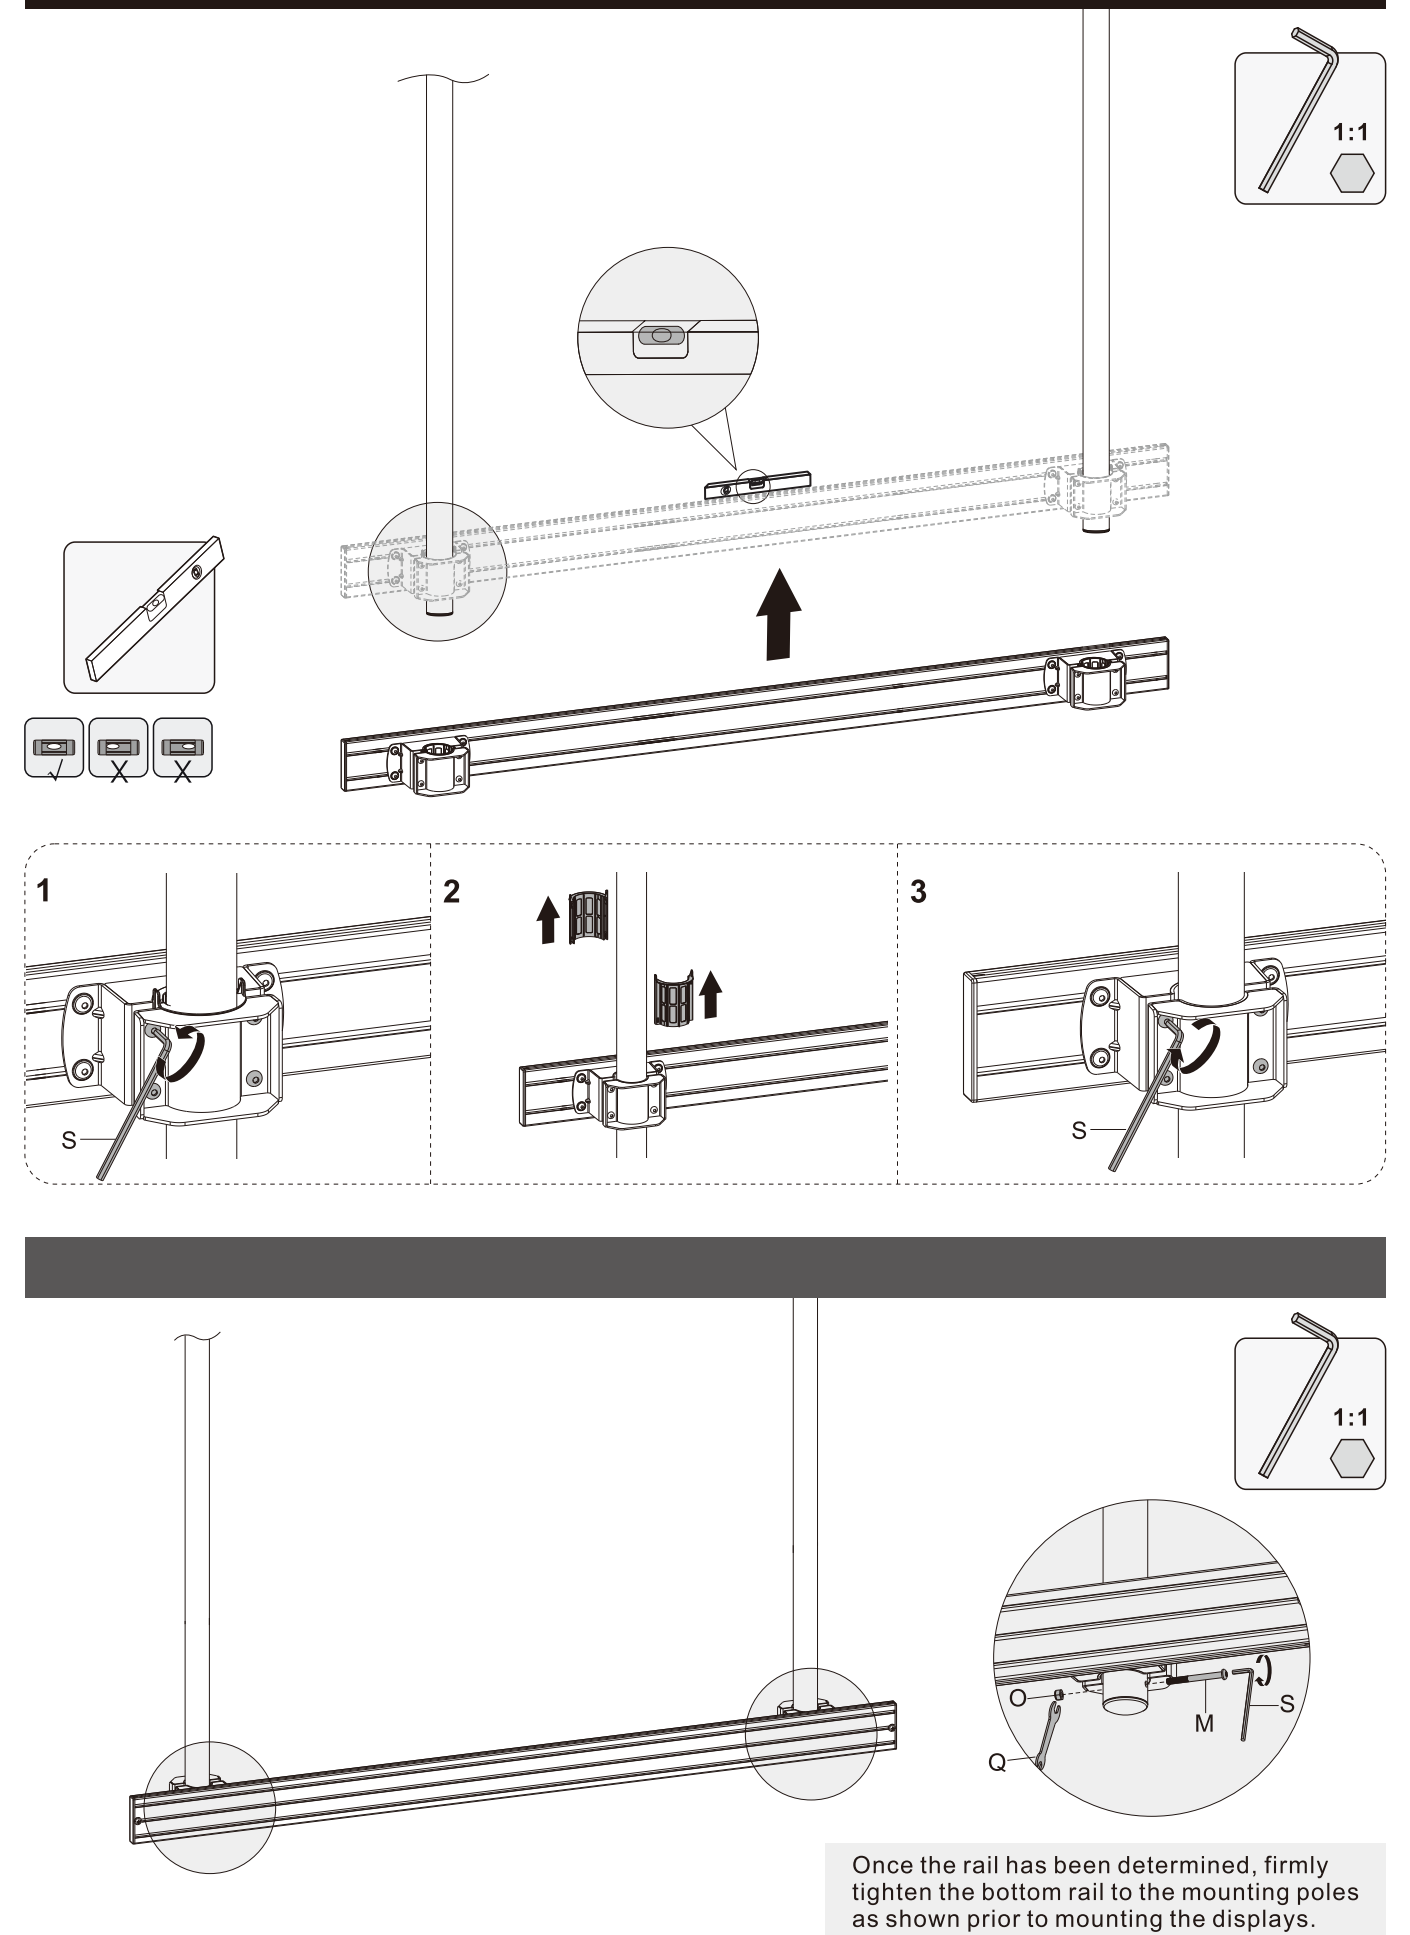

6. Install the Plastic Cover

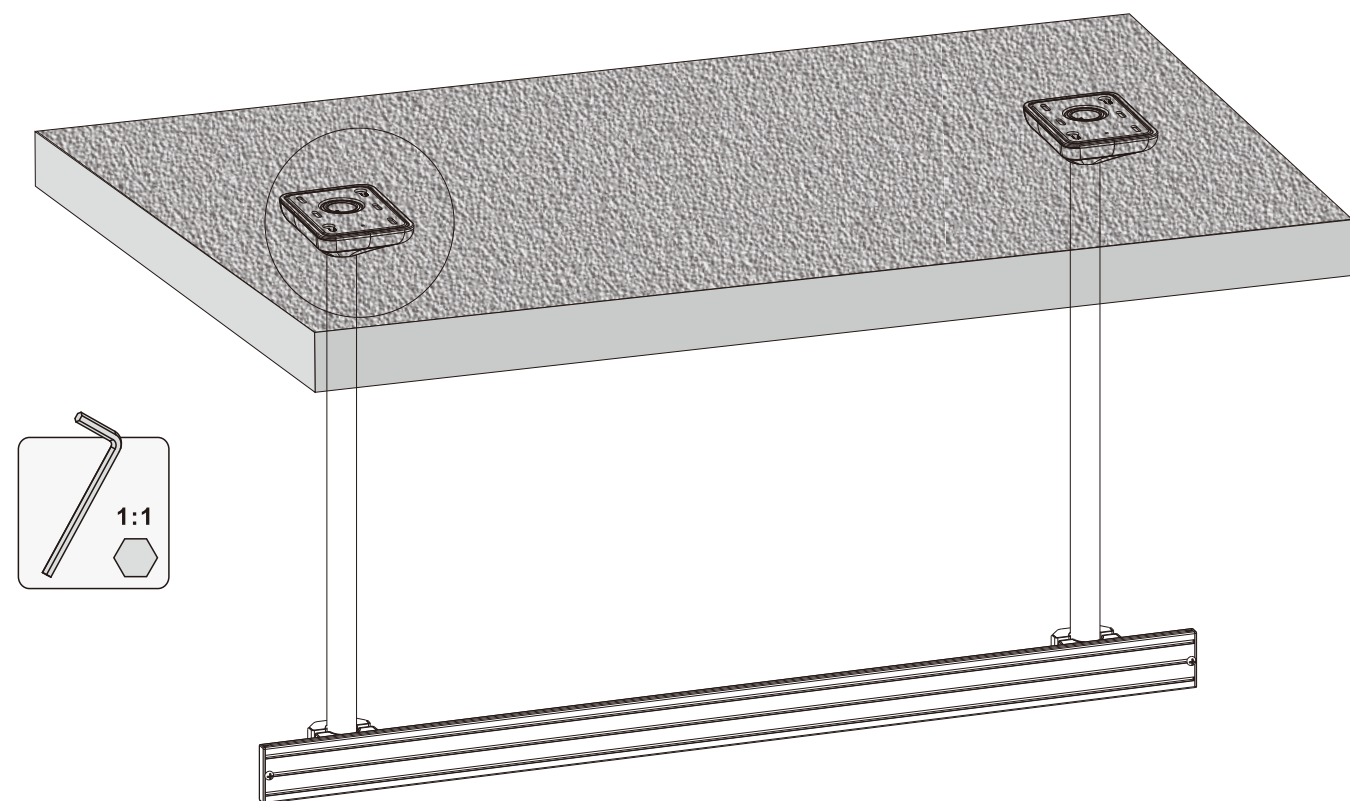



7. Tilt Adjustment

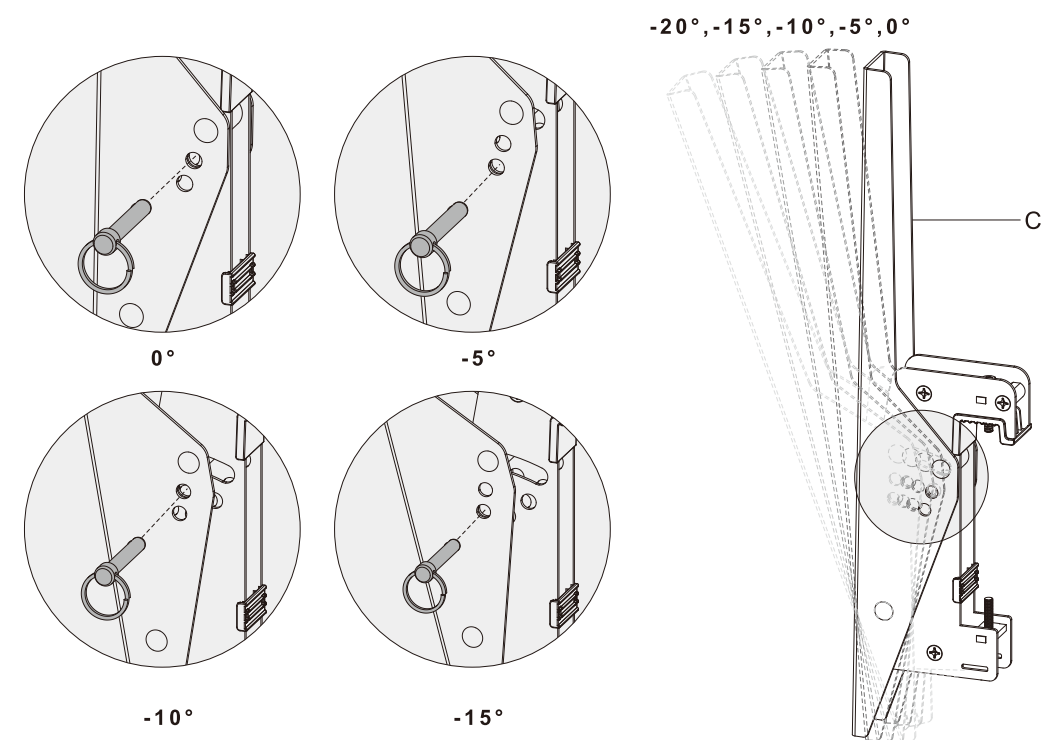


-20° is the natural angle and the safety pin is unnecessary.

8. Attach TV Bracket


Position the adapter brackets as close as possible to the center of the display.

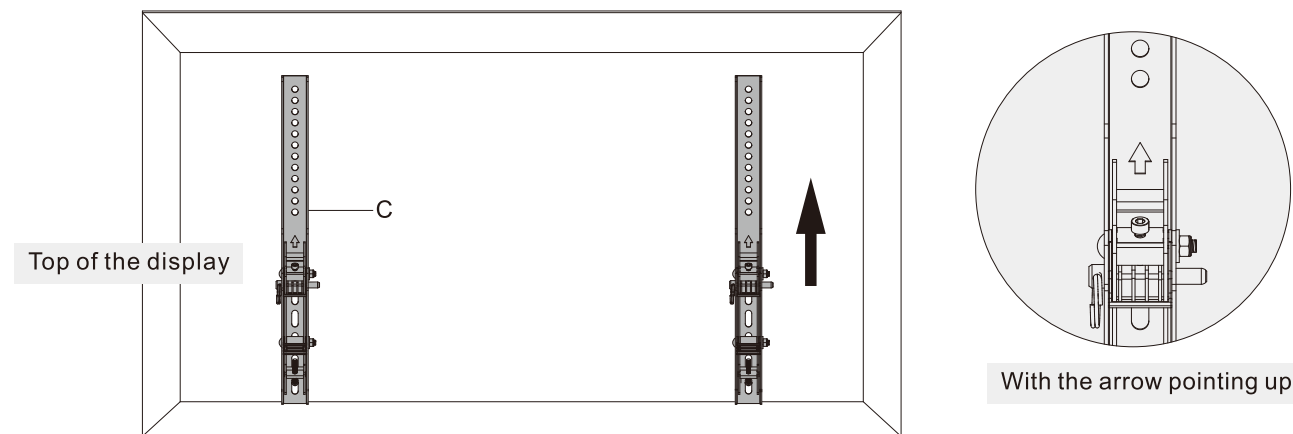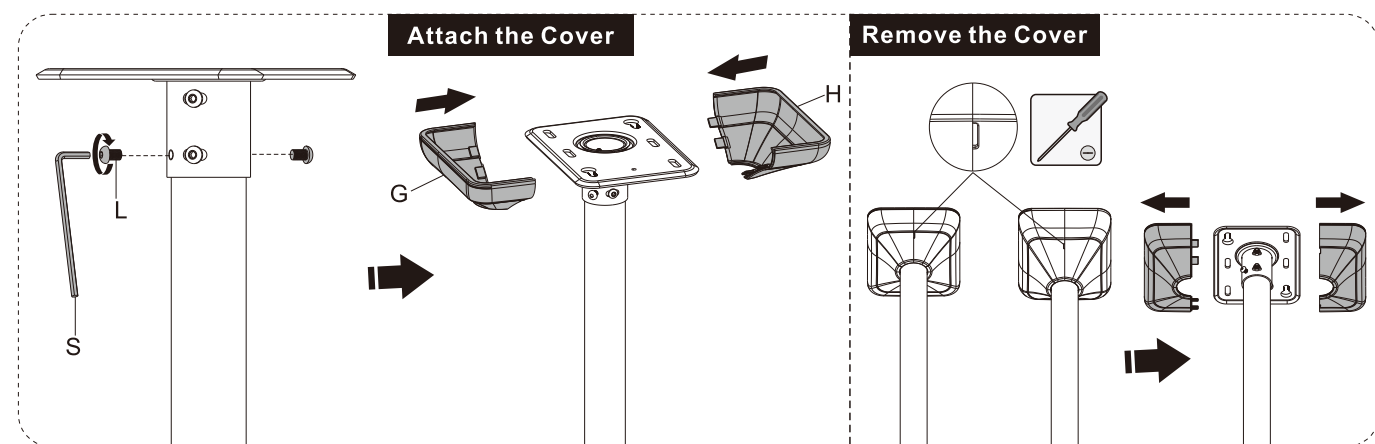

8a. Attach TV Bracket to Flat Back Screen

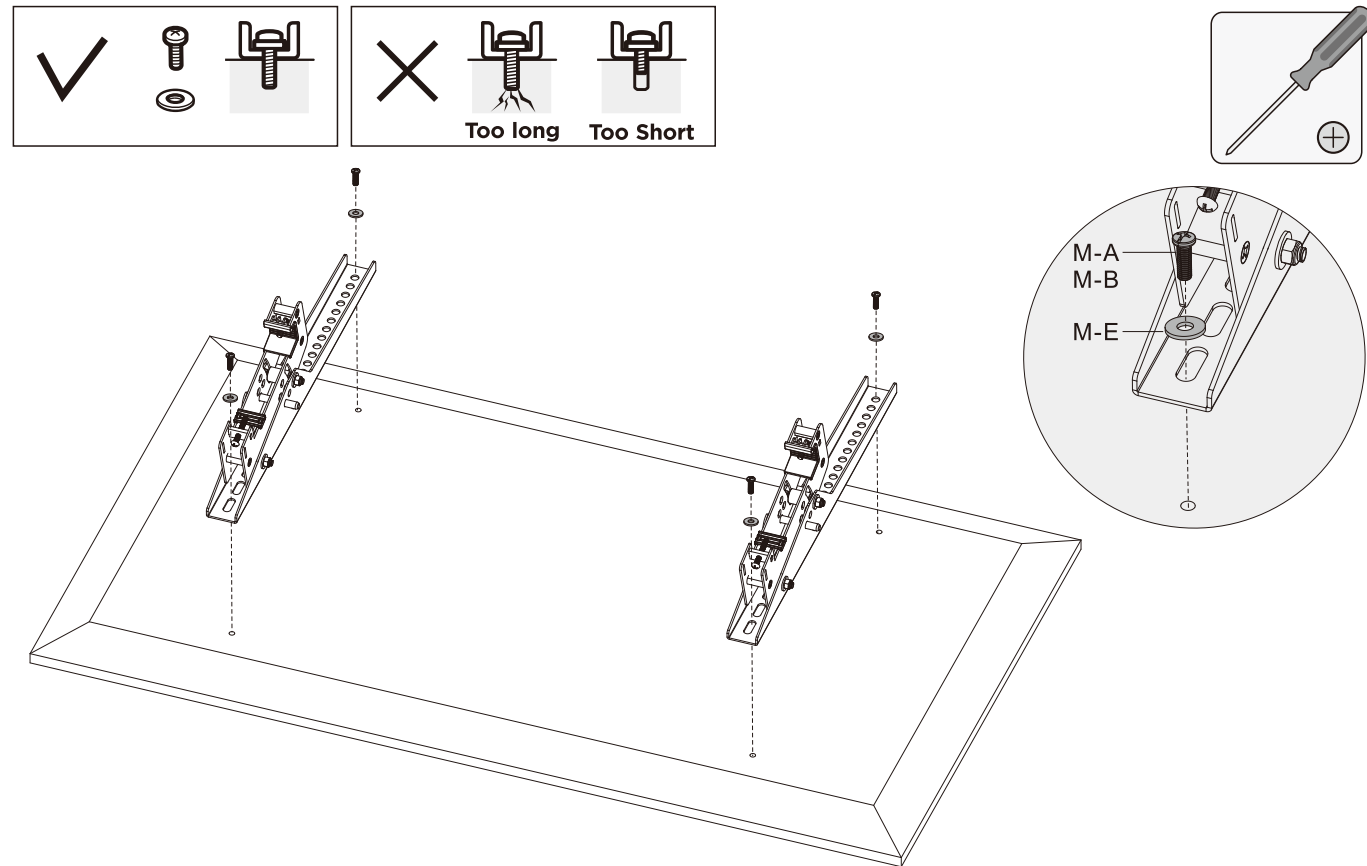


8b. Attach TV Bracket to Irregular Back Screen

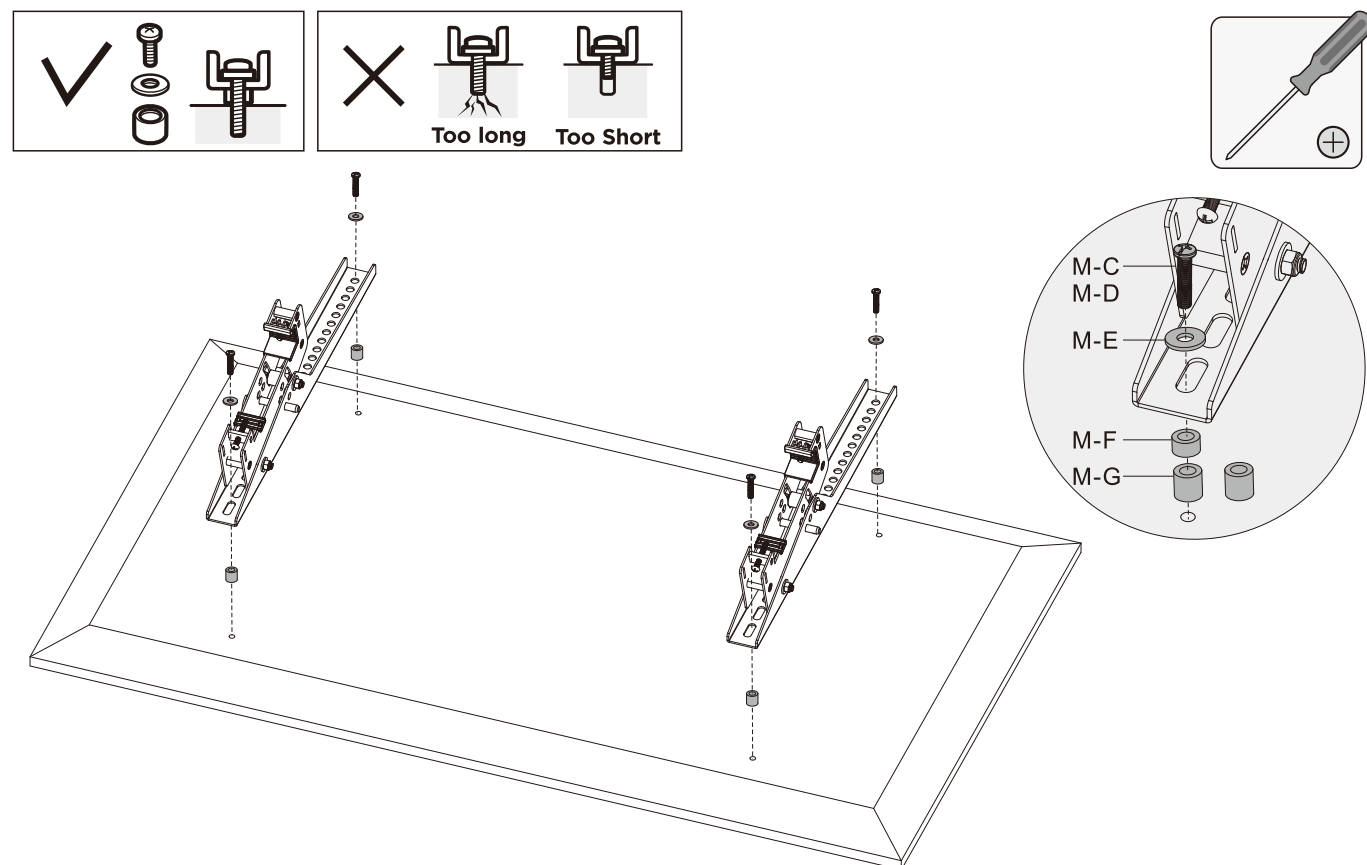

Note: Choose the appropriate screws, washers and spacers (if necessary) according to the type of screen.


⚠ **Do not overtighten screws.**

9. Hang the Screen


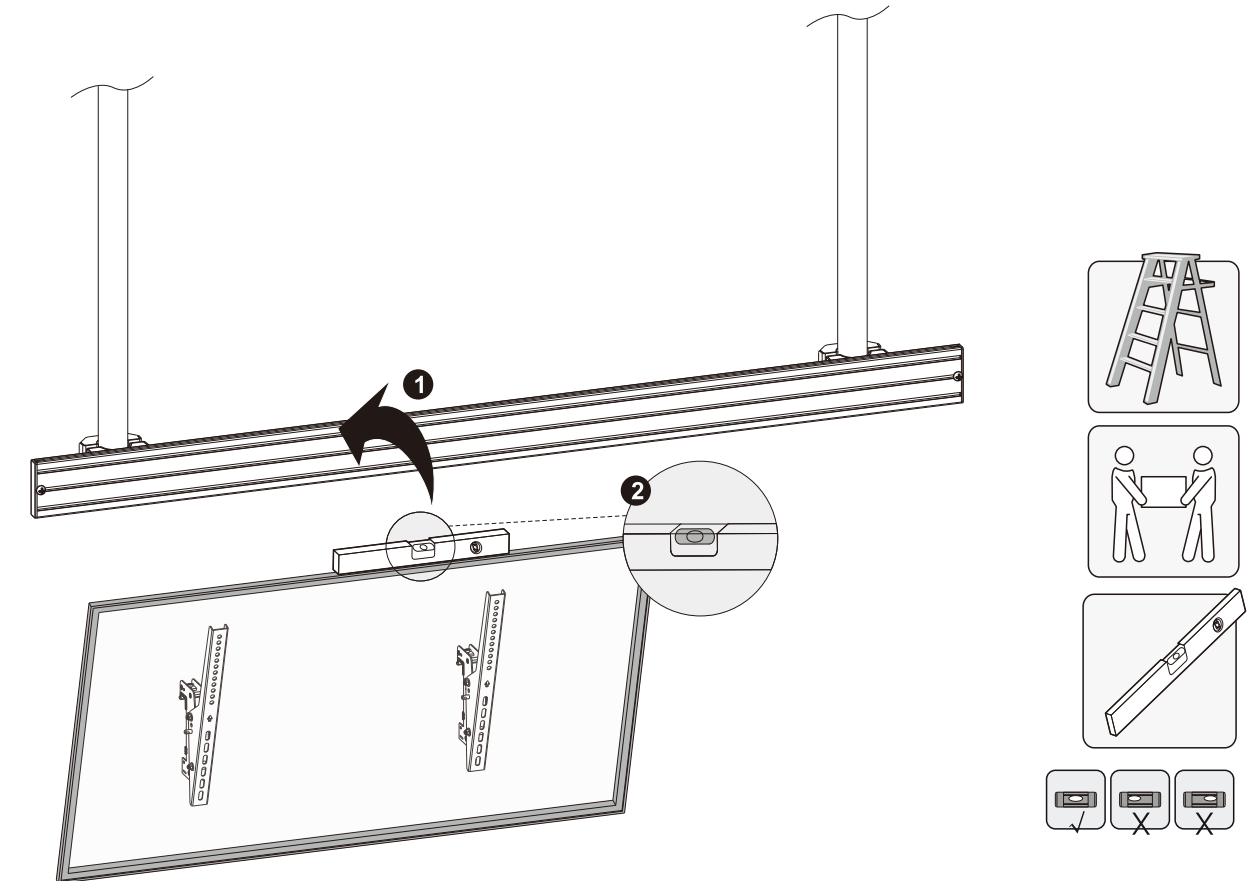


10. Secure with Padlock


Note: Leave at least 1mm gap between screens.

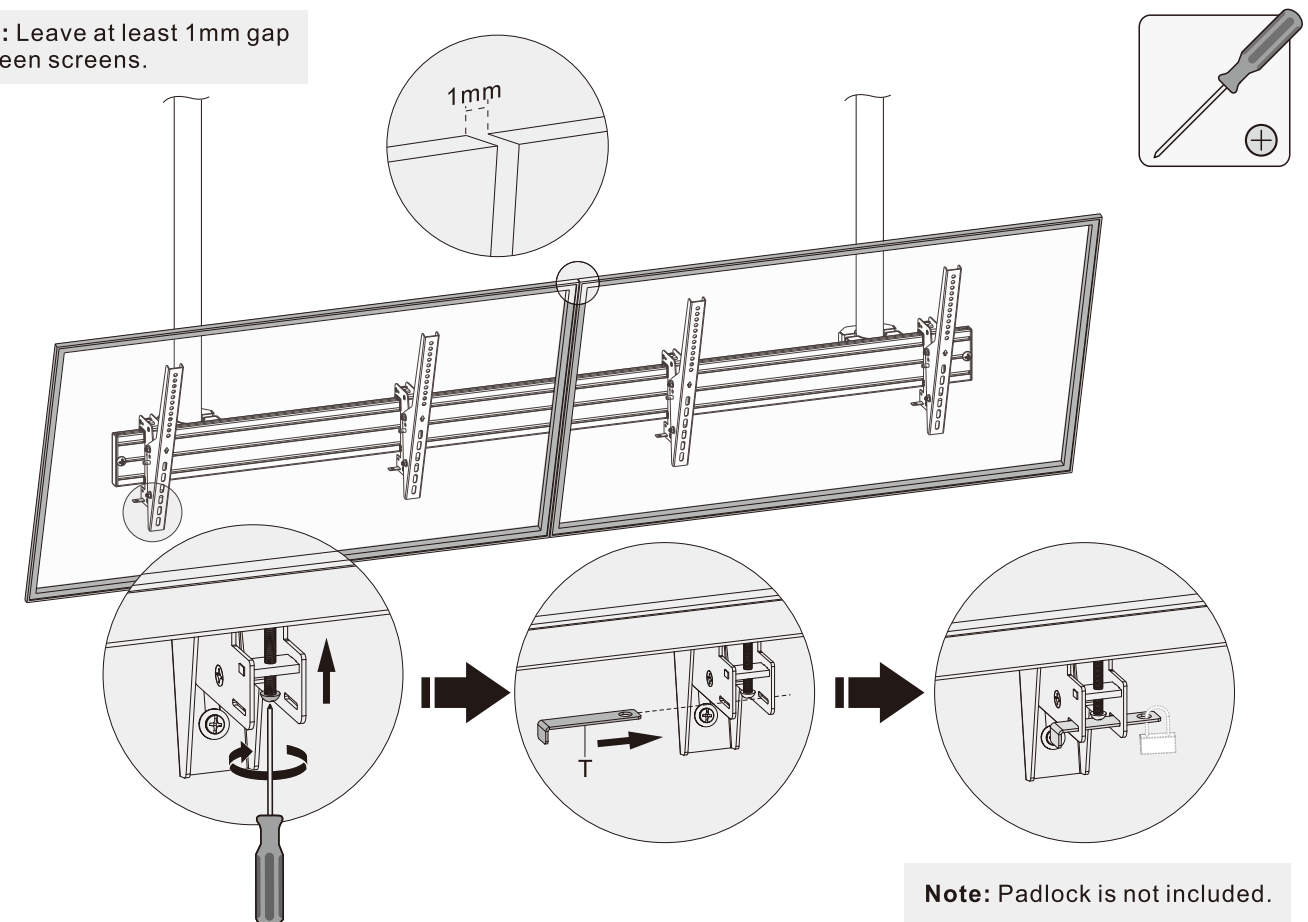

11. Level Adjustment

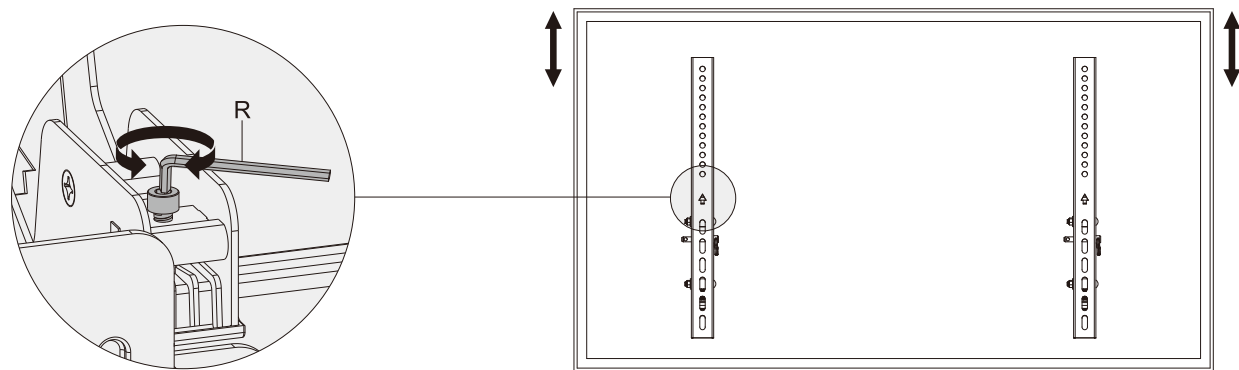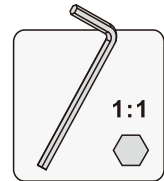


12. Cable Management

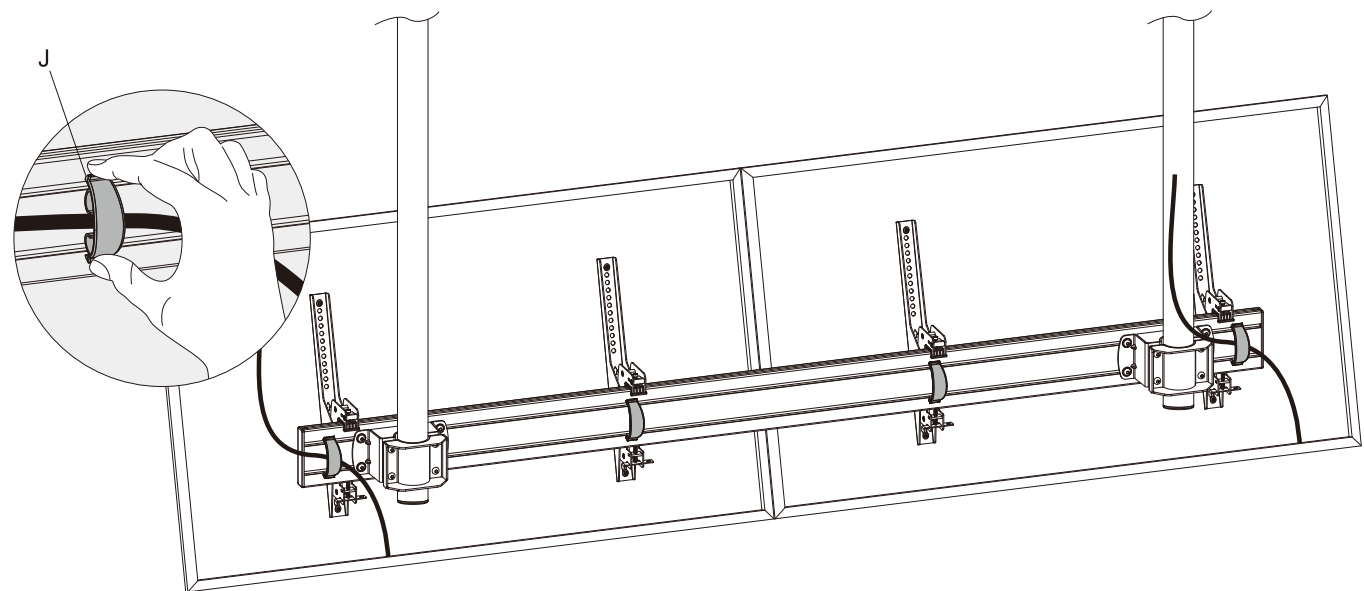

Maintenance

- Check that the bracket is secure and safe to use at regular intervals(at least every three months).

MENU BOARD CEILING MOUNT

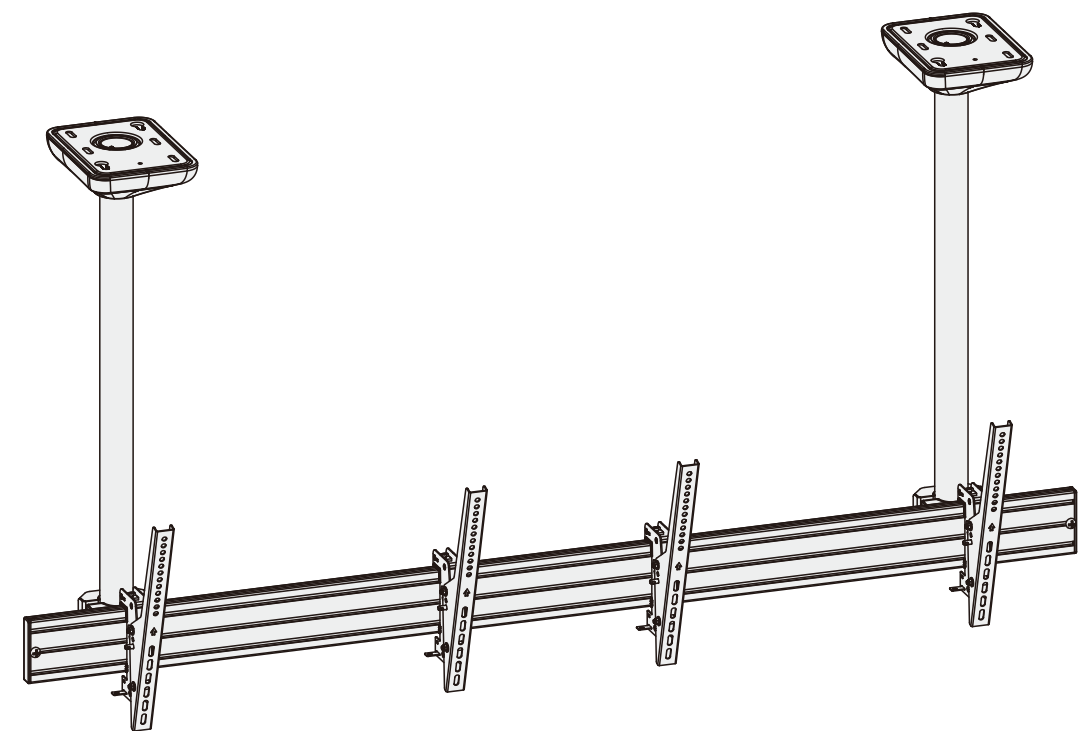

INSTALLATION MANUAL

MTLCMA22S

VESA Compatible
200x200/300x300
400x200/400x400
600x400



rated
50kgx2/110lbsx2

 **Read the entire instruction manual before you start installation and assembly. If you have any questions regarding any of the instructions or warnings, please contact your local distributor for assistance.**

CAUTION


- Use with products heavier than the rated weights indicated may result in instability causing possible injury.
- Please closely follow the assembly instructions. Improper installation may result in damage or serious personal injury.
- Safety gear and proper tools must be used. This product should only be installed by professionals.
- This product is designed to be installed on concrete ceiling only.
- Make sure that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.
- Use the mounting screws provided and **DO NOT OVER TIGHTEN** mounting screws.
- This product contains small items that could be a choking hazard if swallowed. Keep these items away from children.
- This product is intended for indoor use only. Using this product outdoors could lead to product failure and personal injury.

Required for Installation




Component Checklist


IMPORTANT: Ensure that you have received all parts according to the component checklist prior to installation. If any parts are missing or faulty, contact your place of purchase for a replacement.

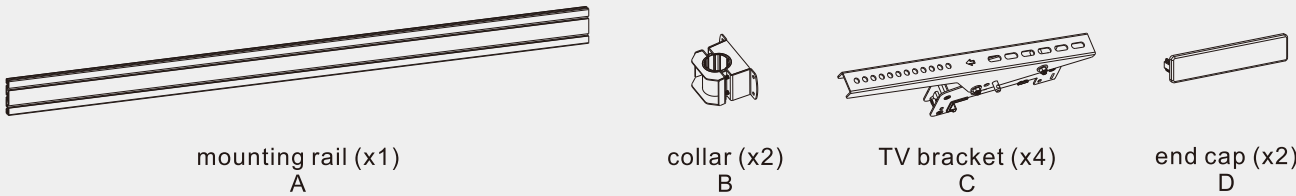


Component Checklist

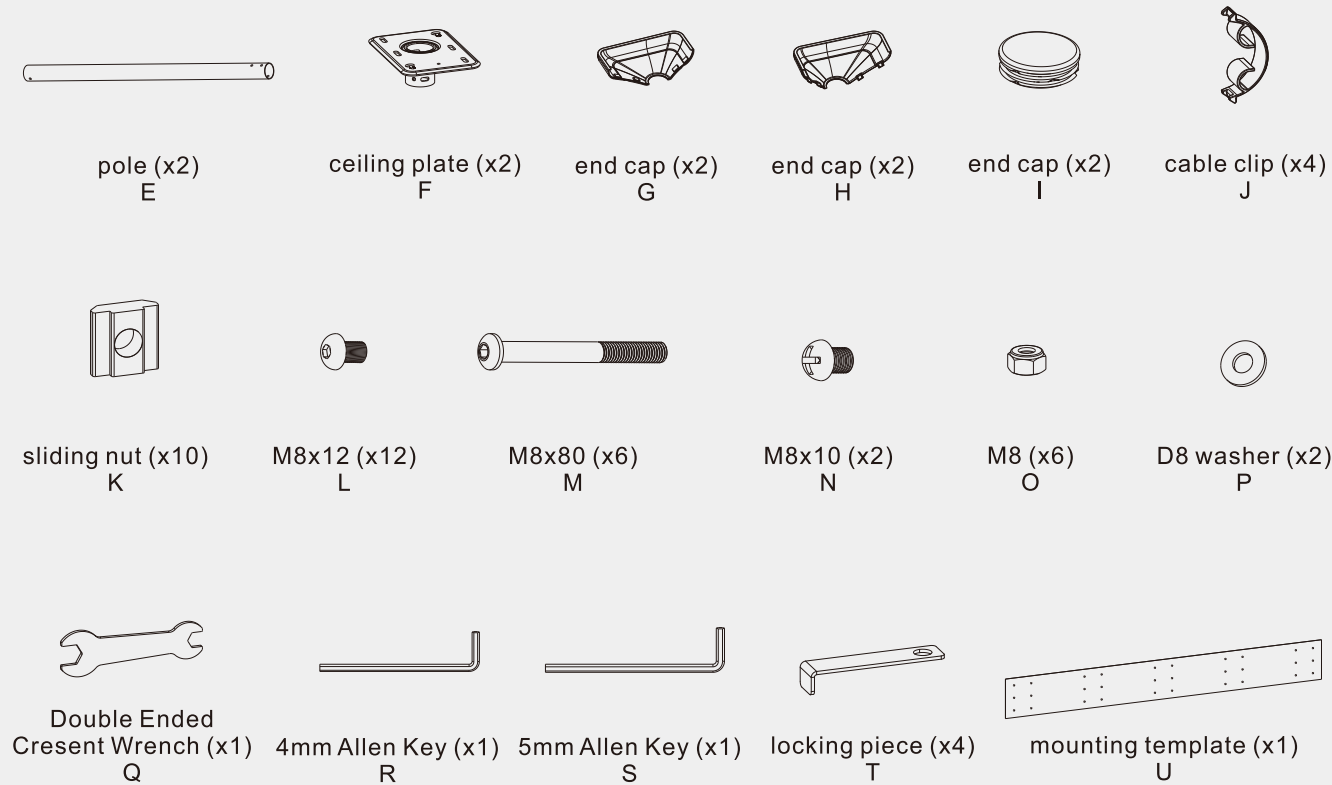


Package M x2

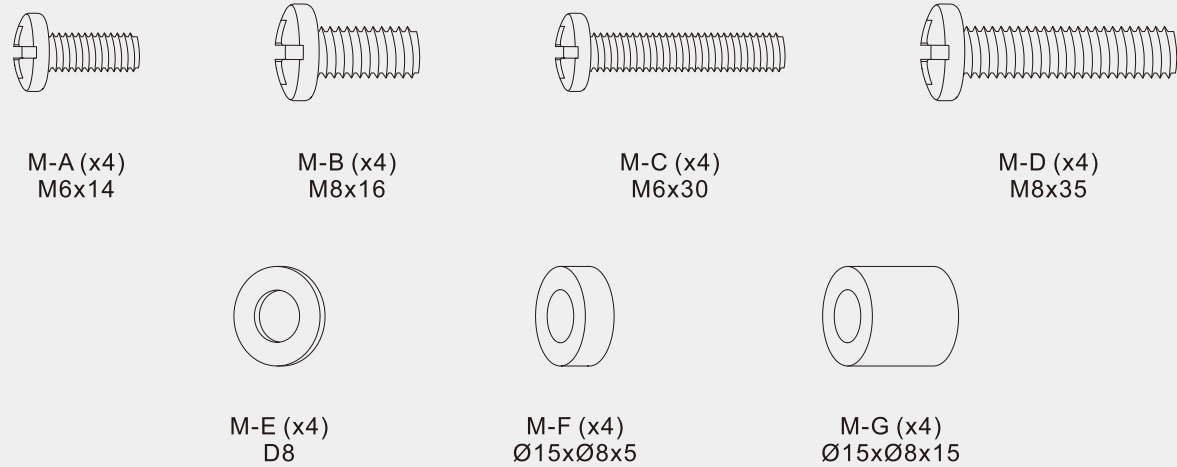




Package W x2

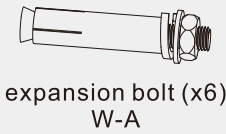


1. Assemble the Pole

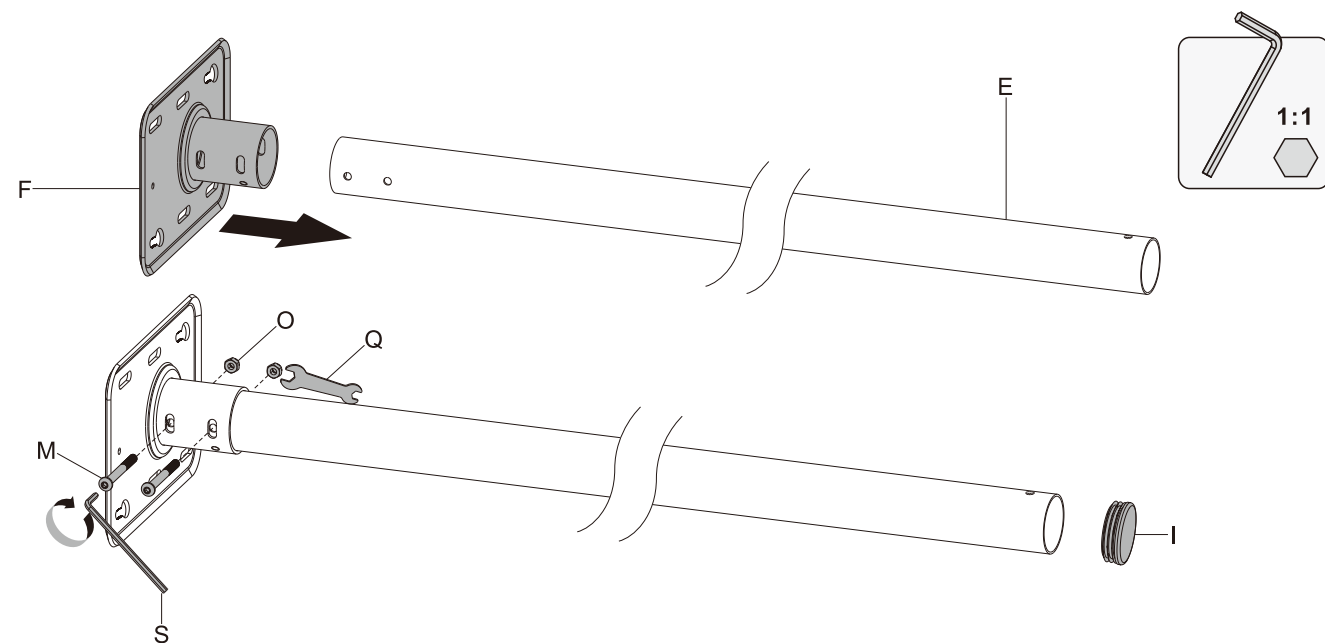


2. Attach Ceiling Plate to the Concrete Ceiling

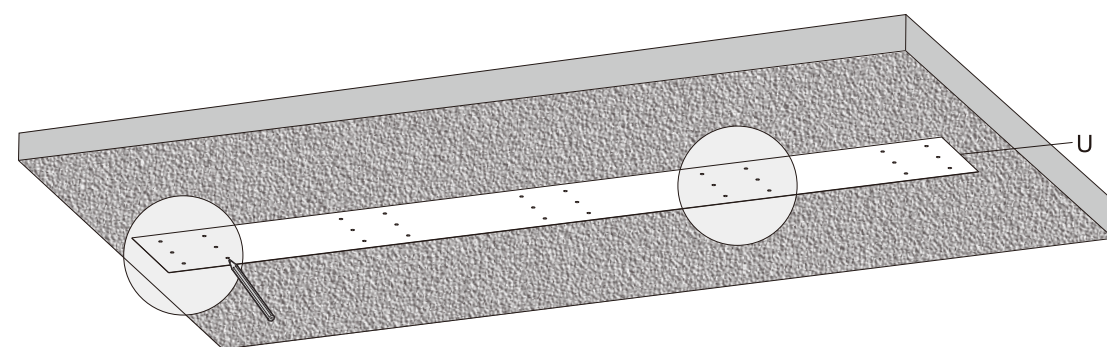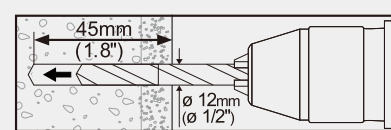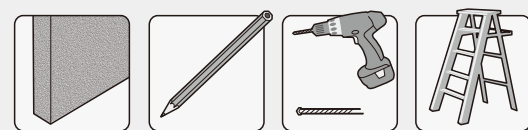



Mark the exact location of mounting holes

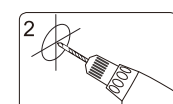





Drill pilot holes

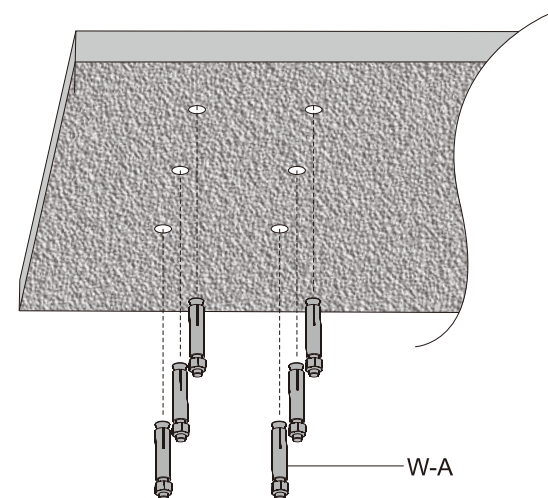

Insert the expansion bolts into the hole as shown. Once inserted, remove the washers and hex nuts.

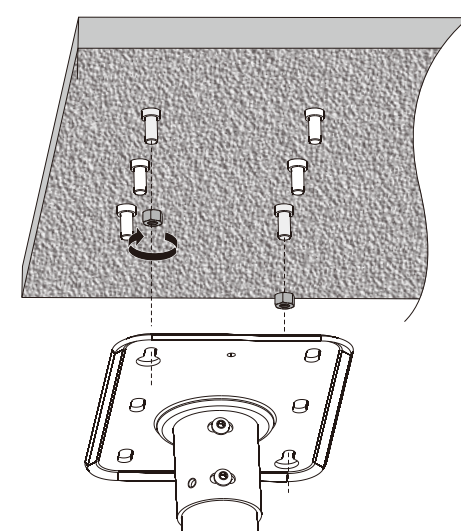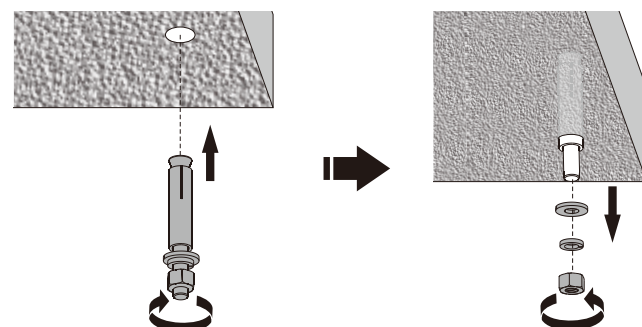


Attach the hex nuts to the expansion bolts corresponding to the keyhole pattern found on the ceiling plate. Do not overtighten and leave a small gap so the ceiling plate will slide into the keyhole slots.

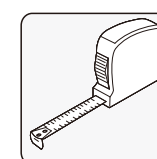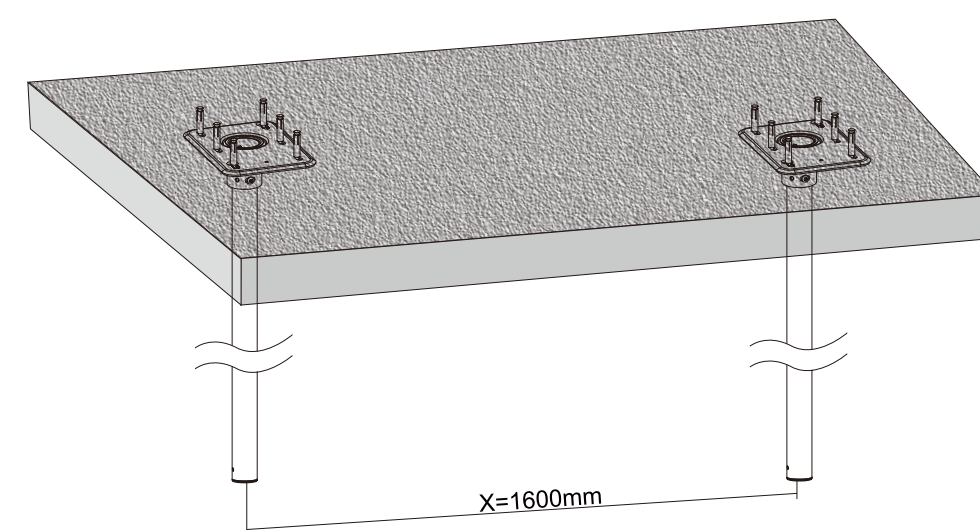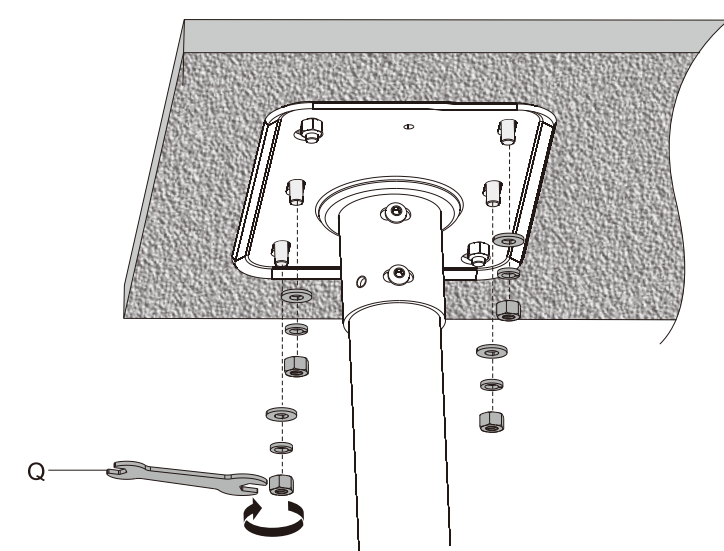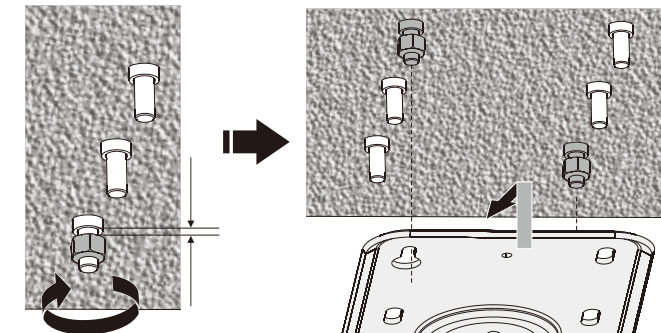


! WARNING

Installers must verify that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.


3. Attach Collar to the Mounting Rail

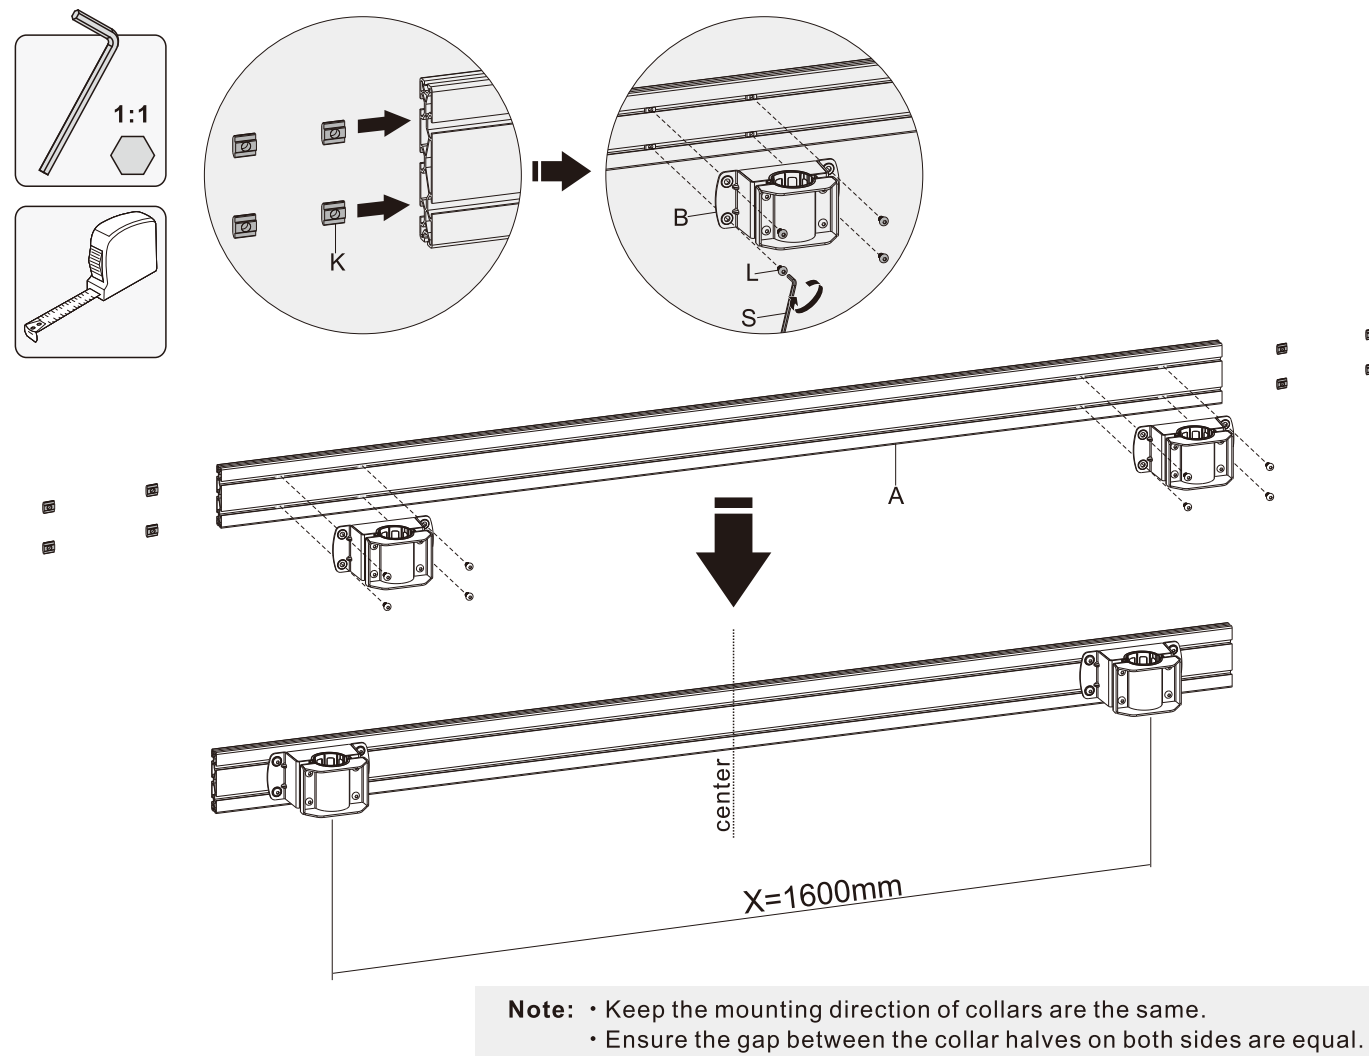



4. Install the End Cap

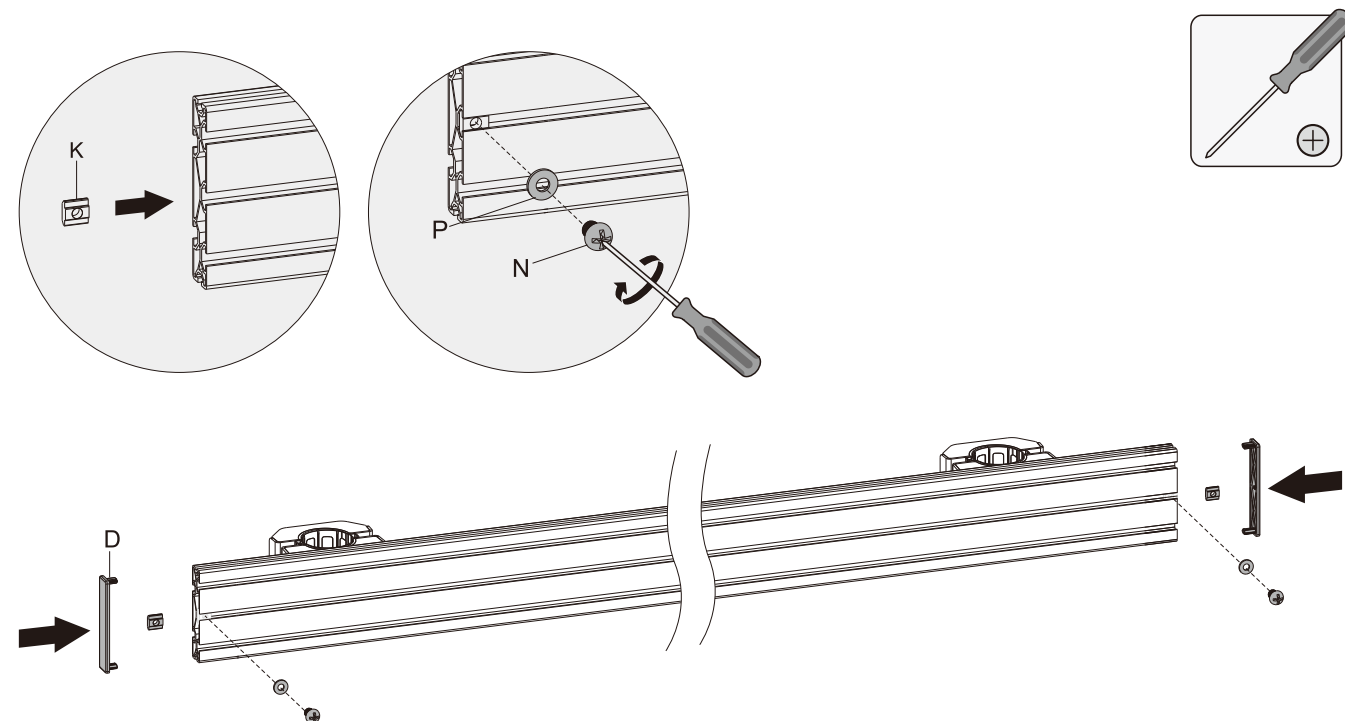


5. Attach Mounting Rail to Pole

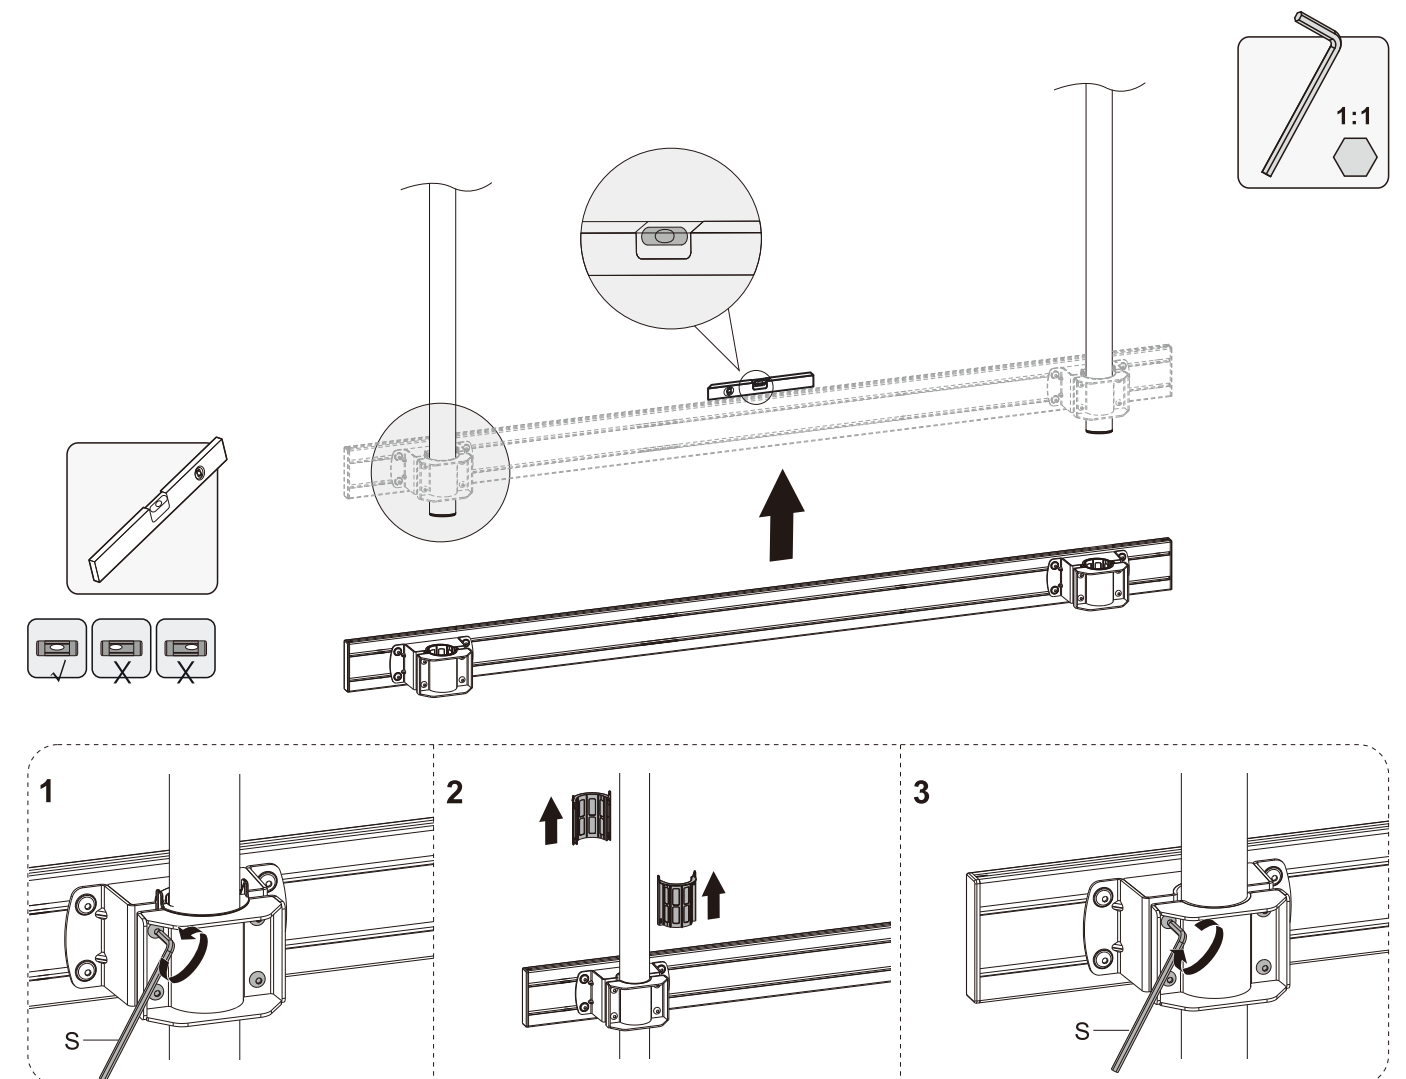

6. Install the Plastic Cover

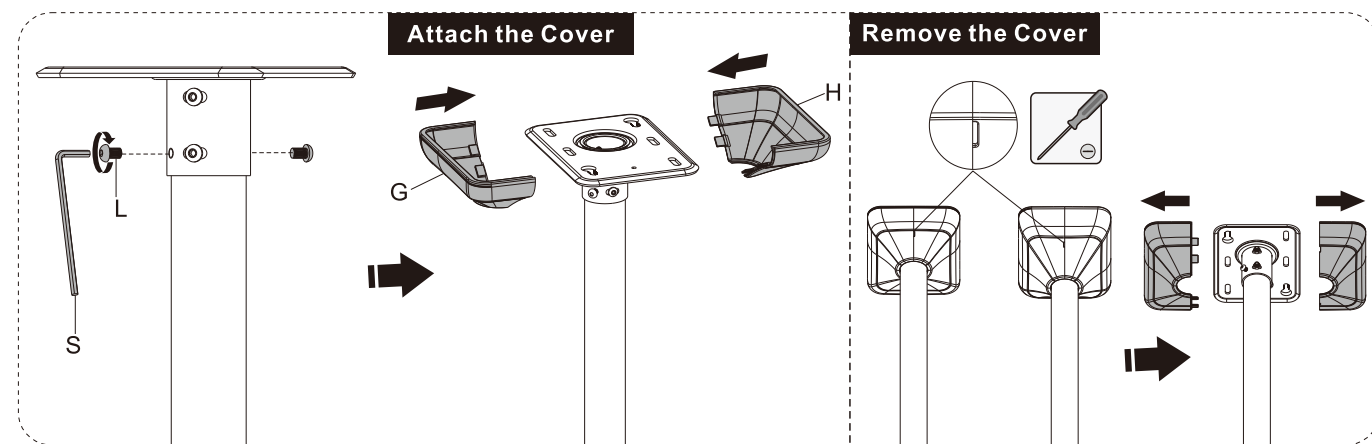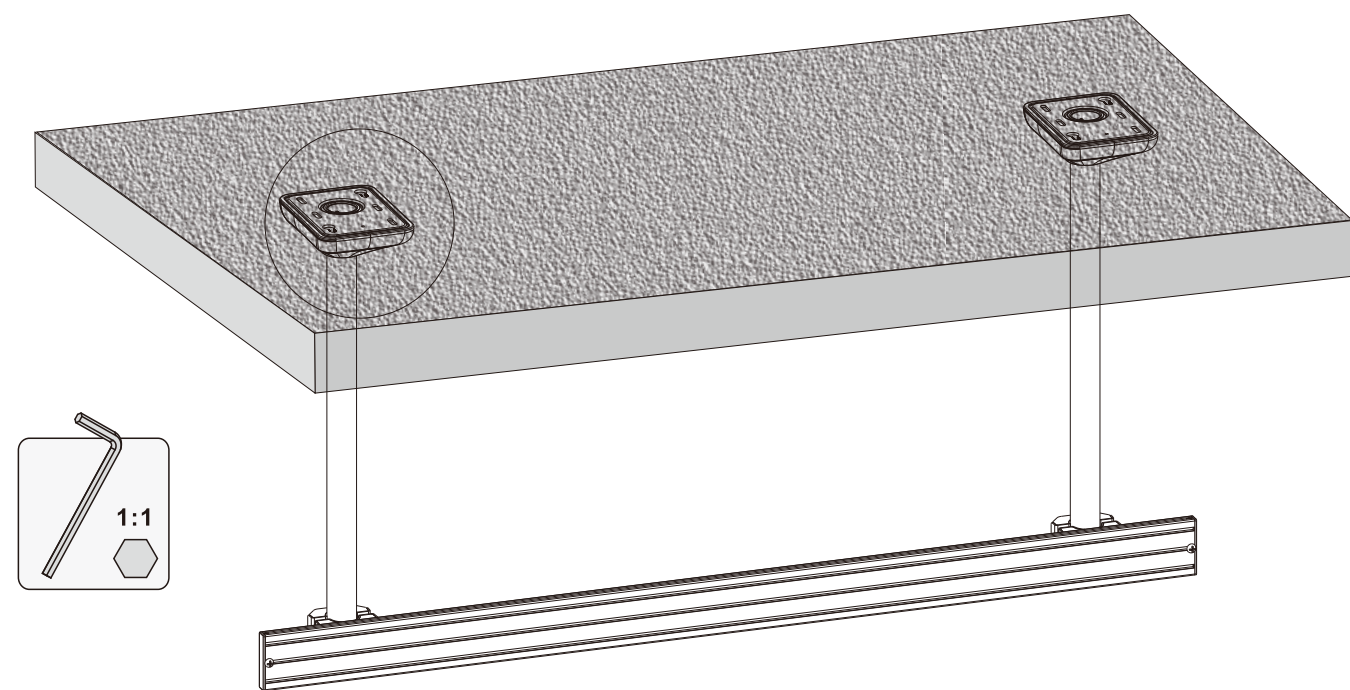


7. Tilt Adjustment

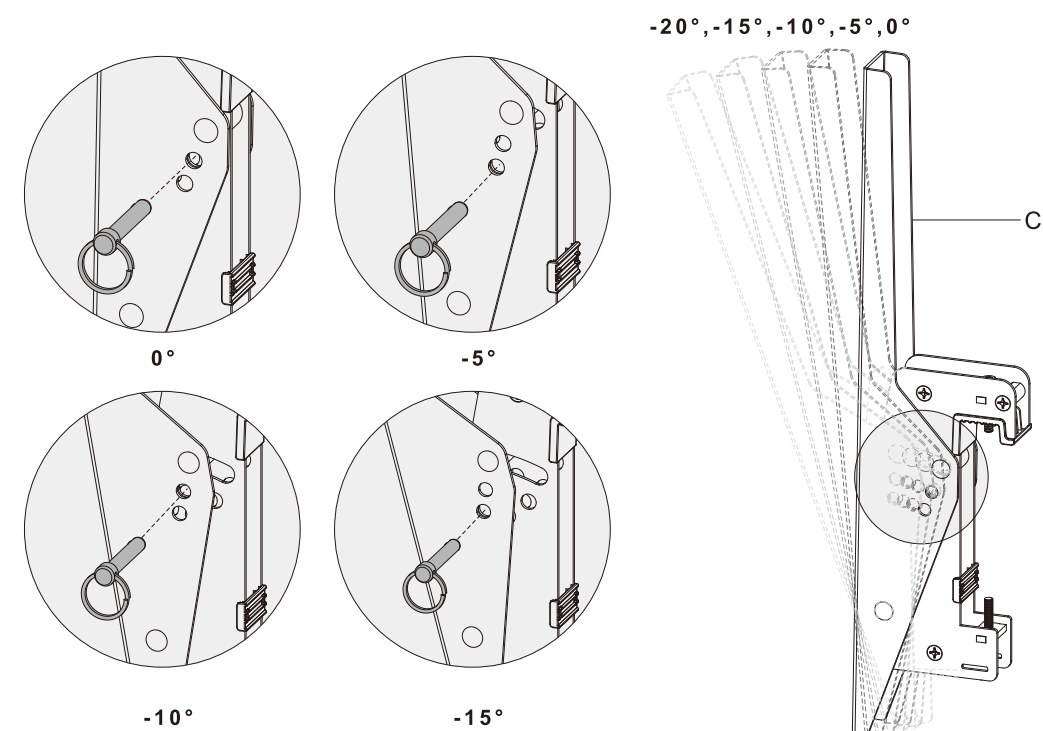


-20° is the natural angle and the safety pin is unnecessary.

8. Attach TV Bracket


Position the adapter brackets as close as possible to the center of the display.

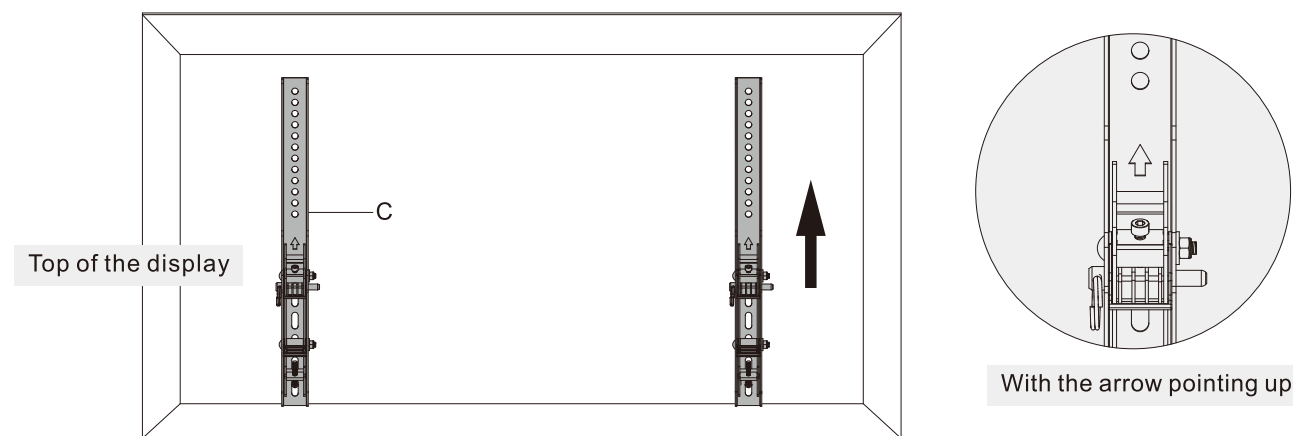

8a. Attach TV Bracket to Flat Back Screen

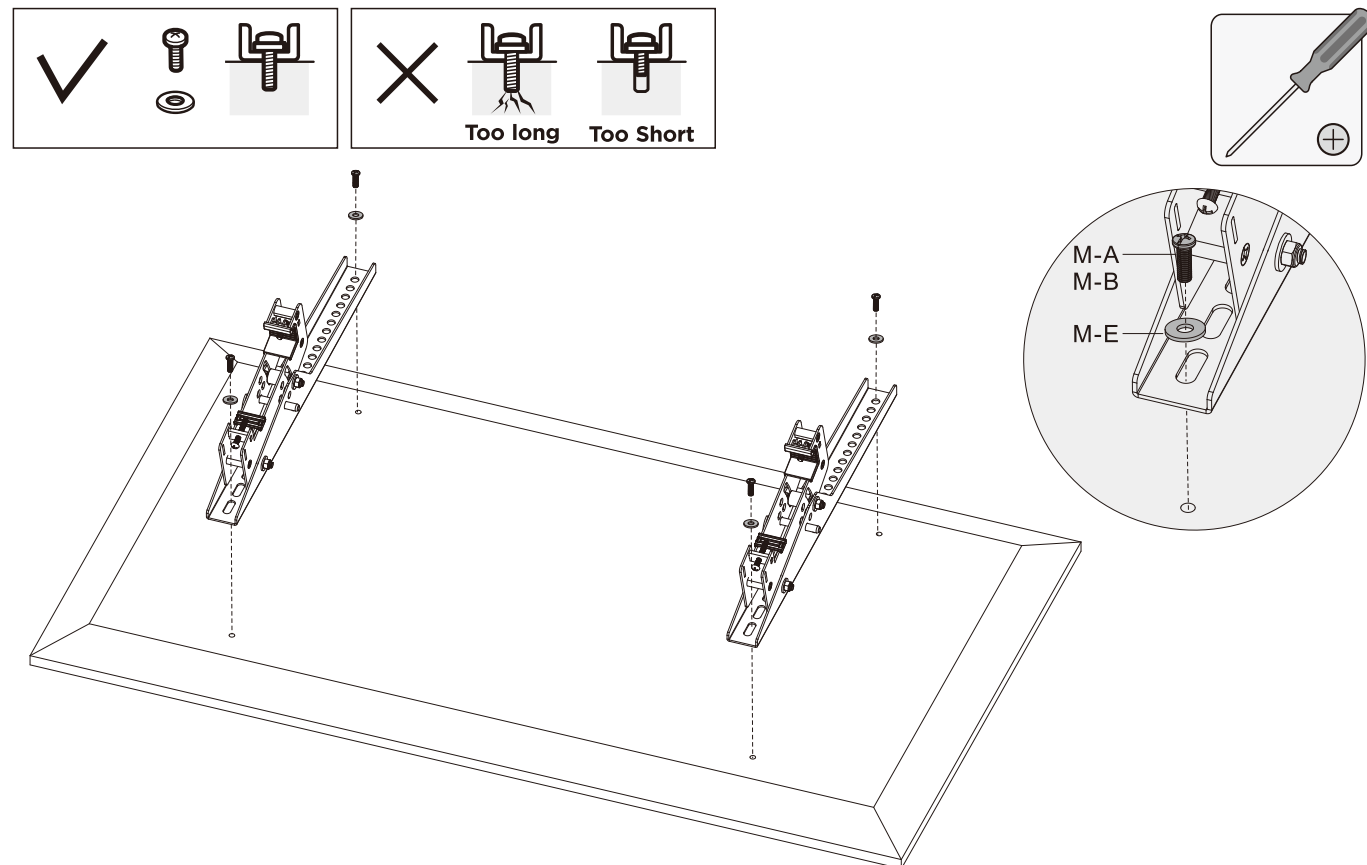


8b. Attach TV Bracket to Irregular Back Screen

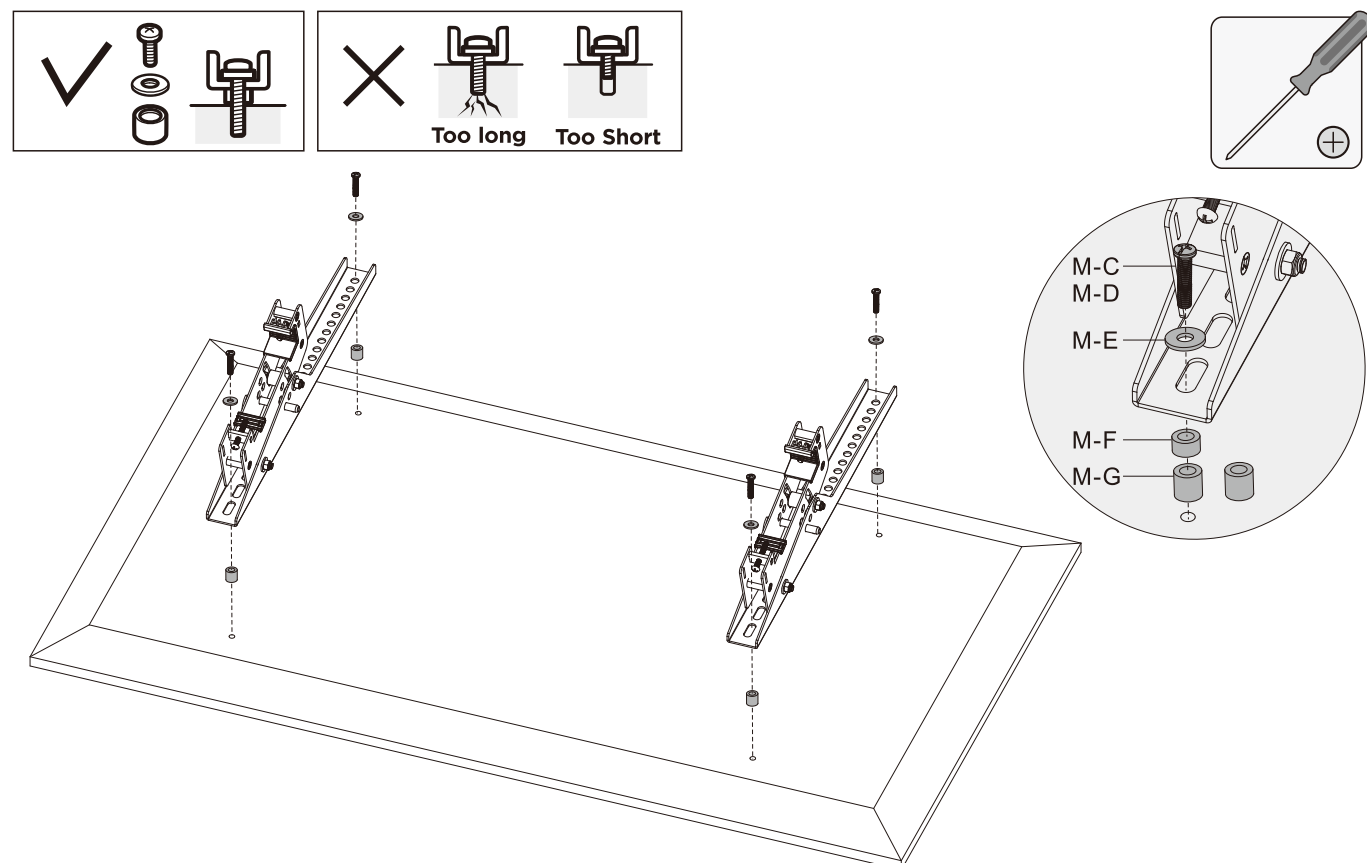

Note: Choose the appropriate screws, washers and spacers (if necessary) according to the type of screen.




9. Hang the Screen

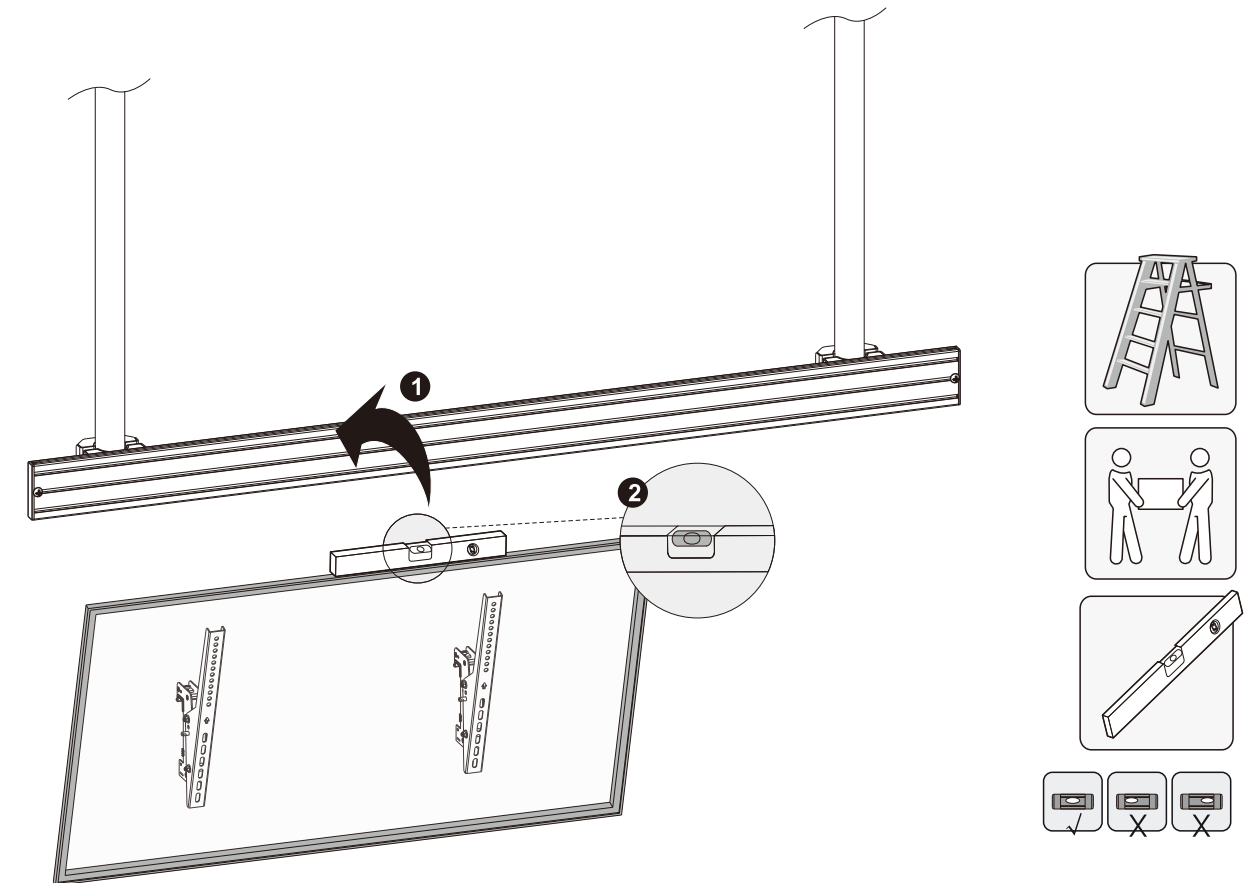



10. Secure with Padlock

Note: Leave at least 1mm gap between screens.

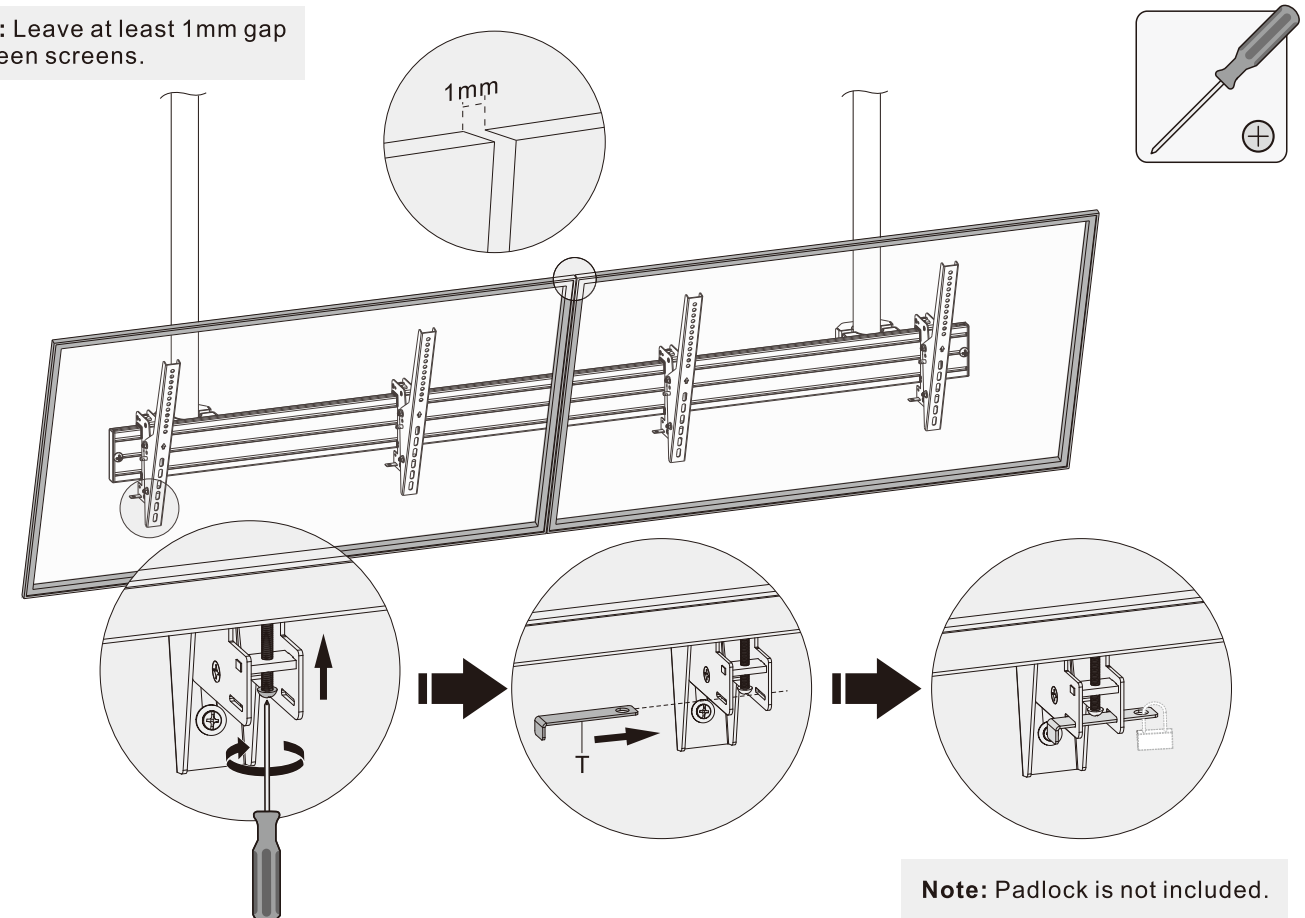


Note: Padlock is not included.

12. Level Adjustment

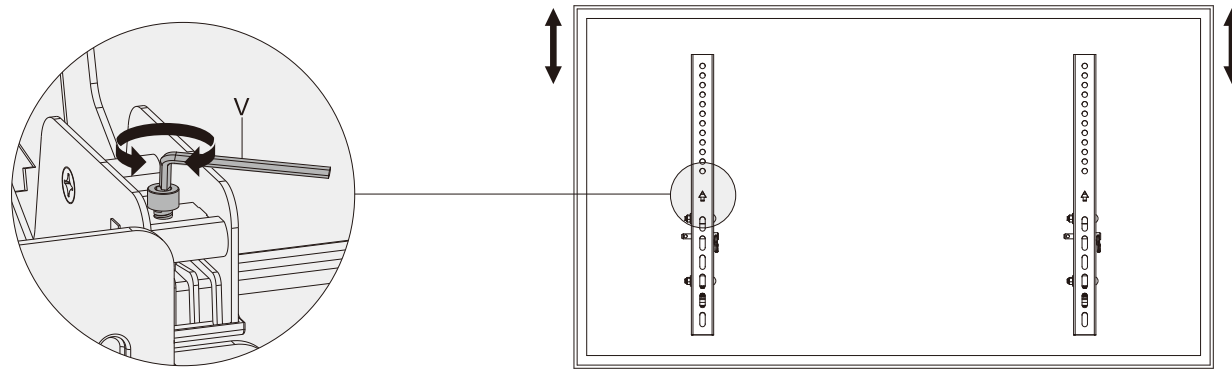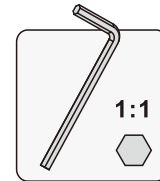


13. Cable Management

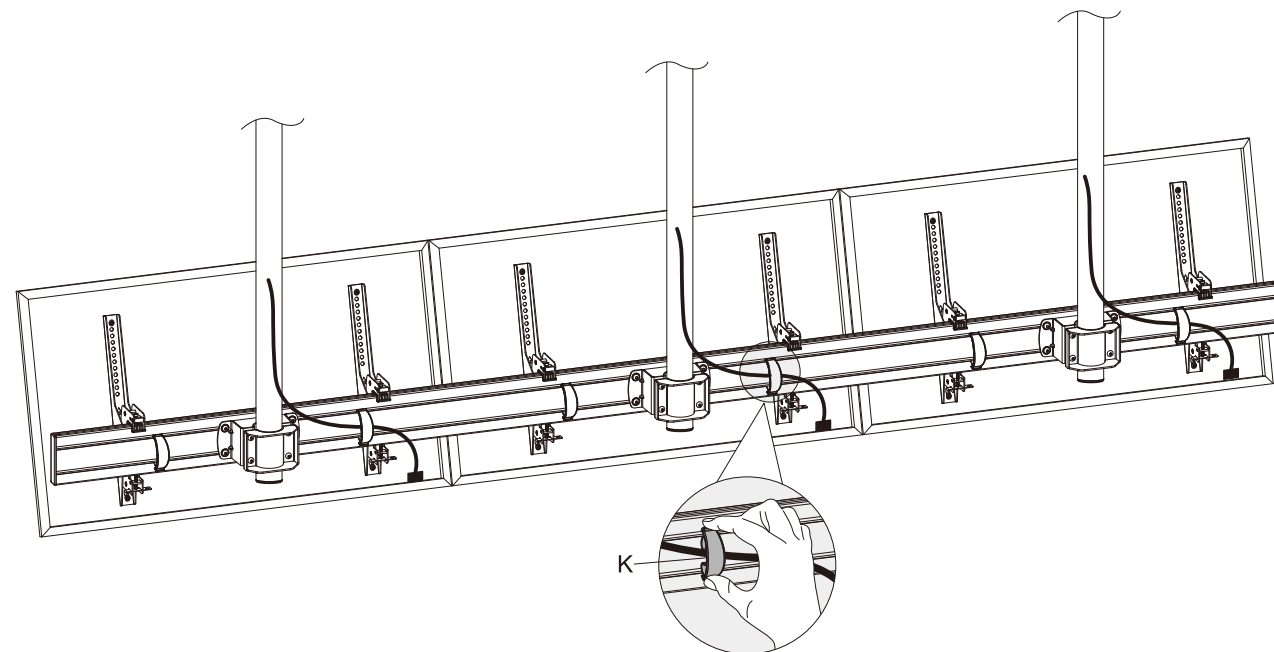

Maintenance

- Check that the bracket is secure and safe to use at regular intervals(at least every three months).

MENU BOARD CEILING MOUNT

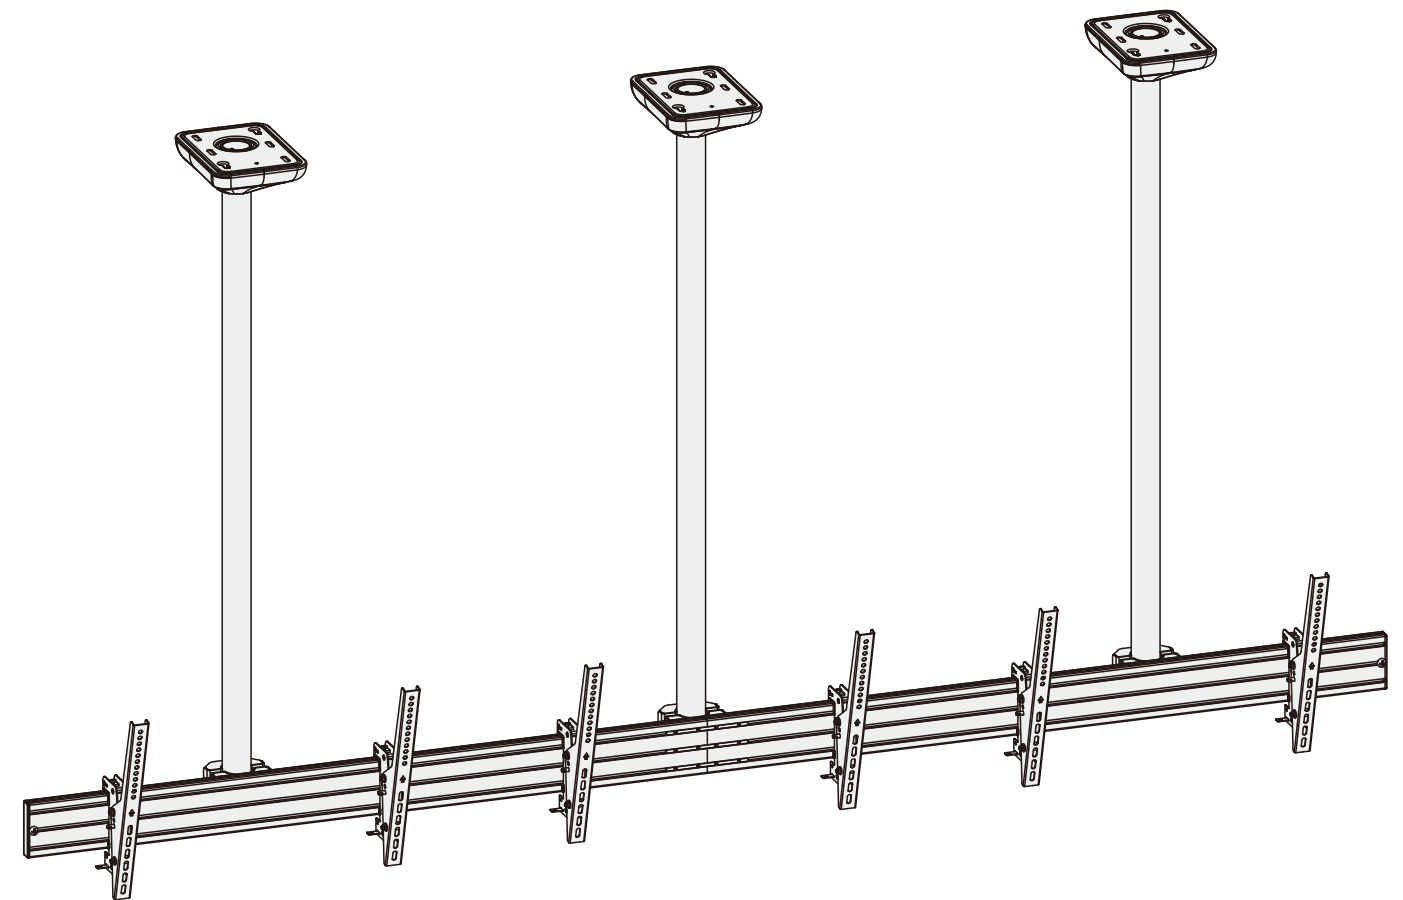

INSTALLATION MANUAL

MTLCMA33L

VESA Compatible
200x200/300x300
400x200/400x400
600x400



rated
50kgx3/110lbsx3

 **Read the entire instruction manual before you start installation and assembly. If you have any questions regarding any of the instructions or warnings, please contact your local distributor for assistance.**

CAUTION


- Use with products heavier than the rated weights indicated may result in instability causing possible injury.
- Please closely follow the assembly instructions. Improper installation may result in damage or serious personal injury.
- Safety gear and proper tools must be used. This product should only be installed by professionals.
- This product is designed to be installed on concrete ceiling only.
- Make sure that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.
- Use the mounting screws provided and **DO NOT OVER TIGHTEN** mounting screws.
- This product contains small items that could be a choking hazard if swallowed. Keep these items away from children.
- This product is intended for indoor use only. Using this product outdoors could lead to product failure and personal injury.

Required for Installation




Component Checklist


IMPORTANT: Ensure that you have received all parts according to the component checklist prior to installation. If any parts are missing or faulty, contact your place of purchase for a replacement.

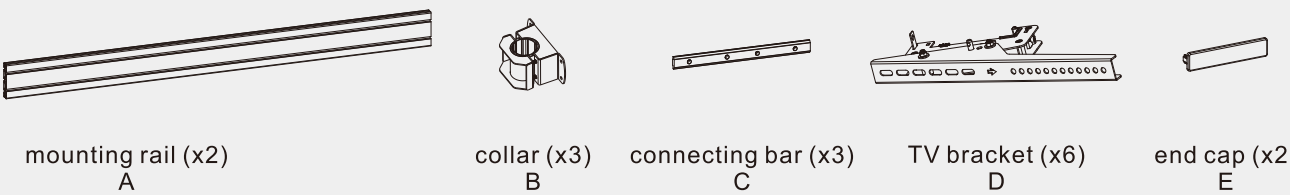


Component Checklist

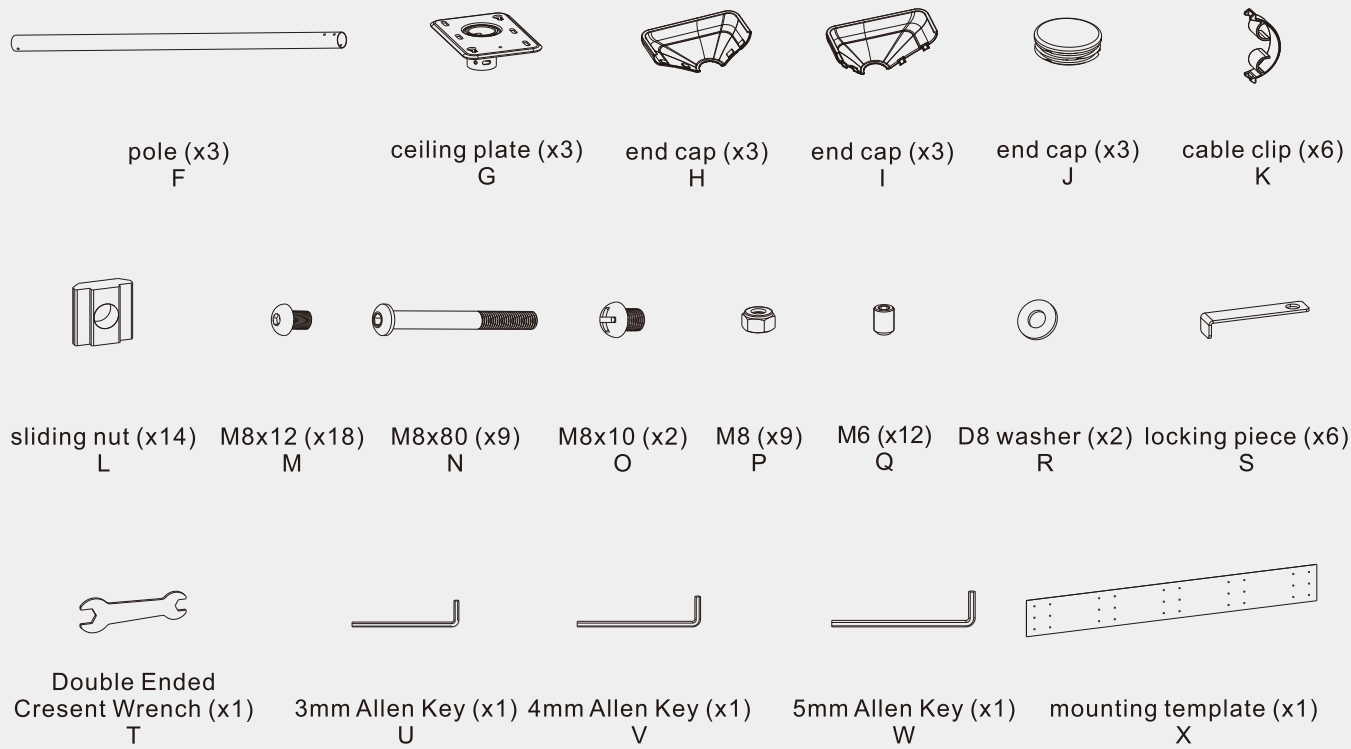


Package M x3

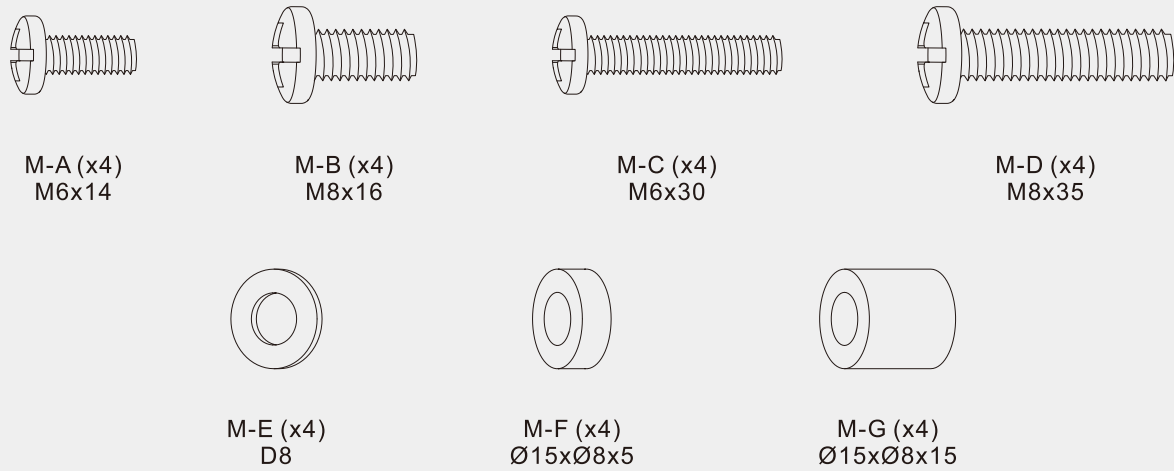




Package W x3

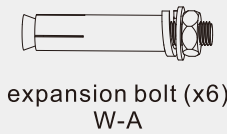

1. Assemble the Pole


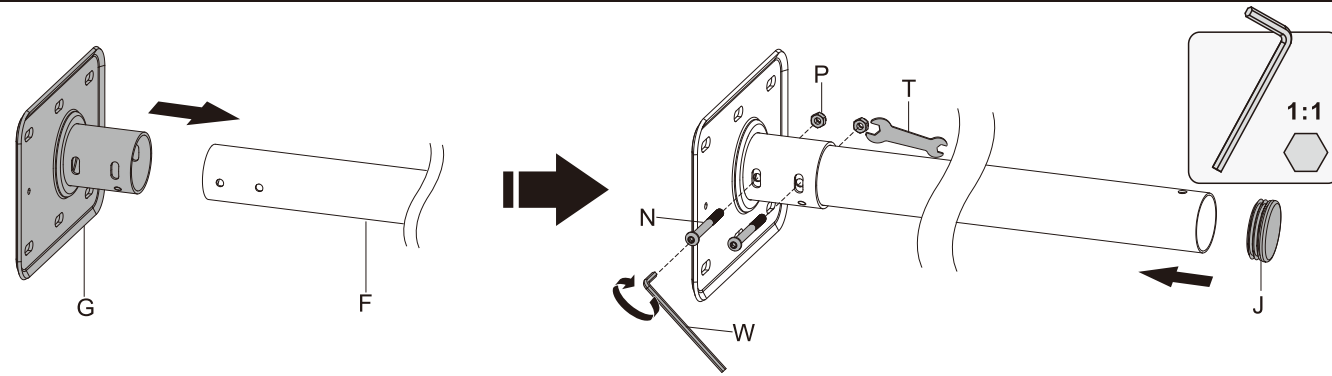


2. Attach Ceiling Plate to the Concrete Ceiling

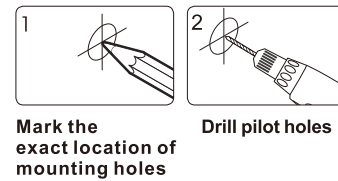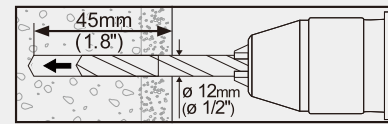
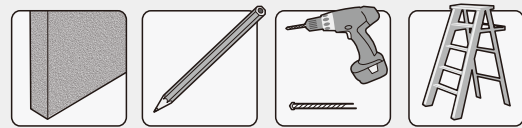


1 Mark the exact location of mounting holes



2 Drill pilot holes

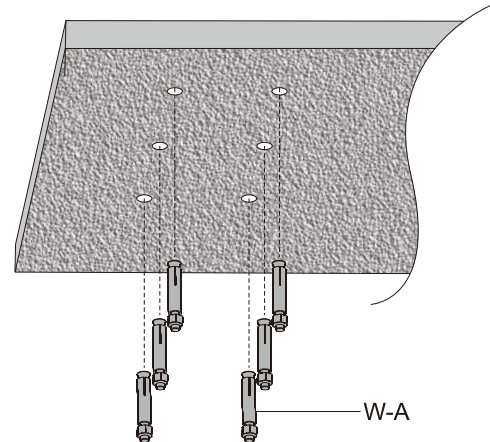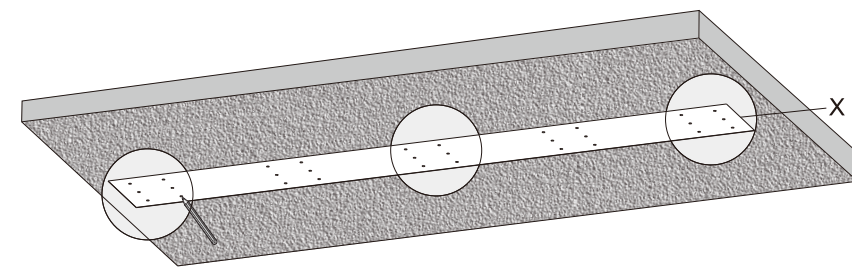

Insert the expansion bolts into the hole as shown. Once inserted, remove the washers and hex nuts.

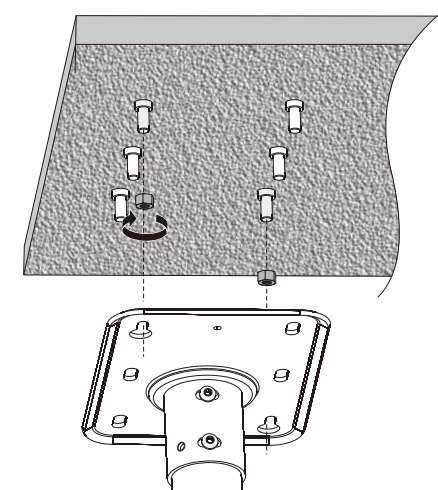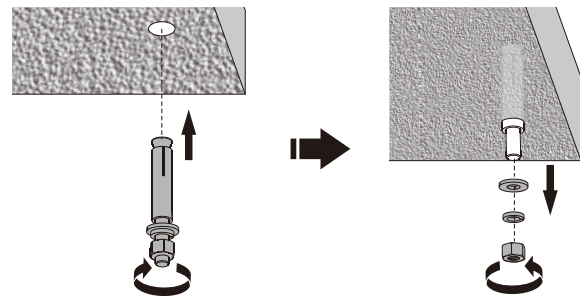


Attach the hex nuts to the expansion bolts corresponding to the keyhole pattern found on the ceiling plate. Do not overtighten and leave a small gap so the ceiling plate will slide into the keyhole slots.

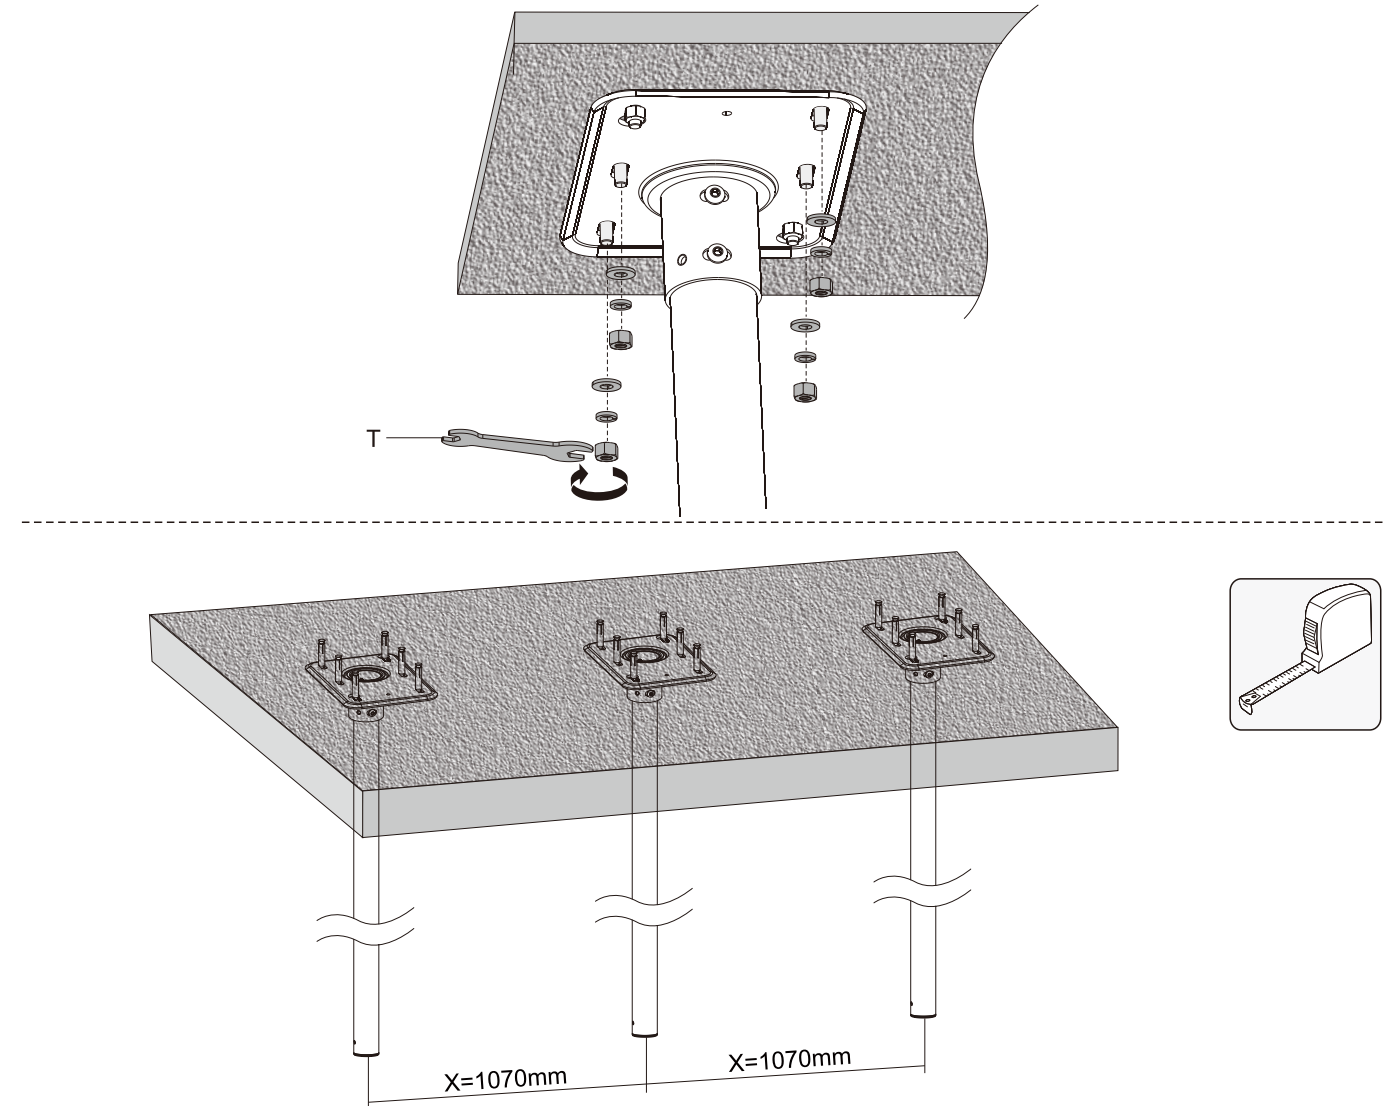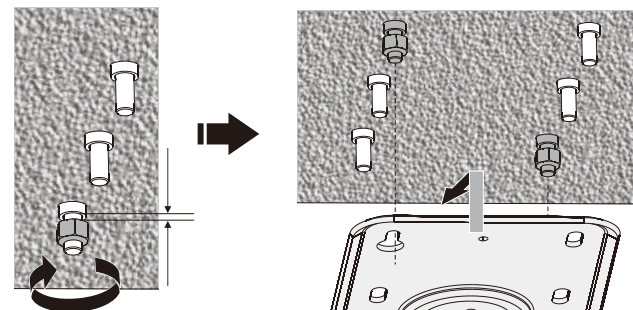


! WARNING

Installers must verify that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.


3. Extend the Mounting Rail

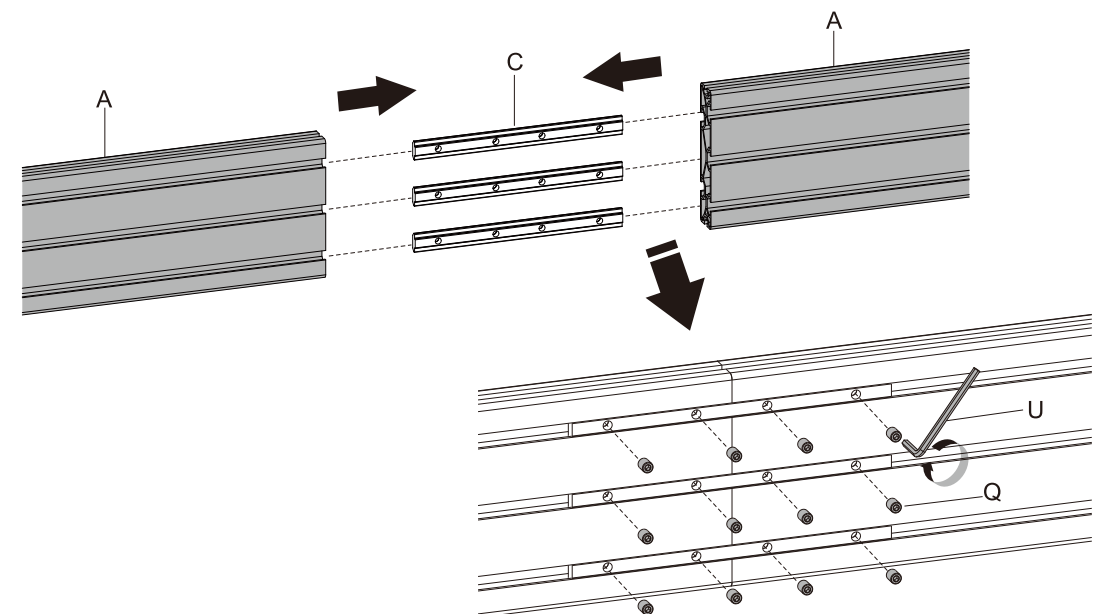


4. Attach Collar to the Mounting Rail

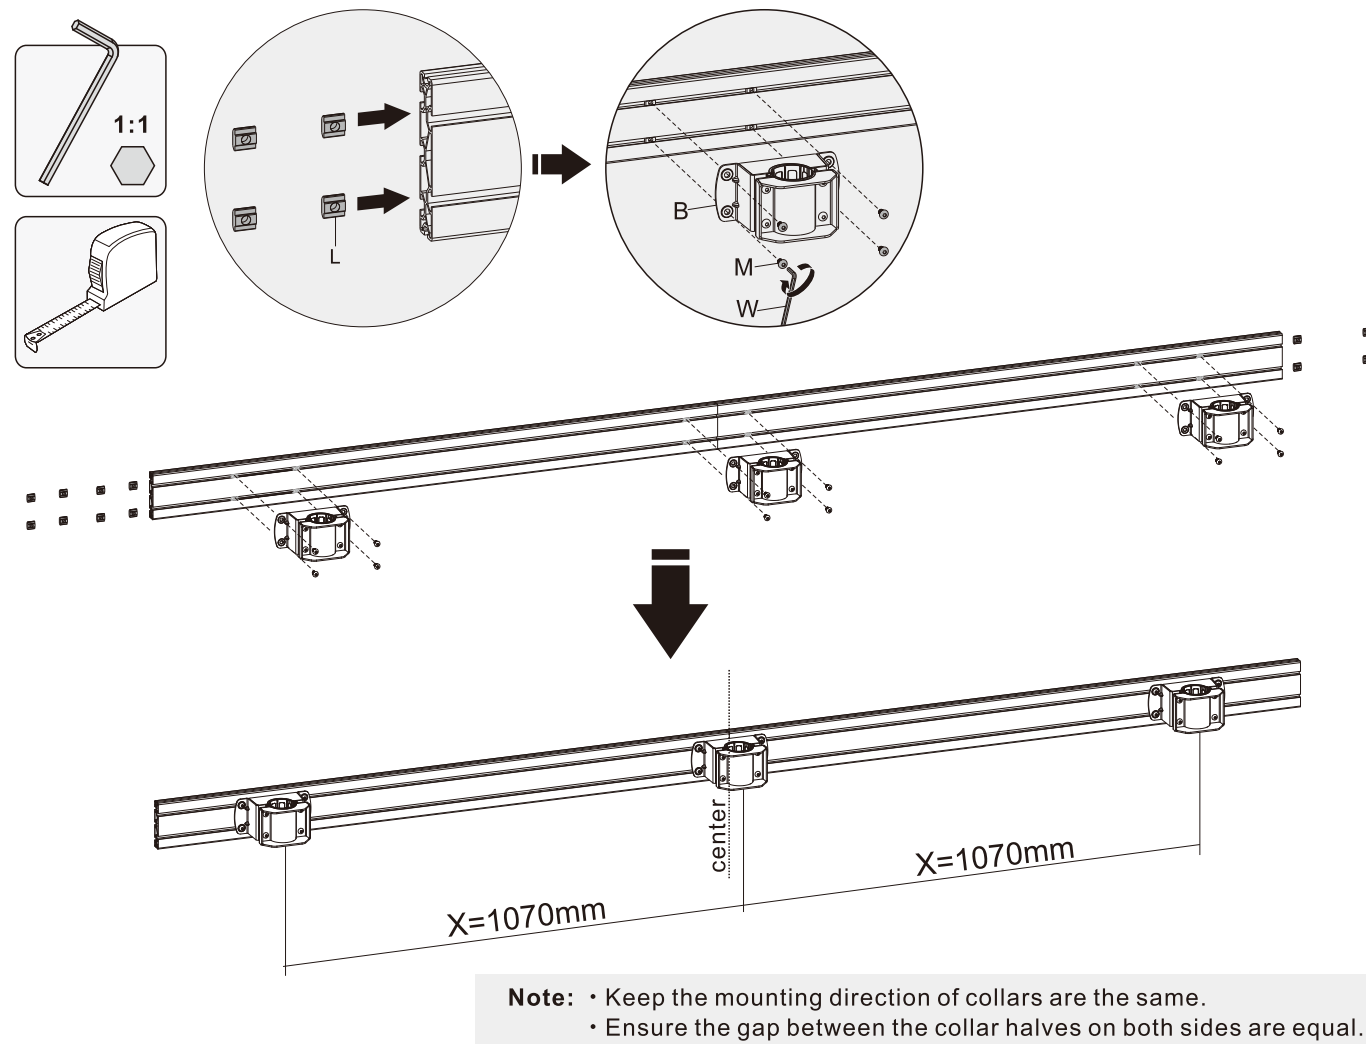

5. Install the End Cap


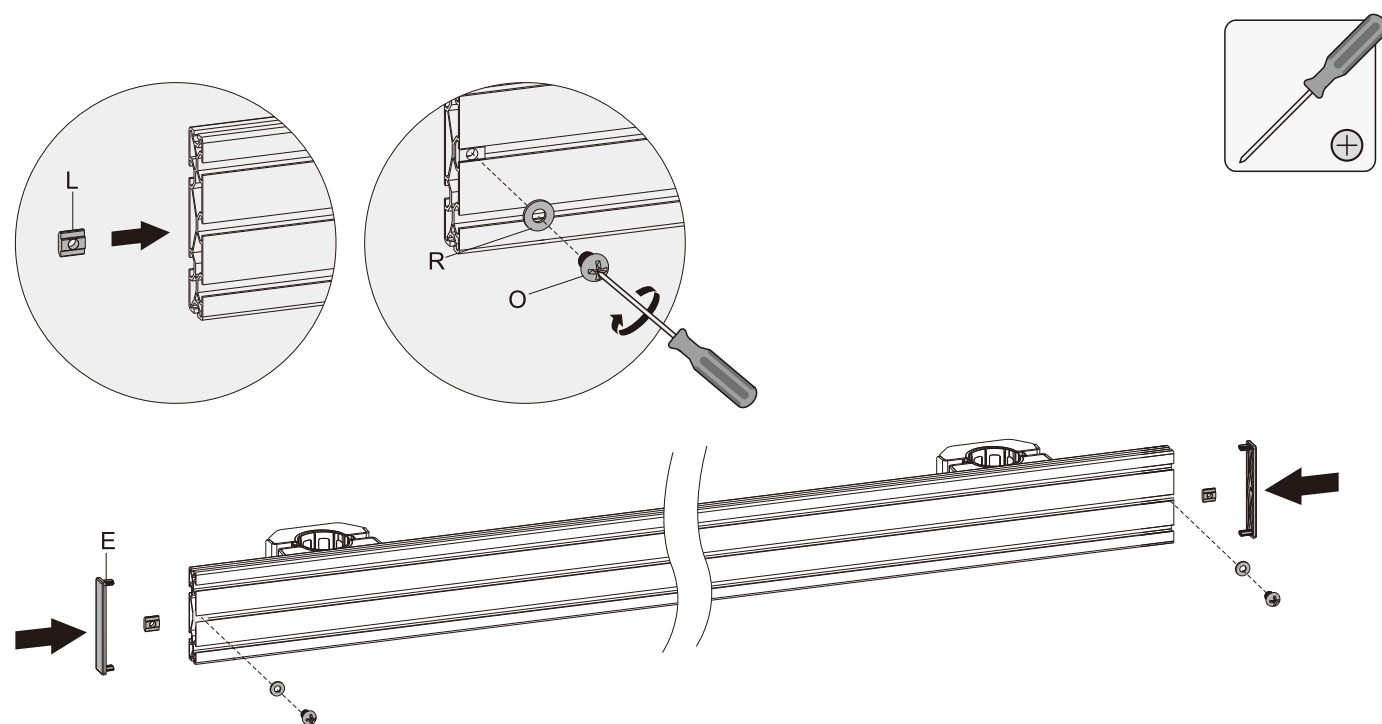


6. Attach Mounting Rail to Pole

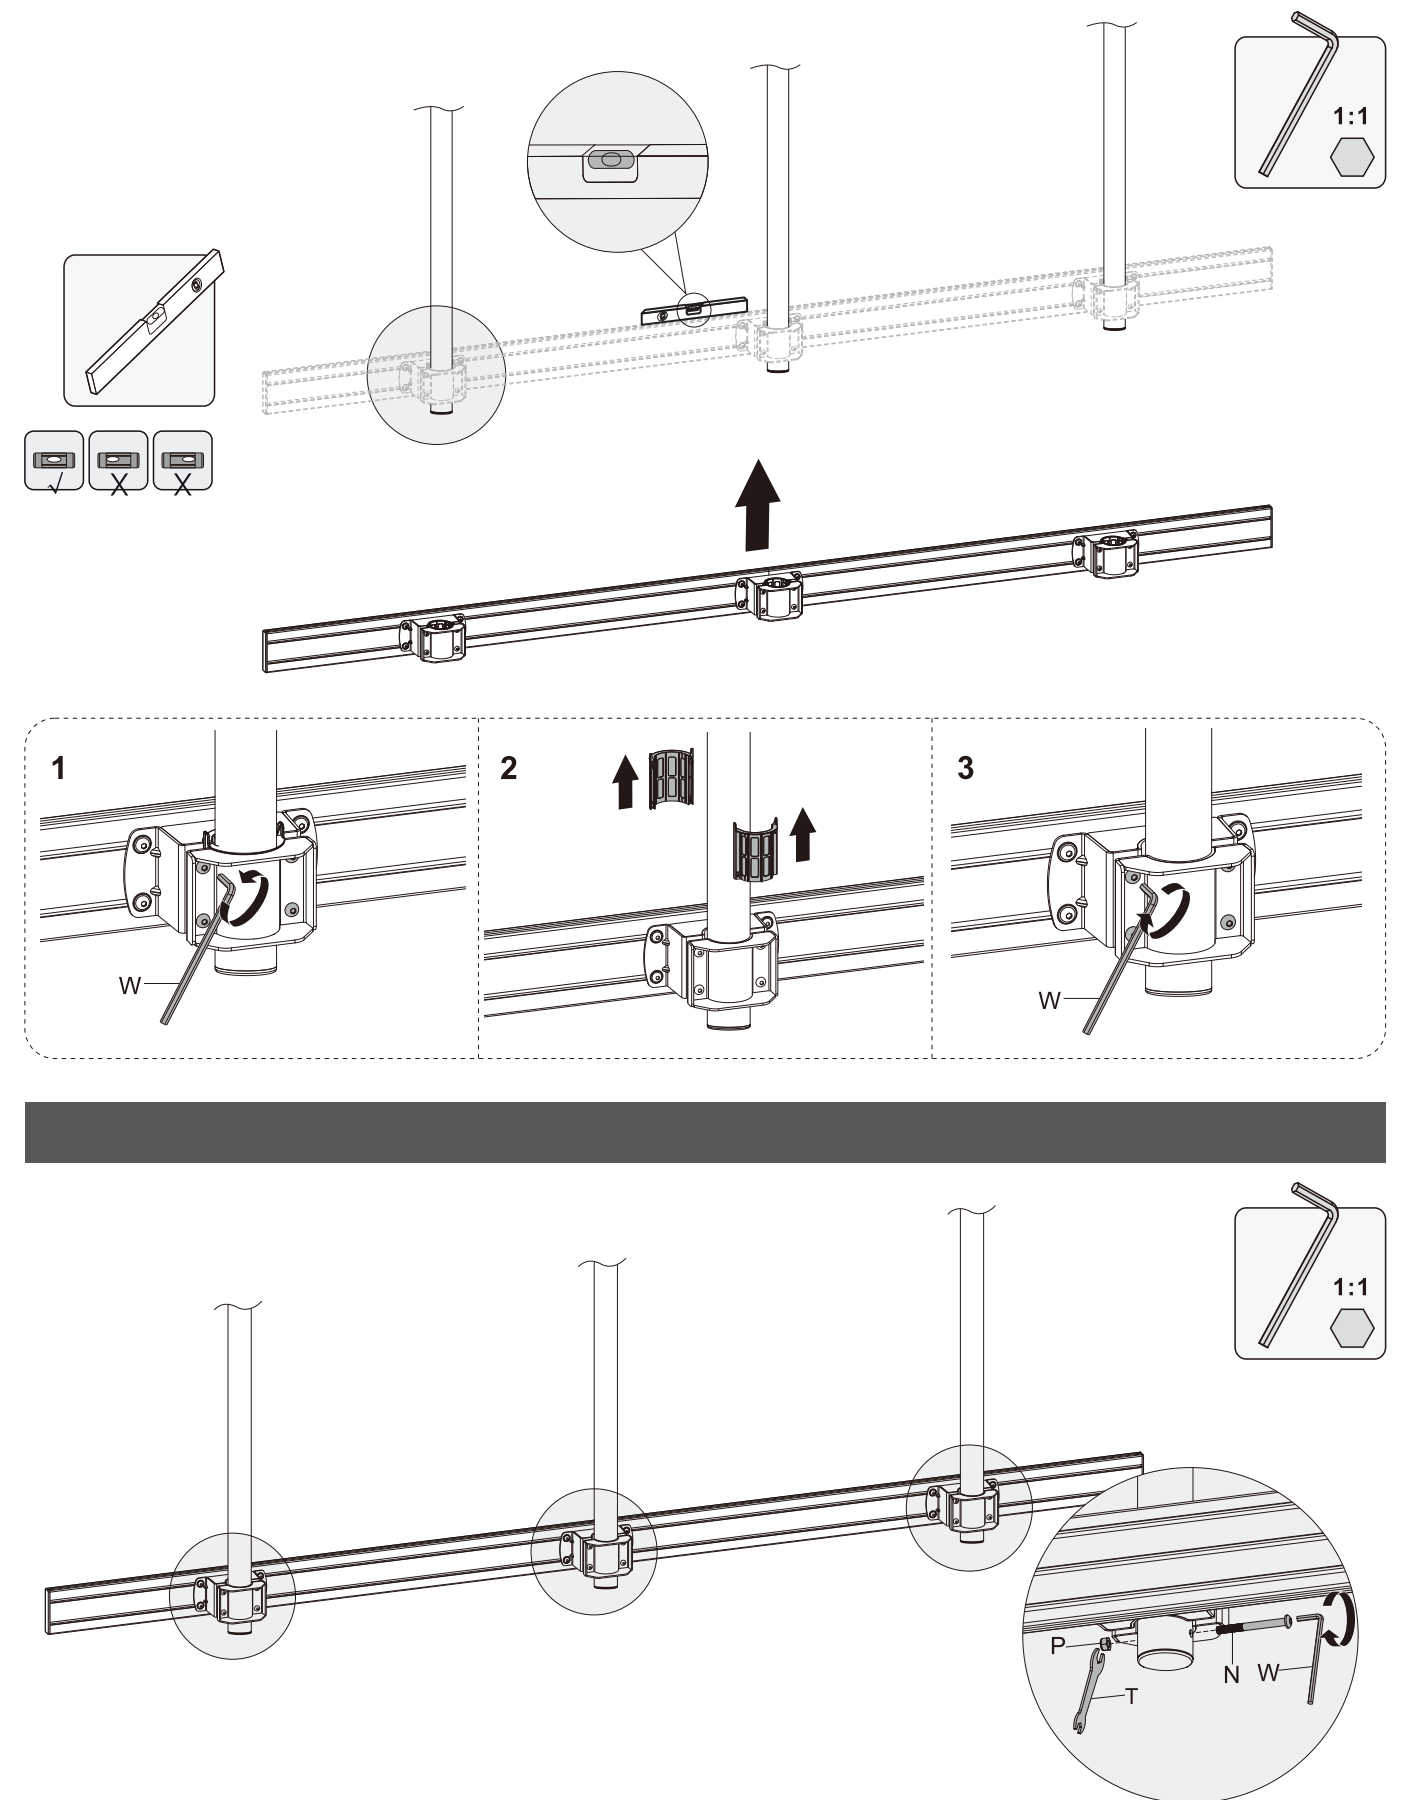


Once the rail has been determined, firmly tighten the bottom rail to the mounting poles as shown prior to mounting the displays.

7. Install the Plastic Cover

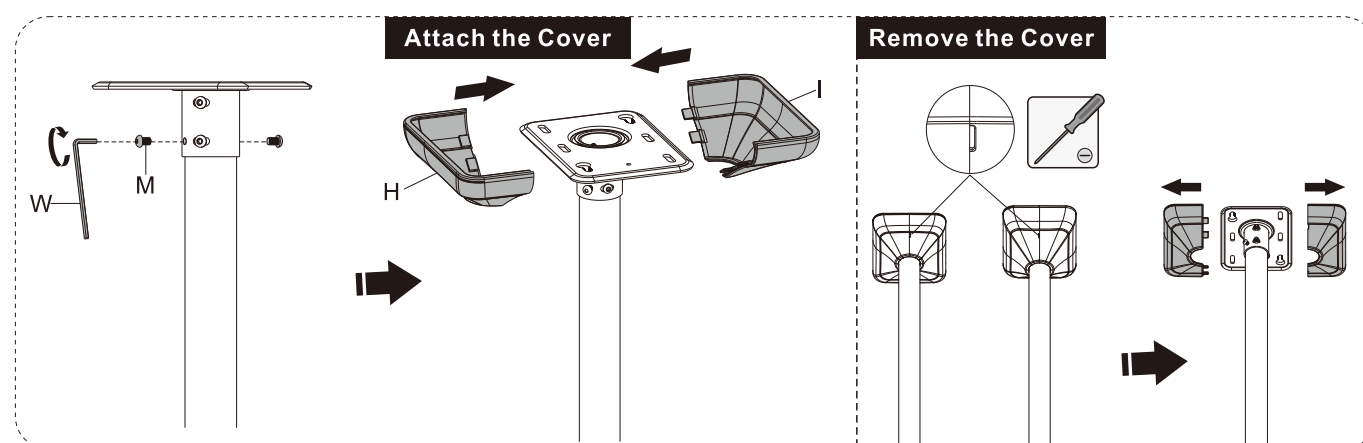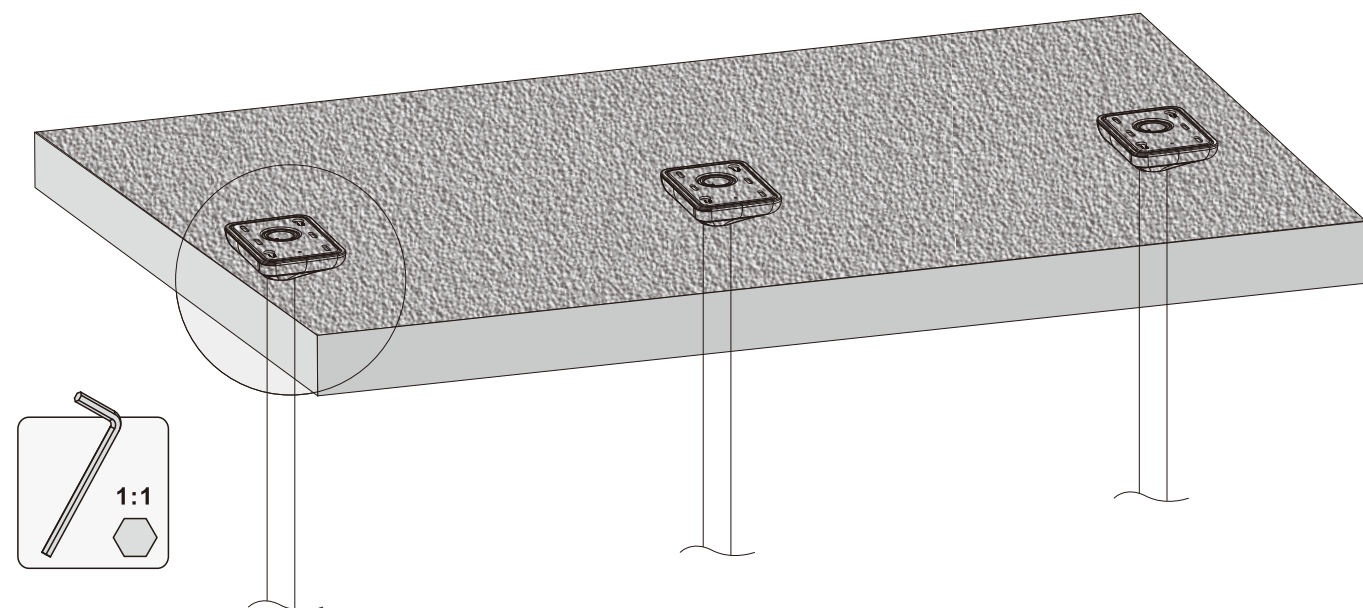


8. Tilt Adjustment

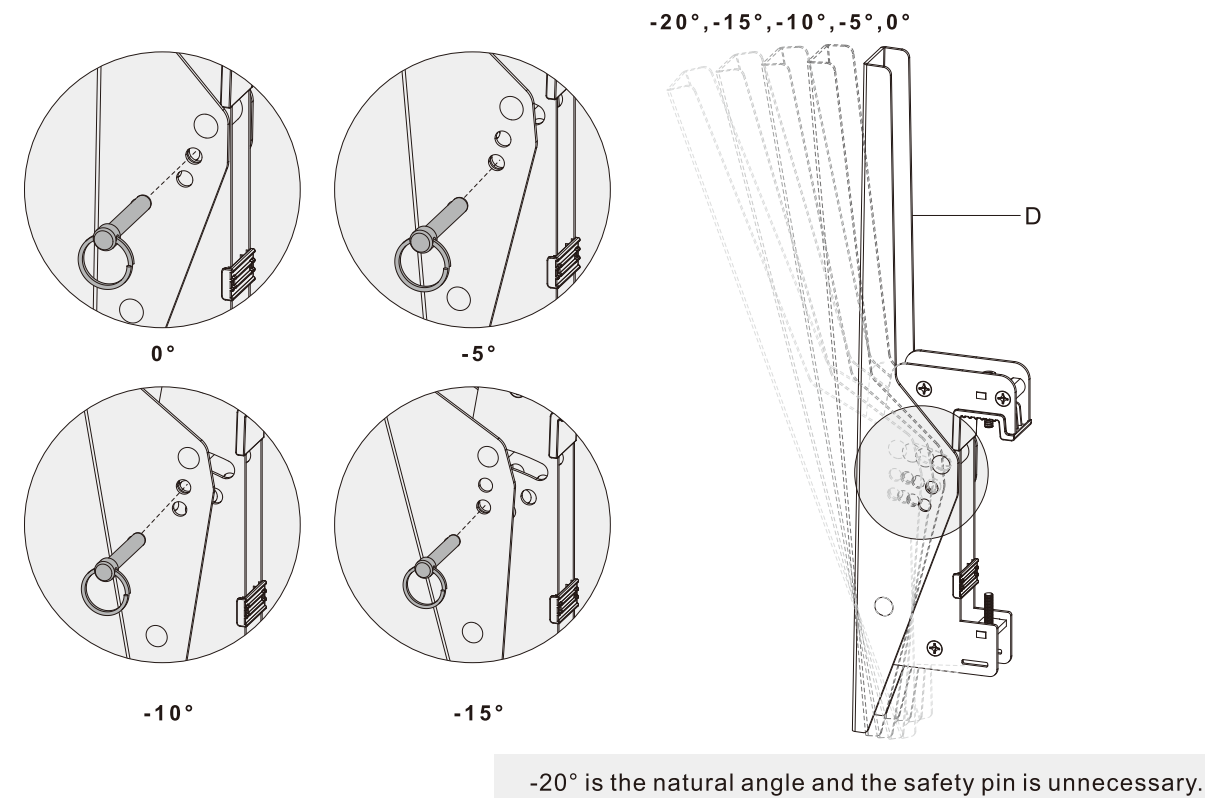


9. Attach TV Bracket


Position the adapter brackets as close as possible to the center of the display.

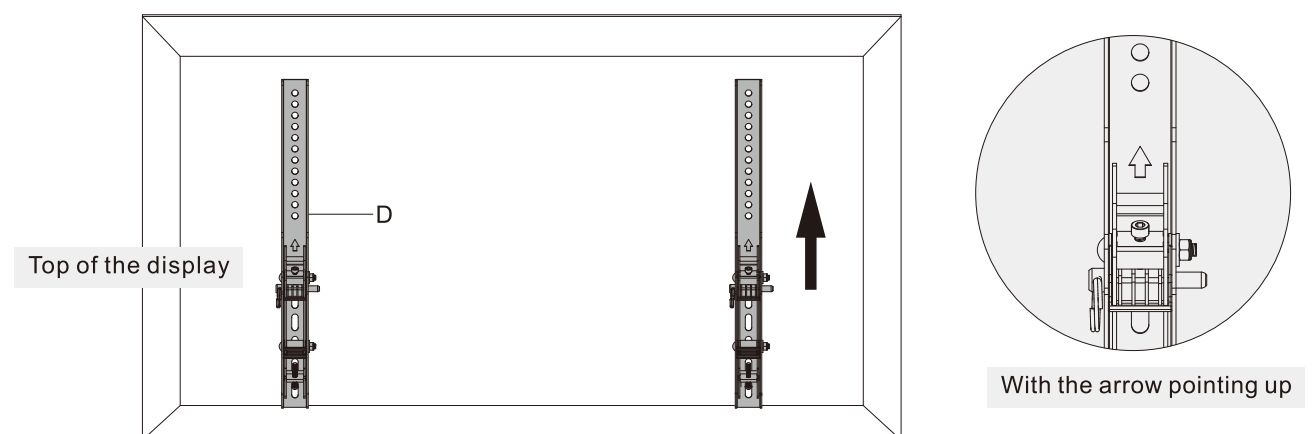

9a. Attach TV Bracket to Flat Back Screen

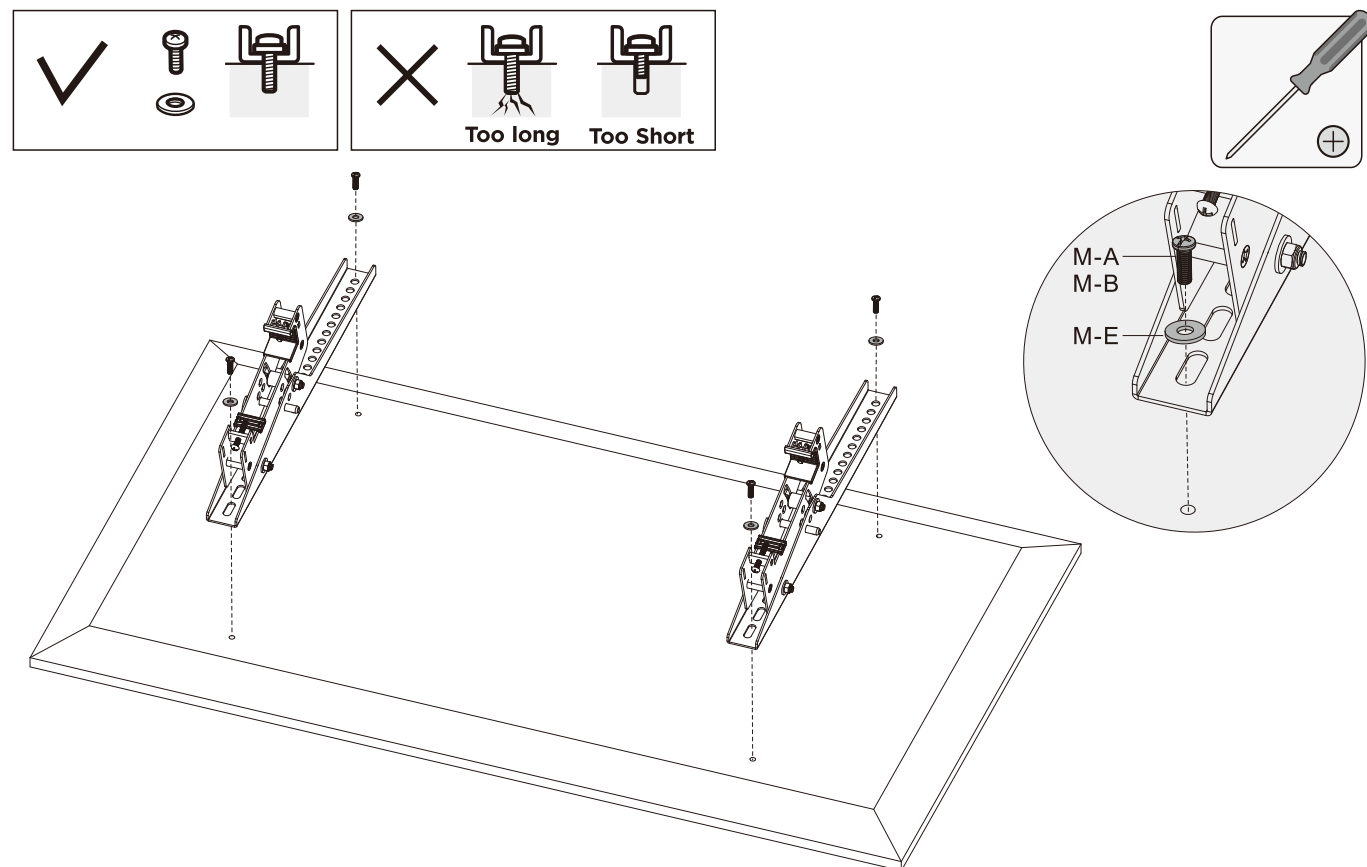


9b. Attach TV Bracket to Irregular Back Screen

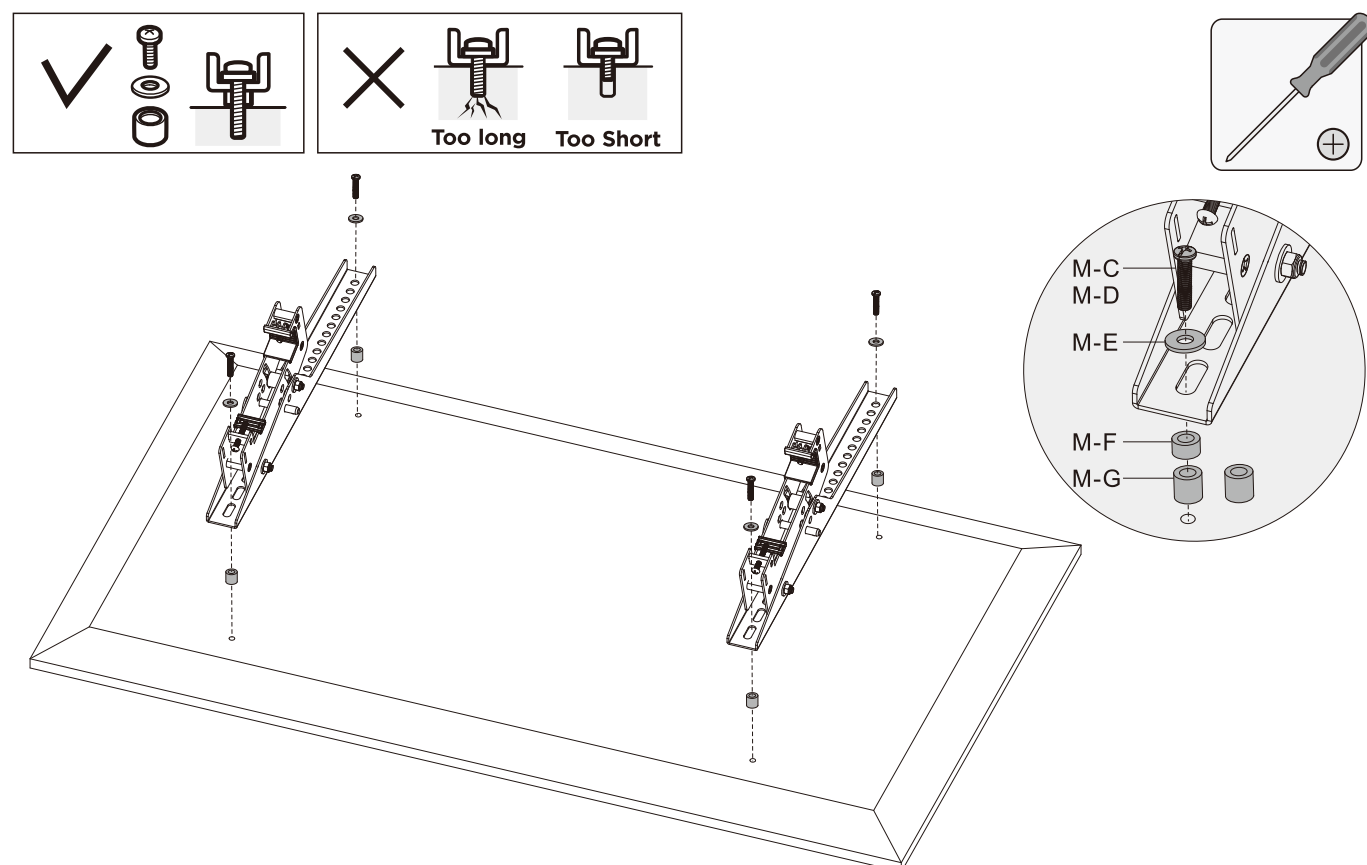

Note: Choose the appropriate screws, washers and spacers (if necessary) according to the type of screen.


⚠ **Do not overtighten screws.**

10. Hang the Screen


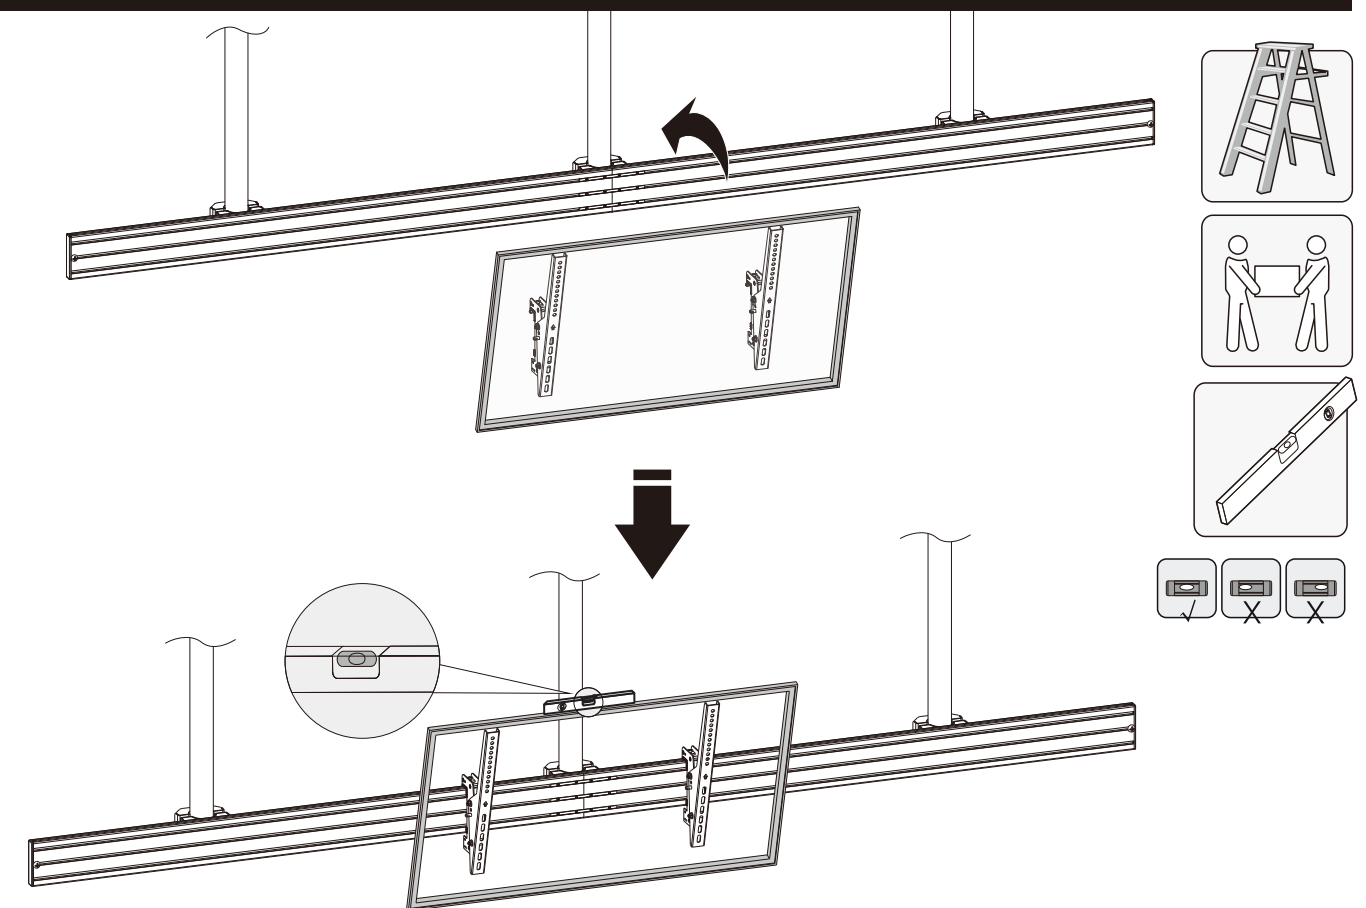


11. Secure with Padlock


Note: Leave at least 1mm gap between screens.

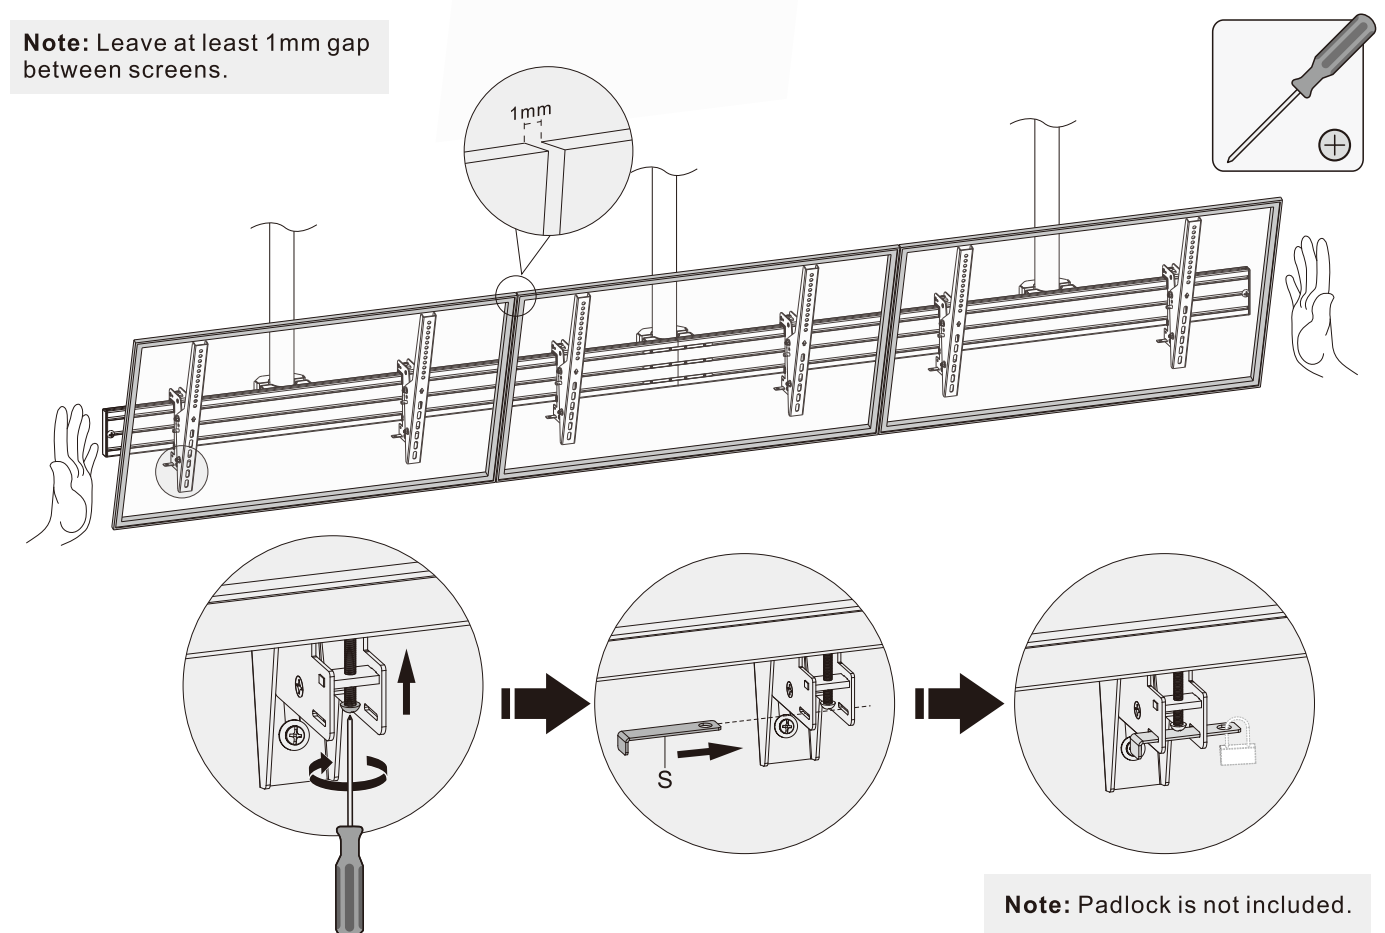

12. Level Adjustment

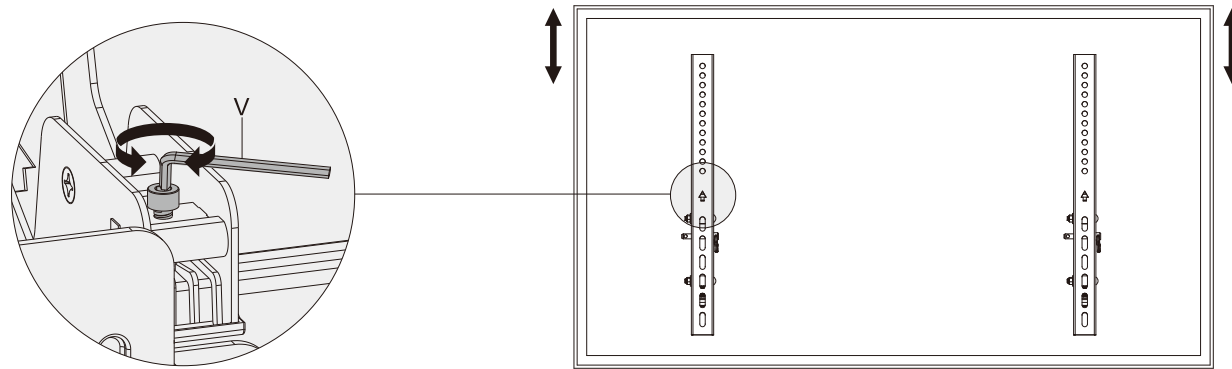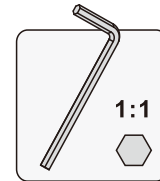


13. Cable Management

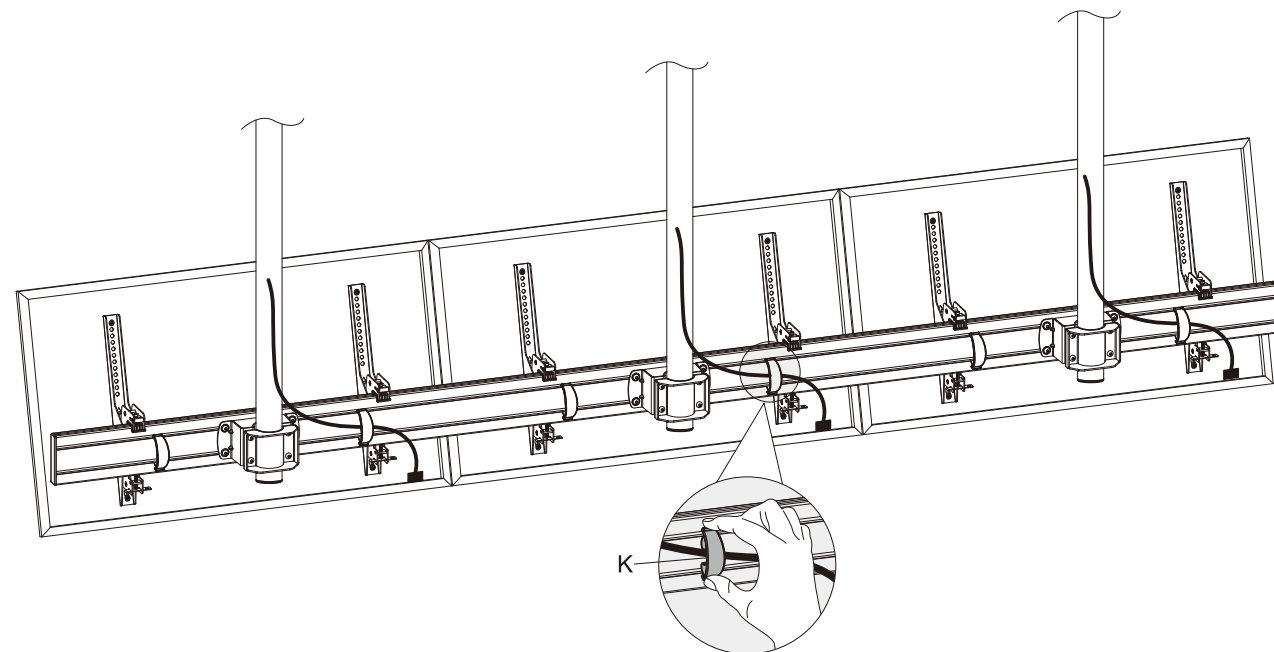

Maintenance

- Check that the bracket is secure and safe to use at regular intervals(at least every three months).

MENU BOARD CEILING MOUNT

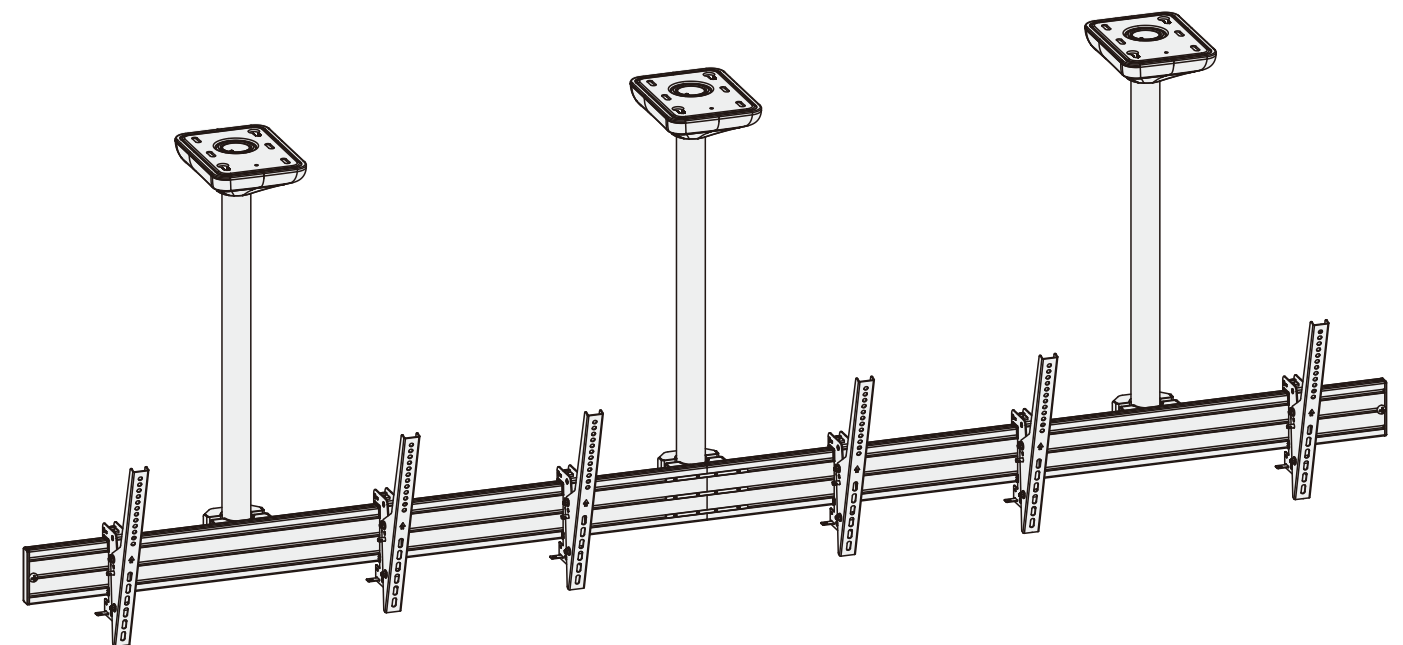

INSTALLATION MANUAL

MTLCMA33S

VESA Compatible
200x200/300x300
400x200/400x400
600x400



rated
50kgx3/110lbsx3

 **Read the entire instruction manual before you start installation and assembly. If you have any questions regarding any of the instructions or warnings, please contact your local distributor for assistance.**

 CAUTION


- Use with products heavier than the rated weights indicated may result in instability causing possible injury.
- Please closely follow the assembly instructions. Improper installation may result in damage or serious personal injury.
- Safety gear and proper tools must be used. This product should only be installed by professionals.
- This product is designed to be installed on concrete ceiling only.
- Make sure that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.
- Use the mounting screws provided and **DO NOT OVER TIGHTEN** mounting screws.
- This product contains small items that could be a choking hazard if swallowed. Keep these items away from children.
- This product is intended for indoor use only. Using this product outdoors could lead to product failure and personal injury.

Required for Installation




Component Checklist


IMPORTANT: Ensure that you have received all parts according to the component checklist prior to installation. If any parts are missing or faulty, contact your place of purchase for a replacement.

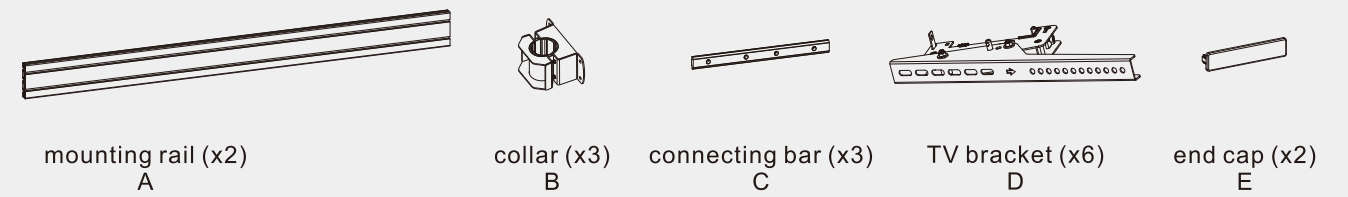


Component Checklist

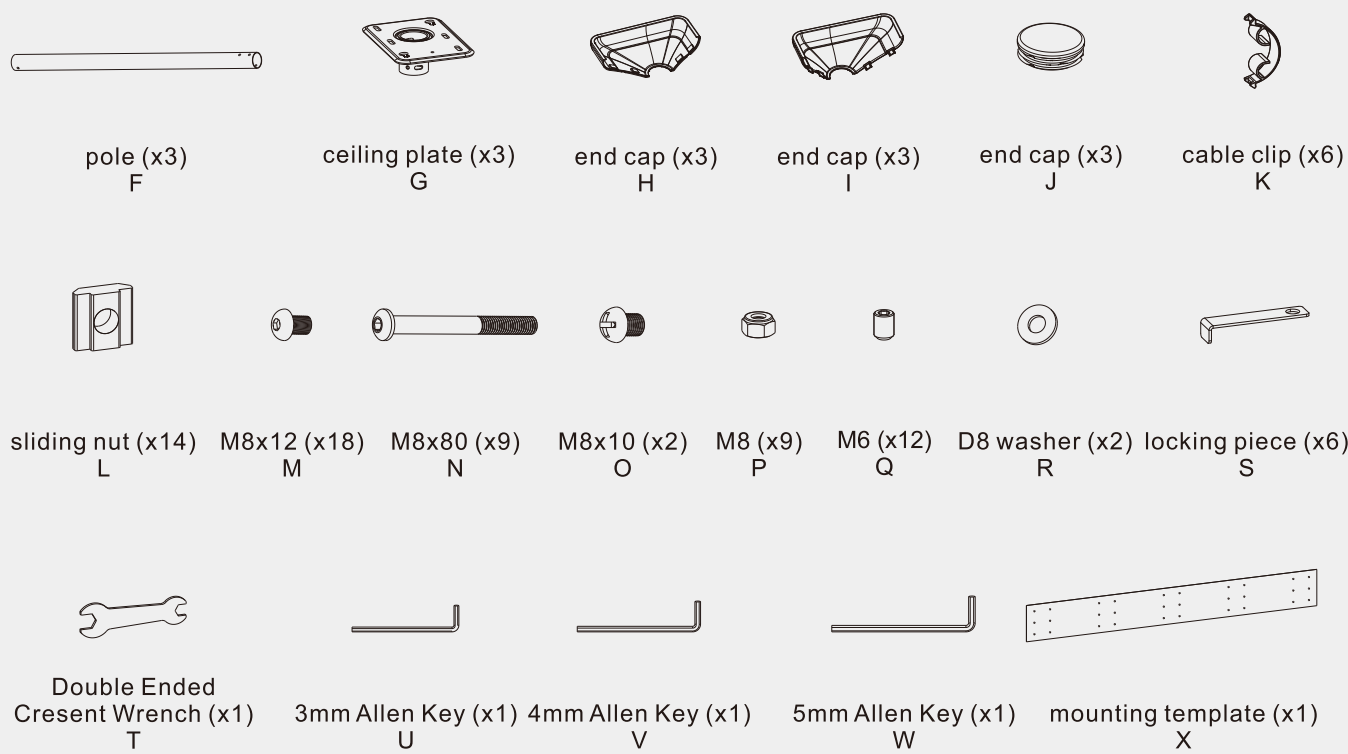


Package M x3

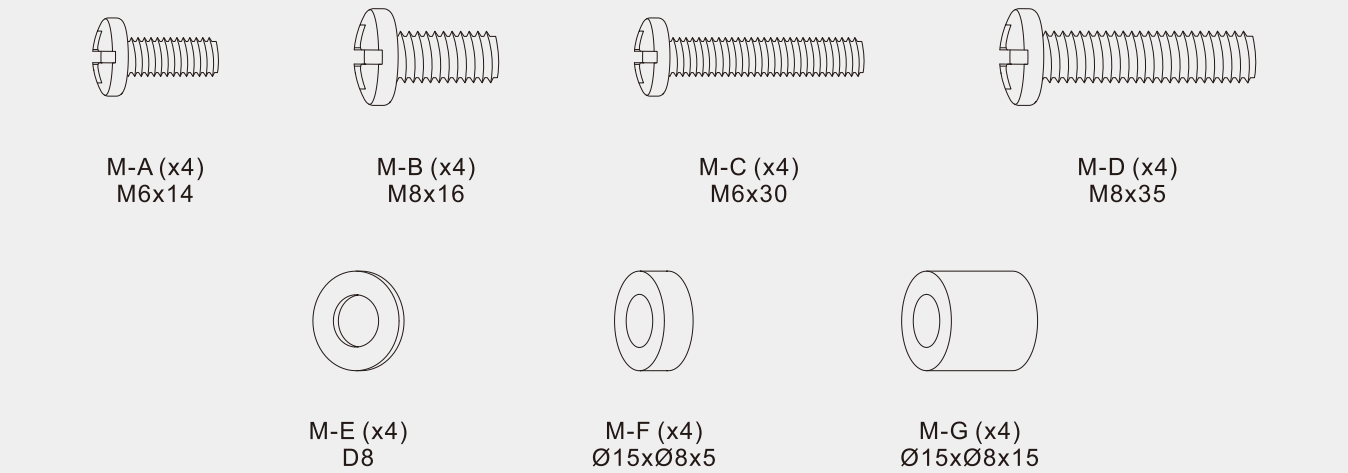






Package W x3

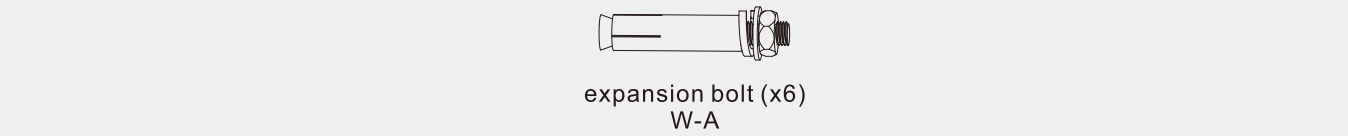


1. Assemble the Pole

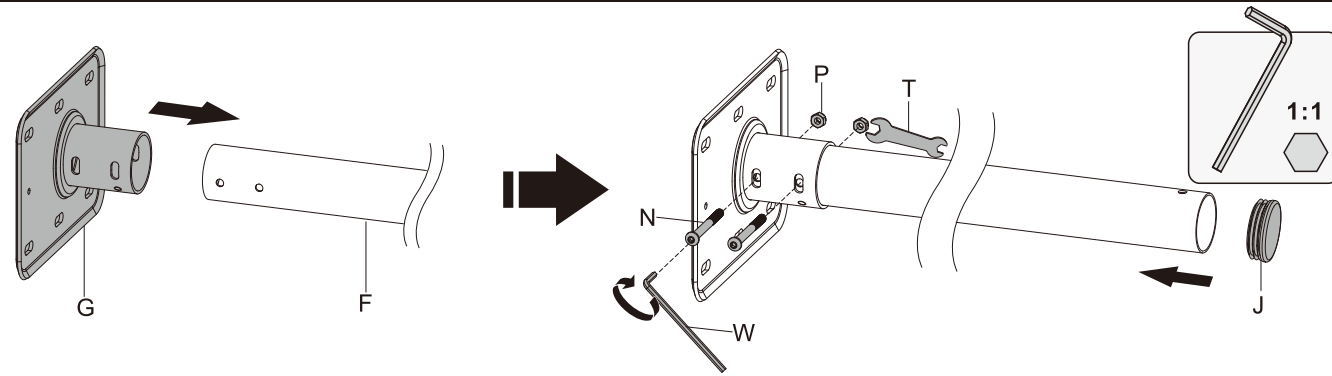





2. Attach Ceiling Plate to the Concrete Ceiling

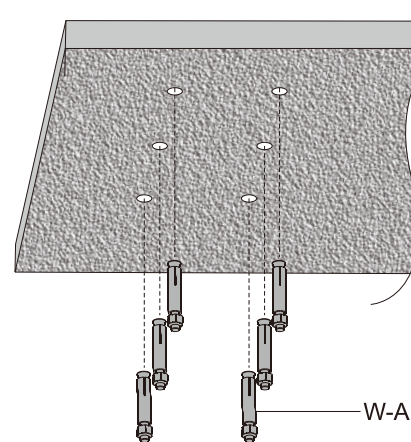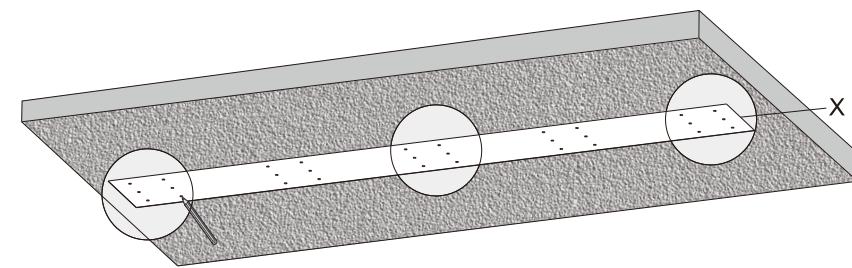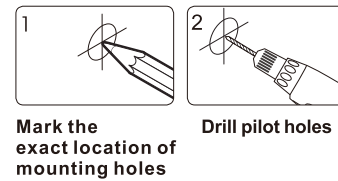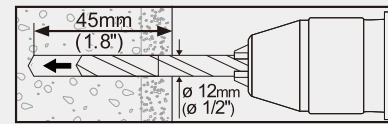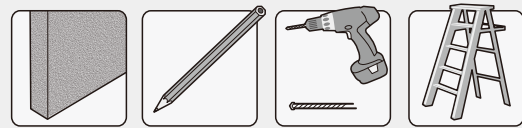

Insert the expansion bolts into the hole as shown. Once inserted, remove the washers and hex nuts.

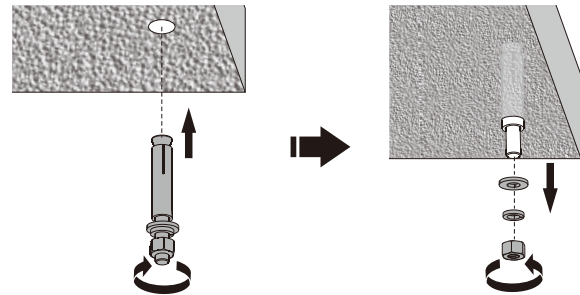


Attach the hex nuts to the expansion bolts corresponding to the keyhole pattern found on the ceiling plate. Do not overtighten and leave a small gap so the ceiling plate will slide into the keyhole slots.

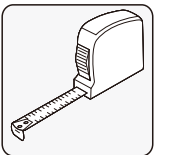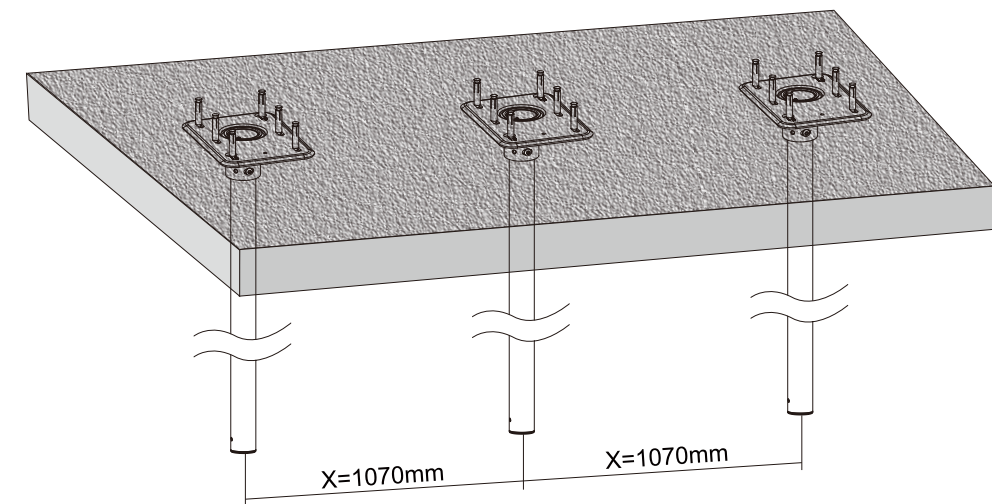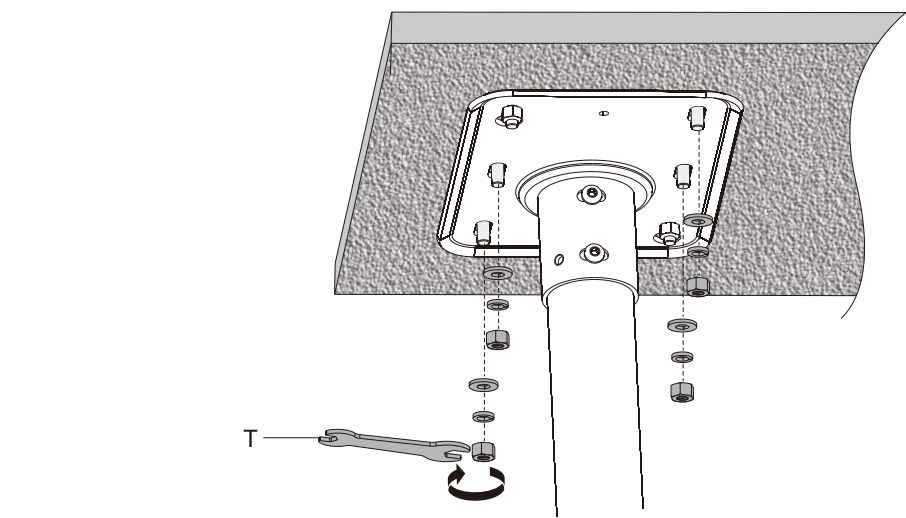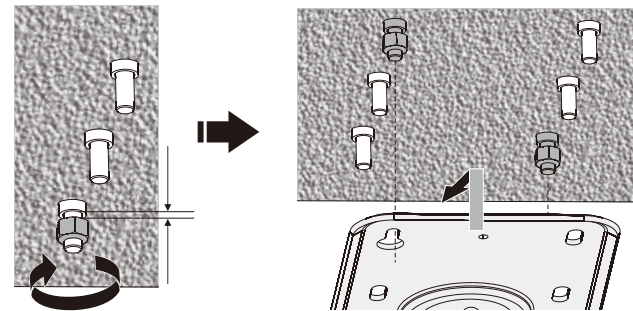


! WARNING

Installers must verify that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.


3. Extend the Mounting Rail

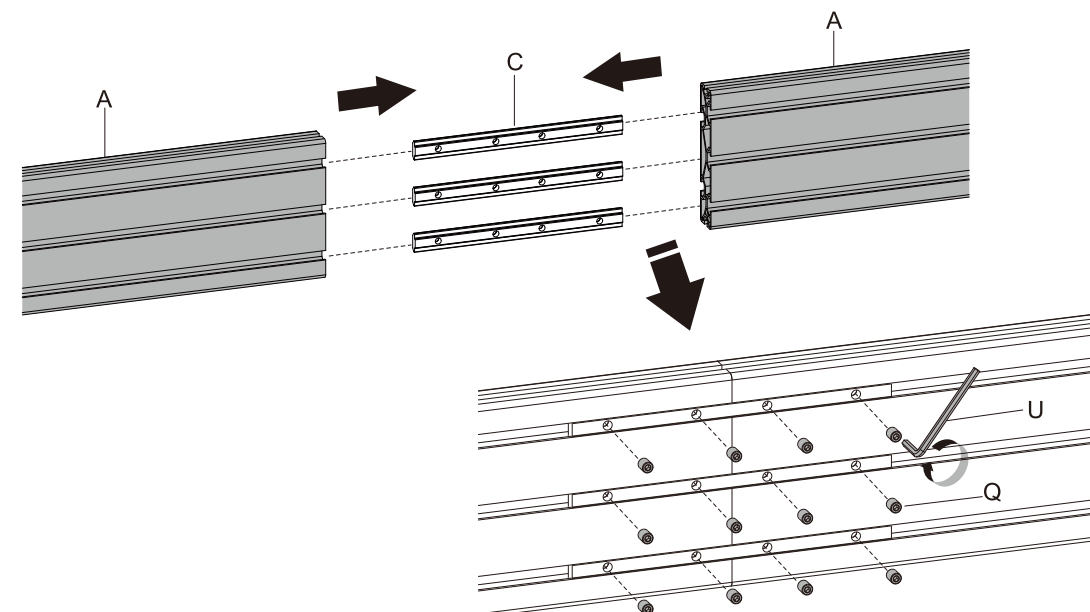


4. Attach Collar to the Mounting Rail

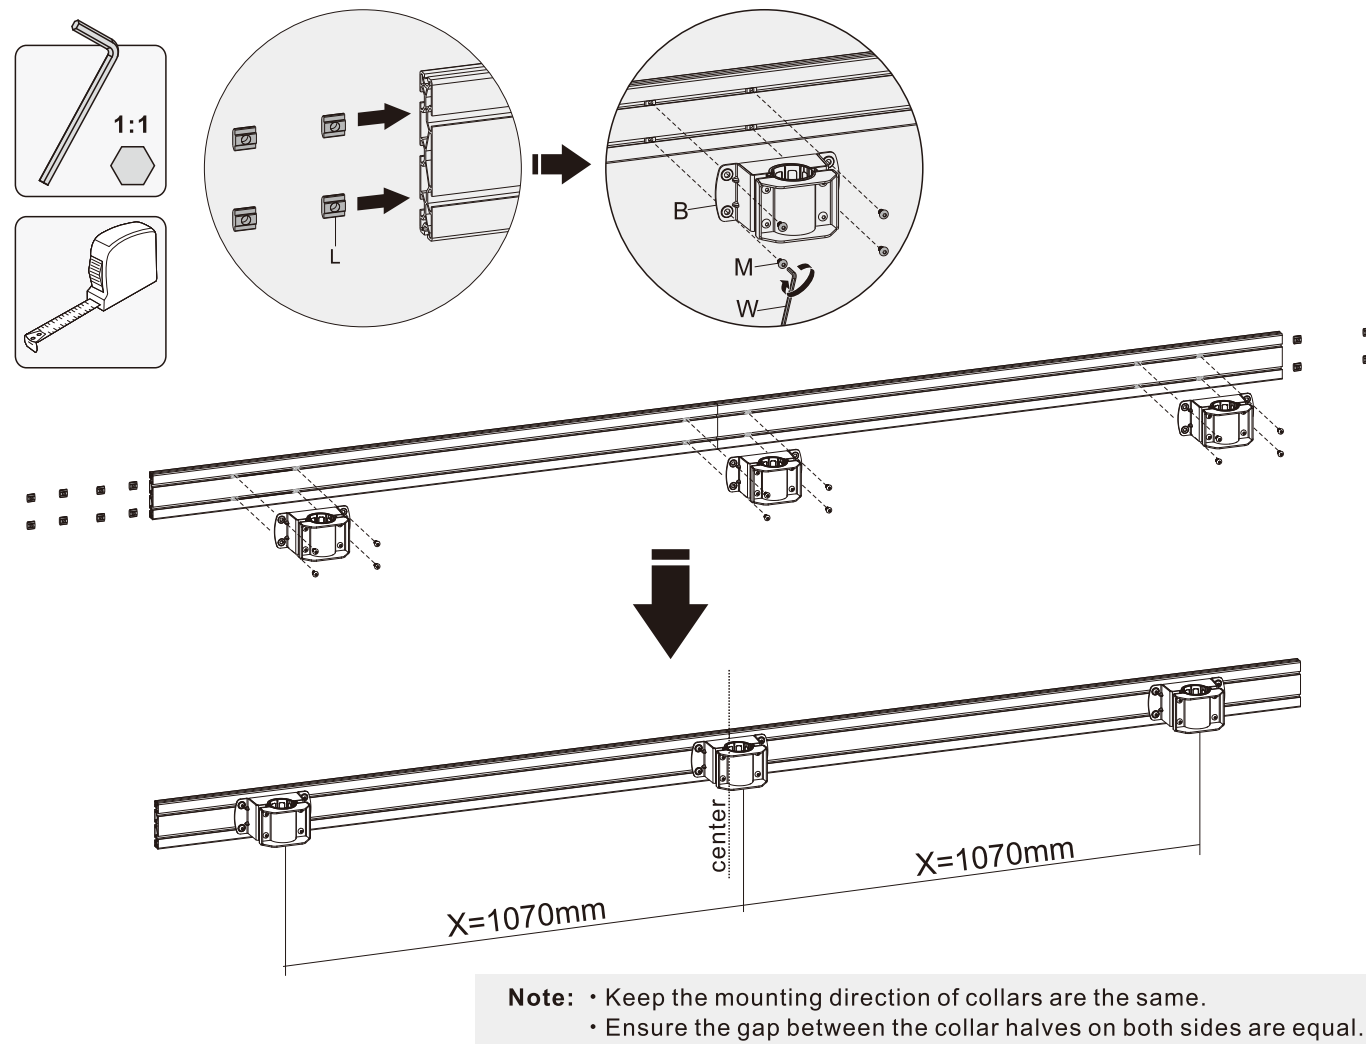



5. Install the End Cap

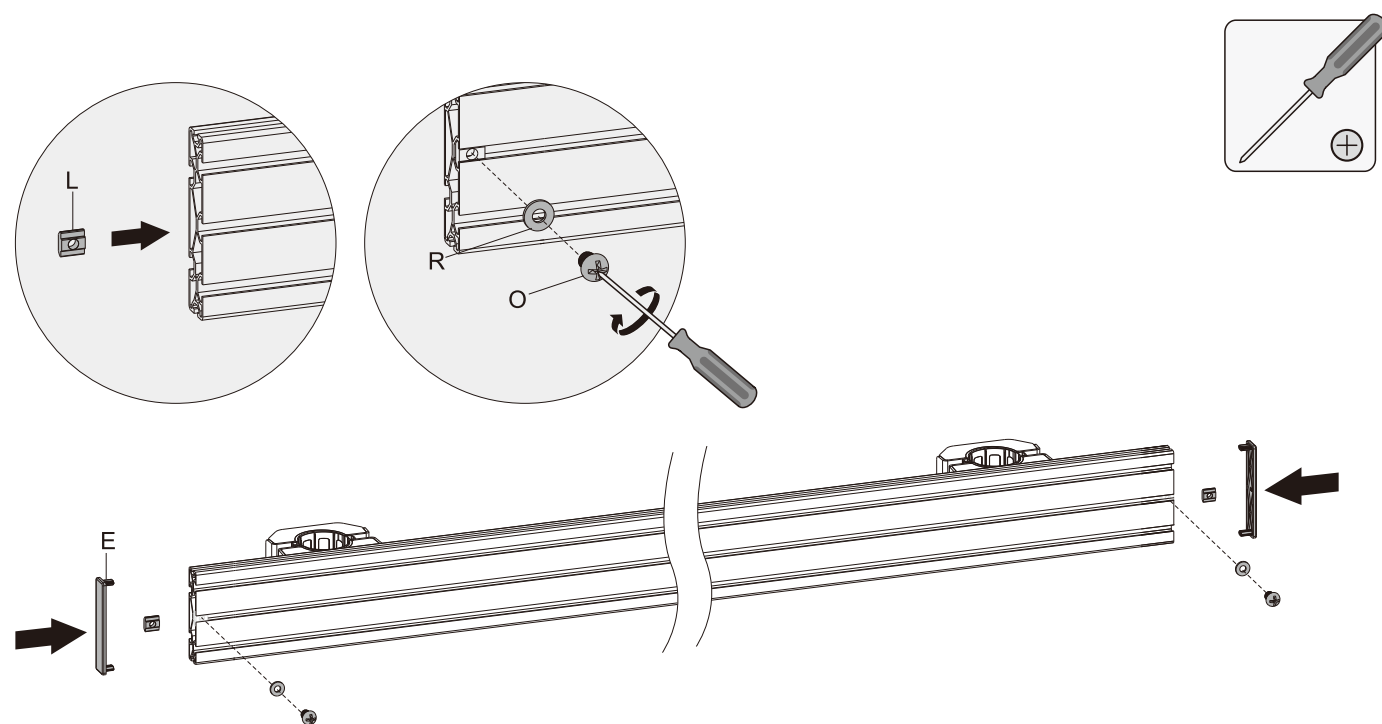


6. Attach Mounting Rail to Pole

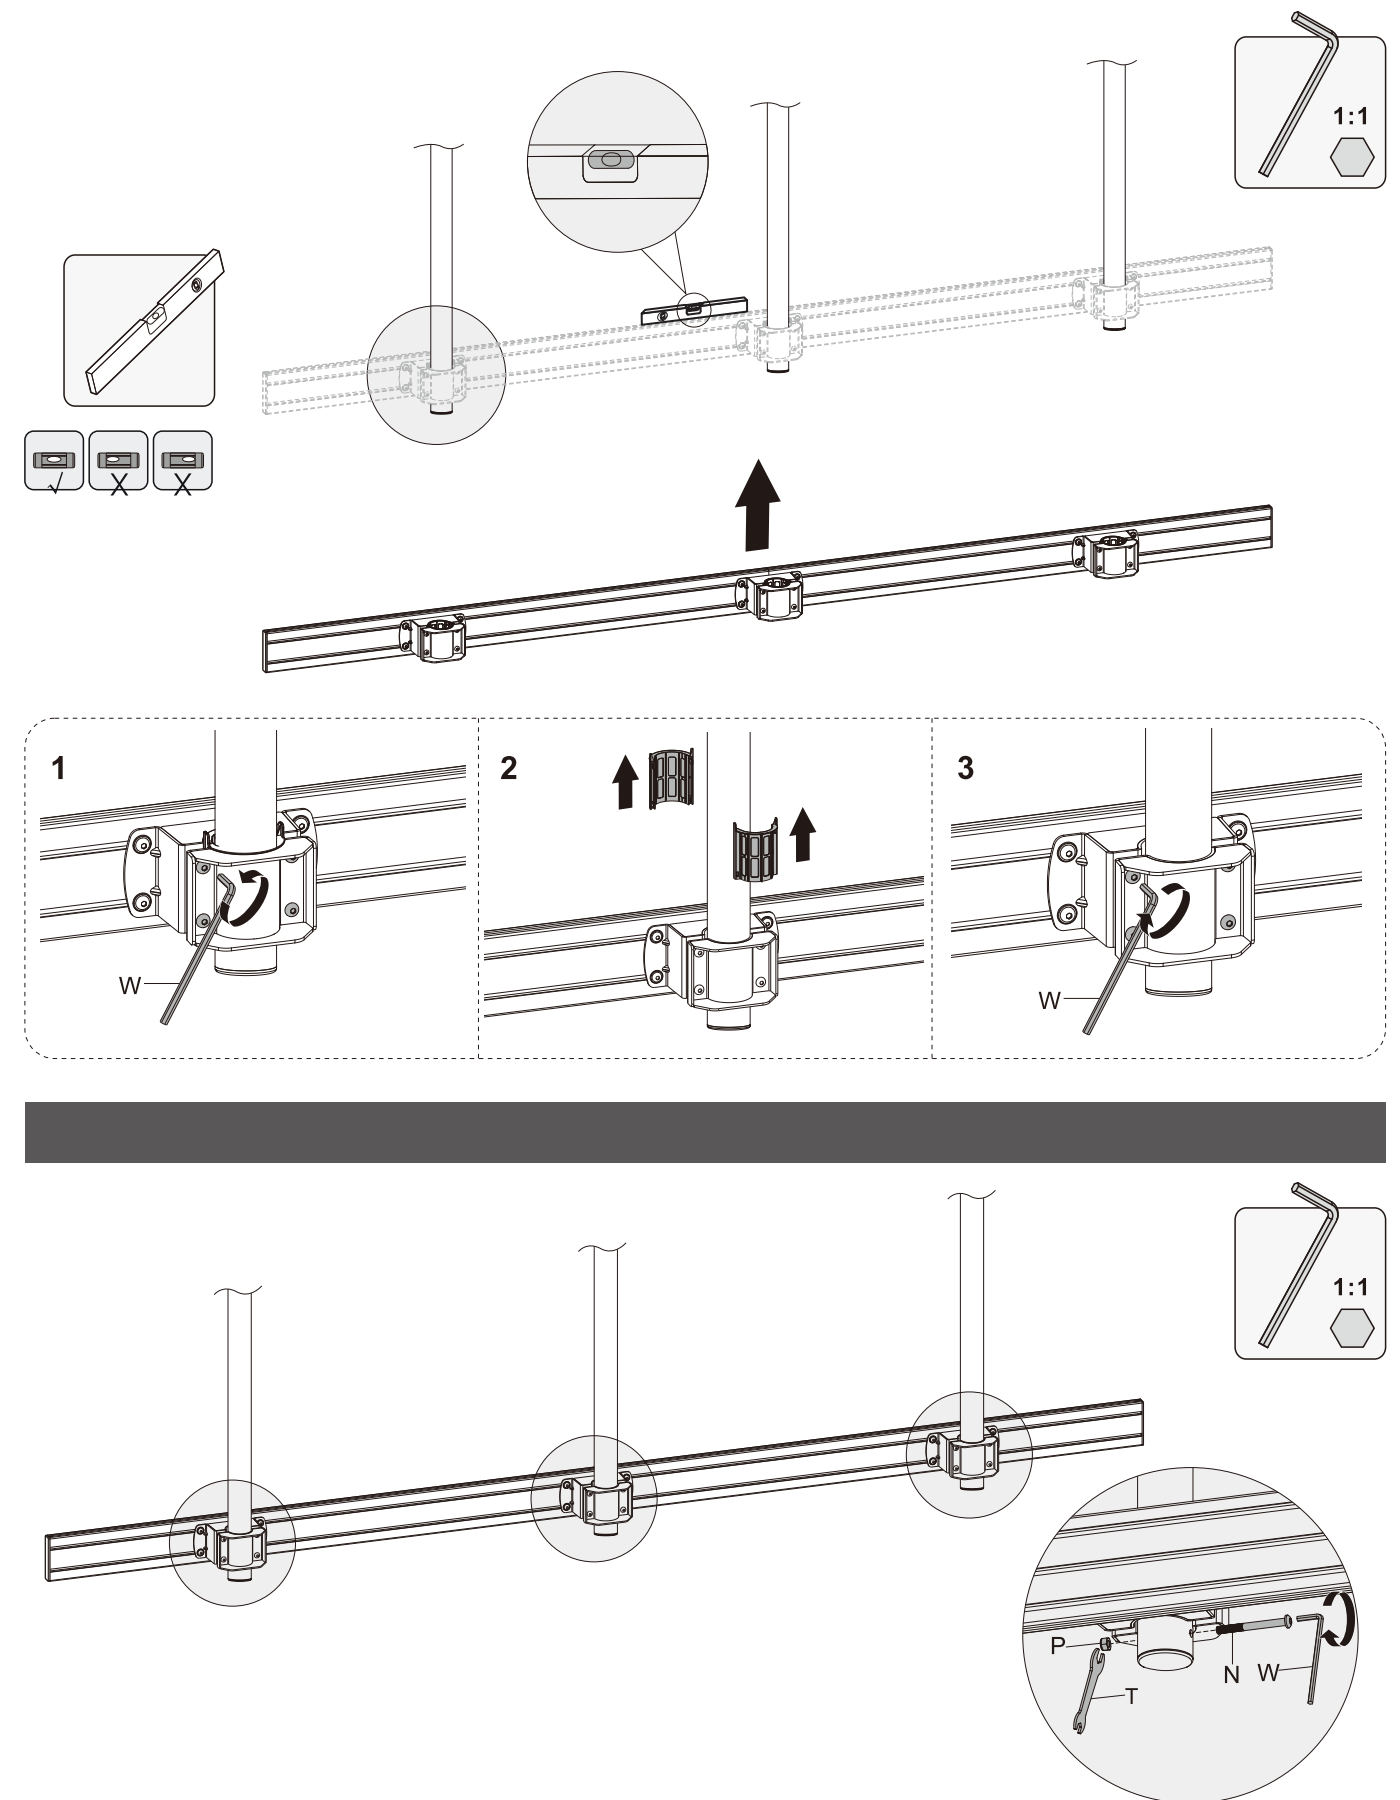

7. Install the Plastic Cover

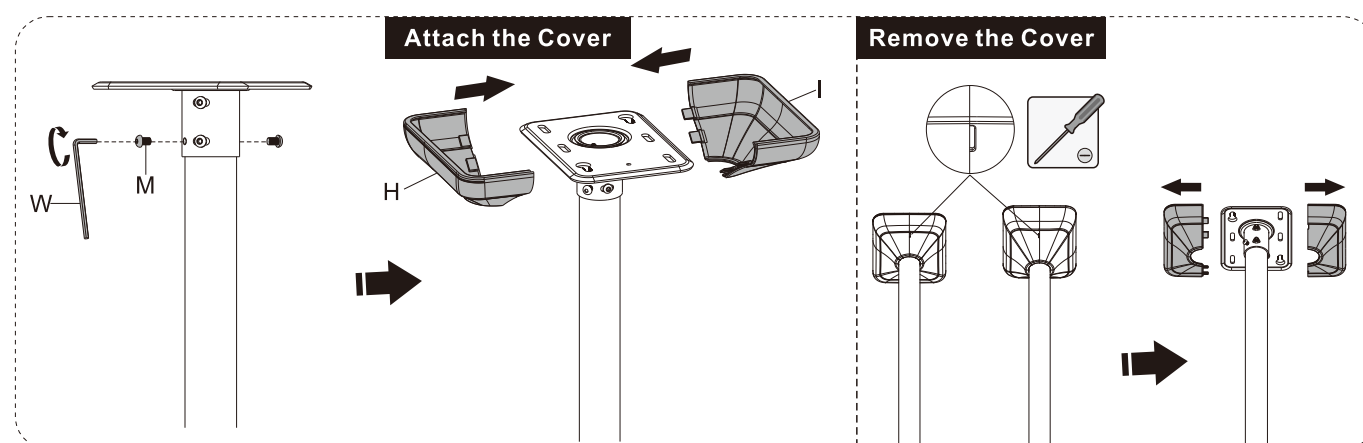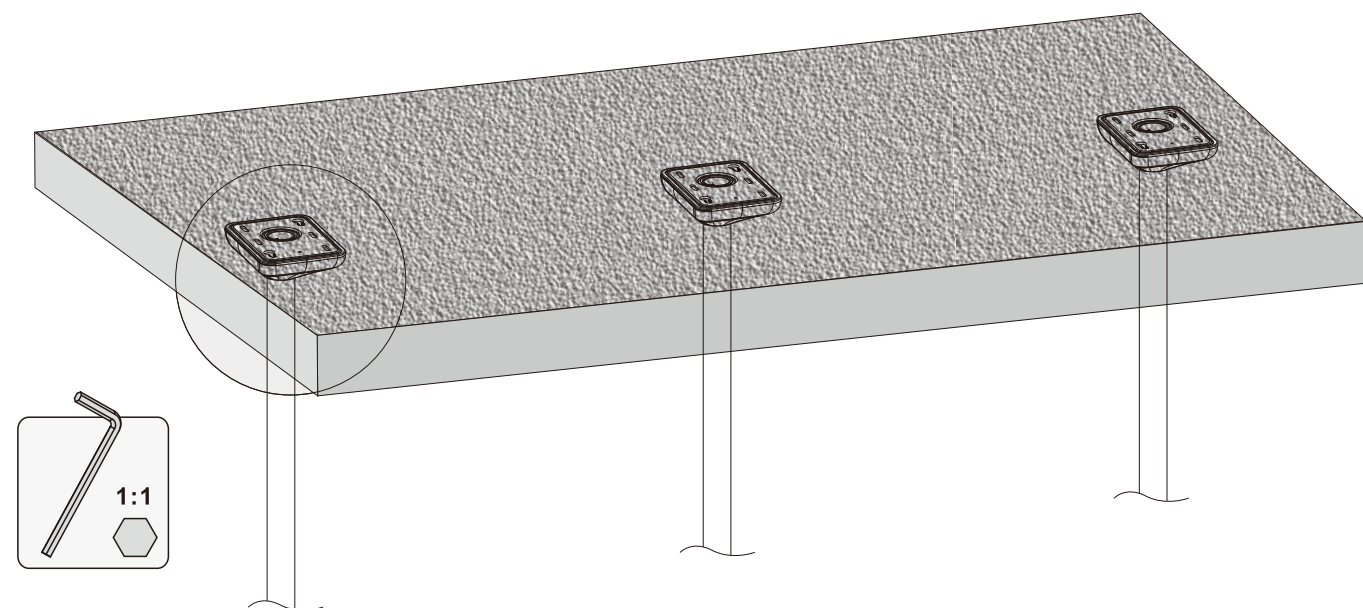


8. Tilt Adjustment

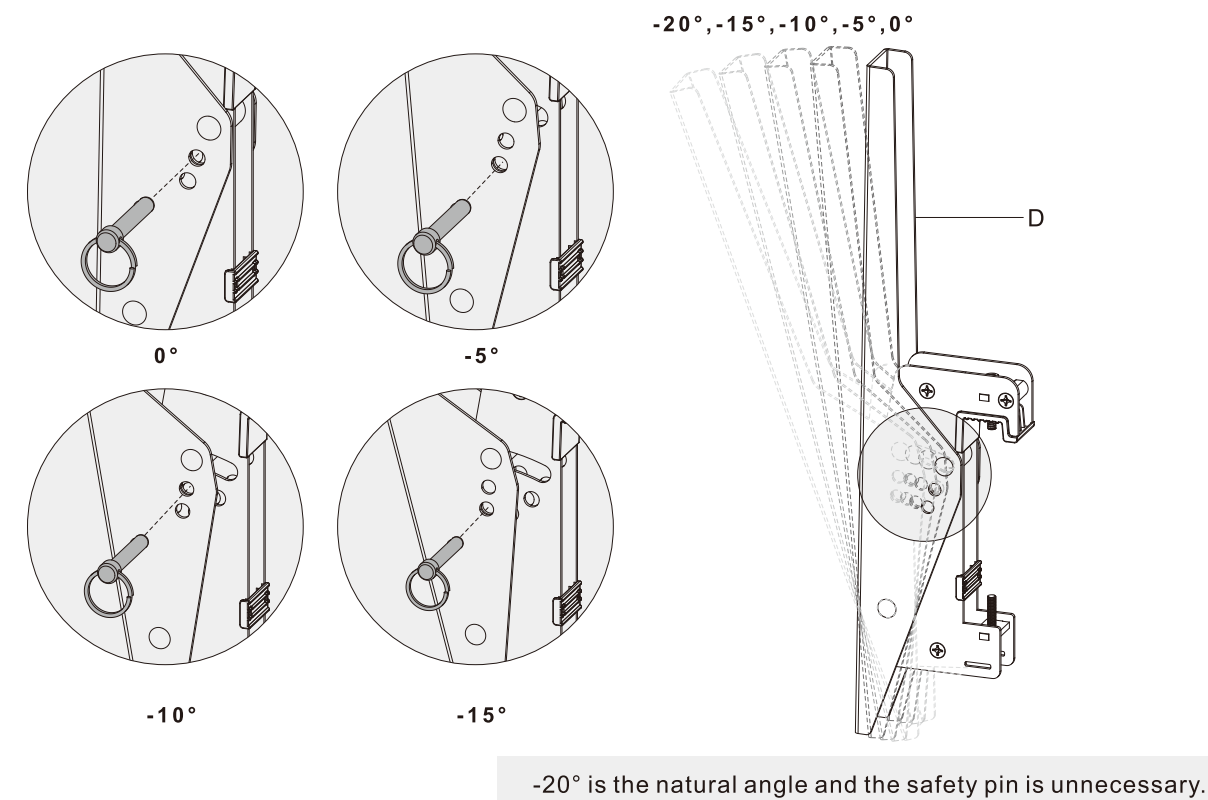


9. Attach TV Bracket


Position the adapter brackets as close as possible to the center of the display.

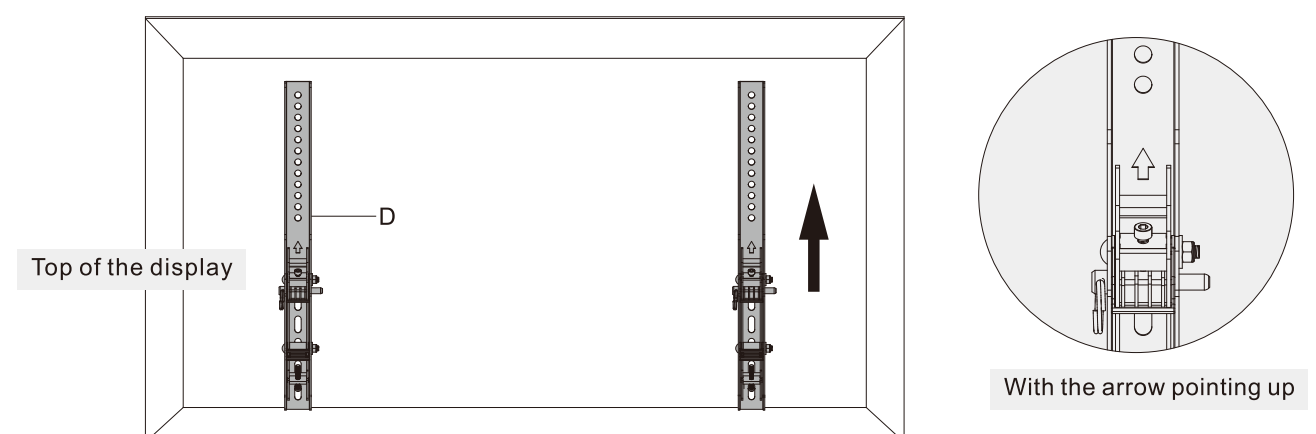

9a. Attach TV Bracket to Flat Back Screen

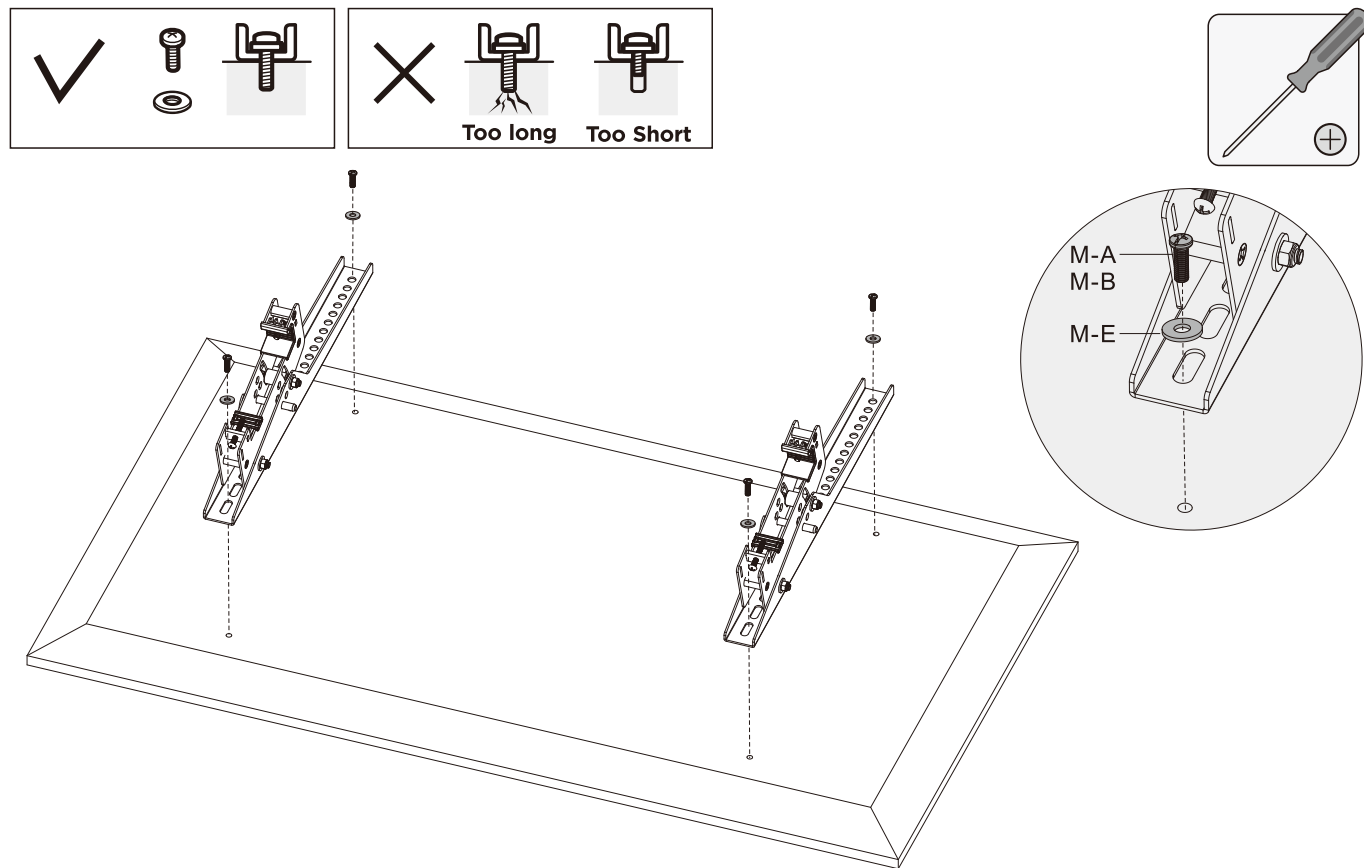


9b. Attach TV Bracket to Irregular Back Screen

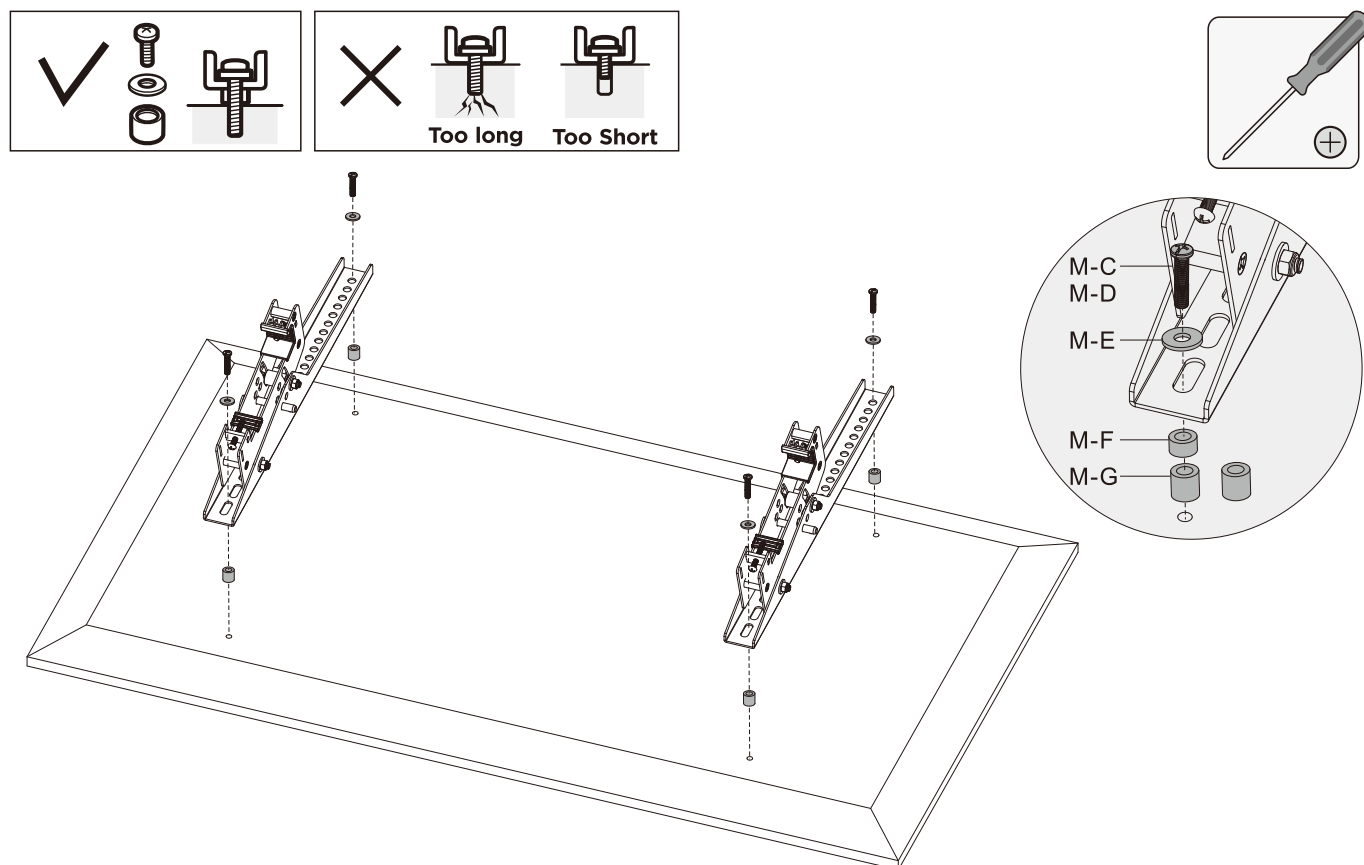

Note: Choose the appropriate screws, washers and spacers (if necessary) according to the type of screen.


⚠ Do not overtighten screws.

10. Hang the Screen

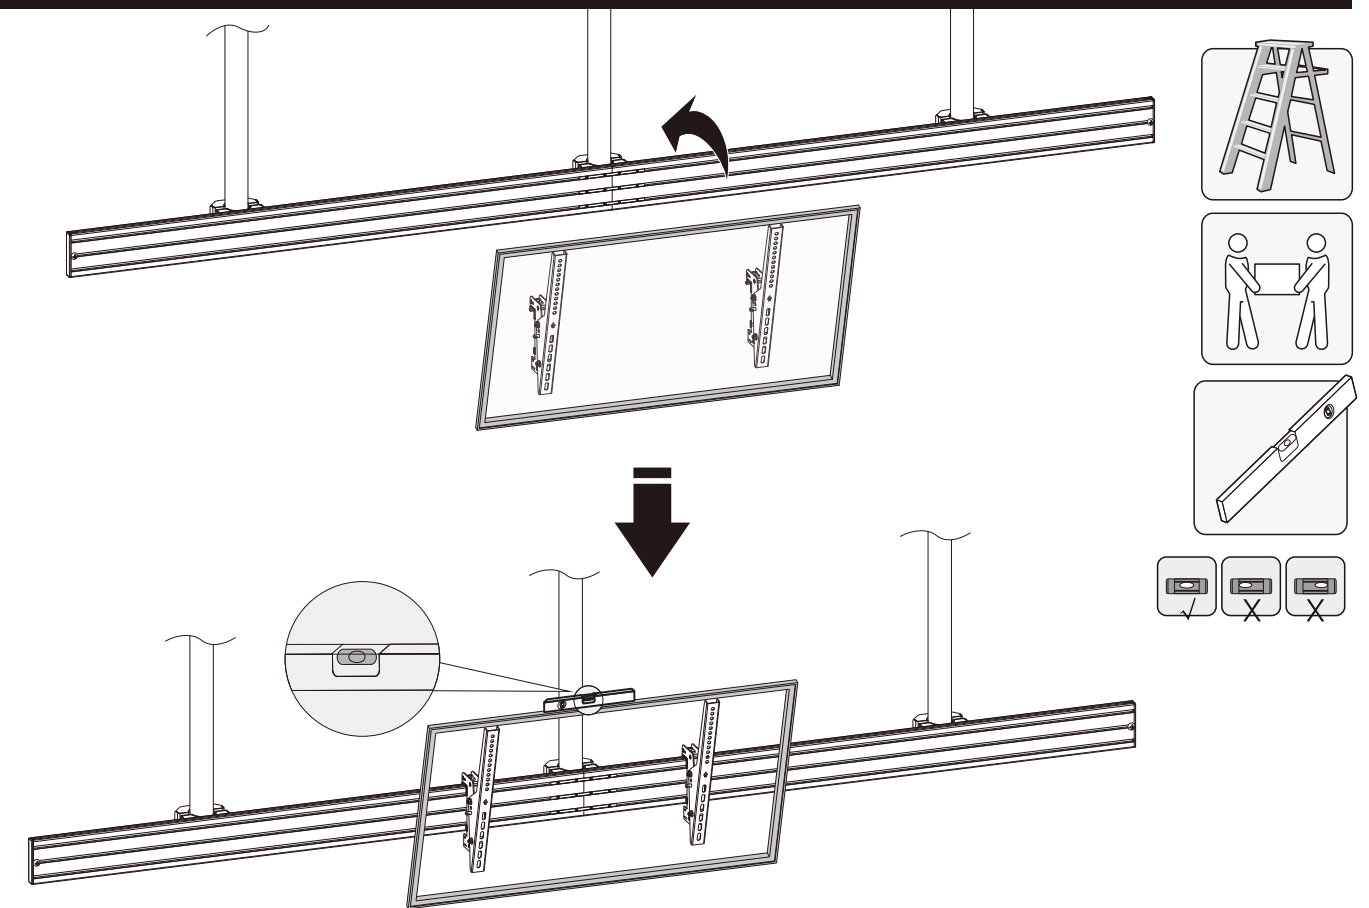

11. Secure with Padlock

Note: Leave at least 1mm gap between screens.

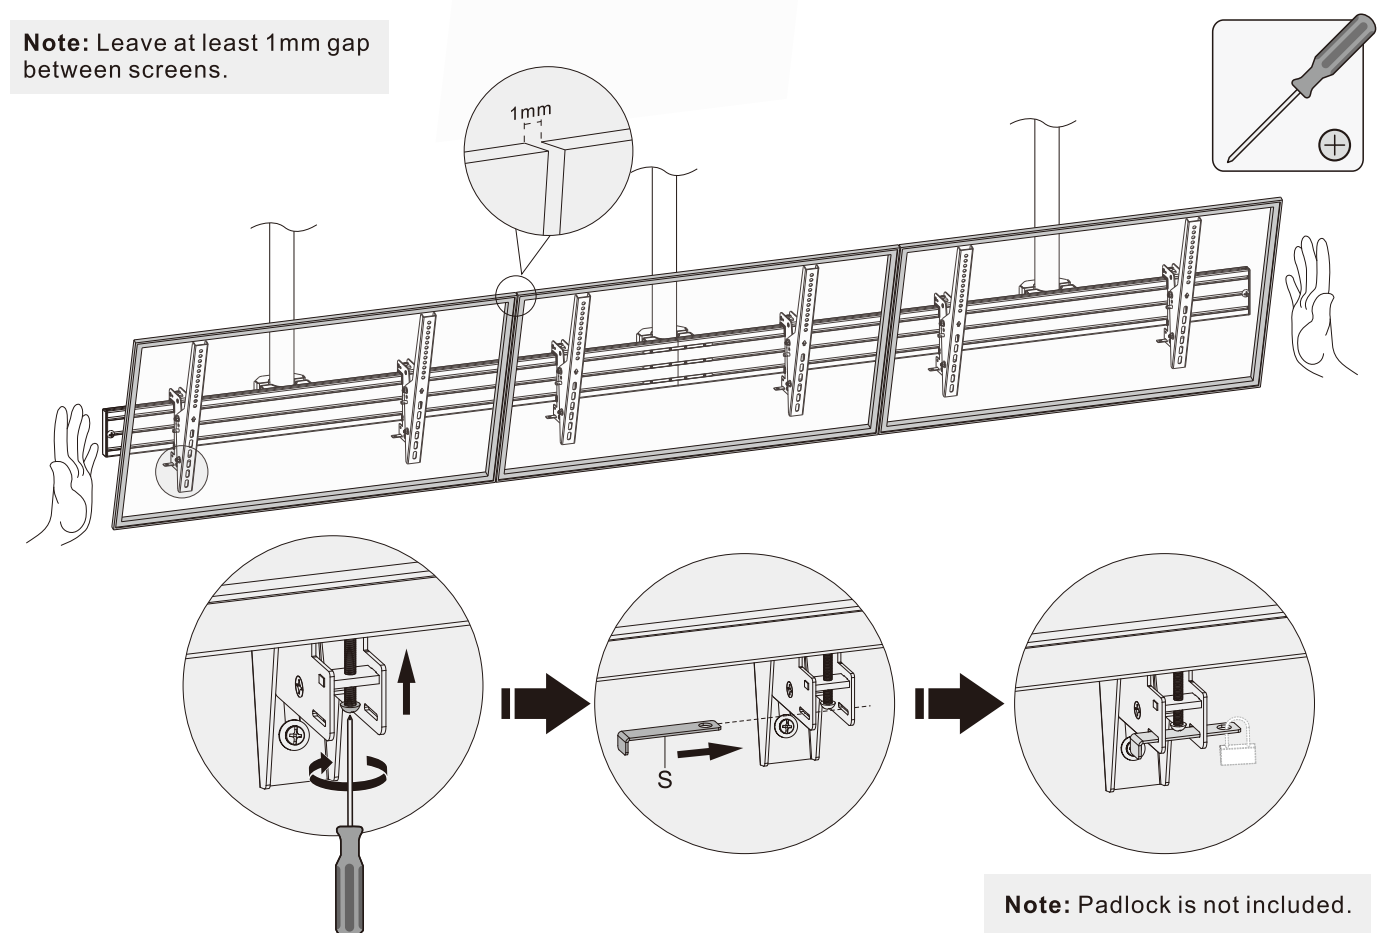

Note: Padlock is not included.