

Function display

9

0~90° flip

Headphone hook

Bag hook

When you need to adjust the angle of the table, press and hold the button.

Front

Cup holder

Flip up the tab on the front end of the desk when using the desk at an angle, to keep devices from sliding off the desk.

Press and hold the button when you need to lift up and down


Lockable caster

Front



Warning: When the ground is uneven and you feel the table is shaking, please adjust the wheels to make it flat.

Height adjustable mobile desk





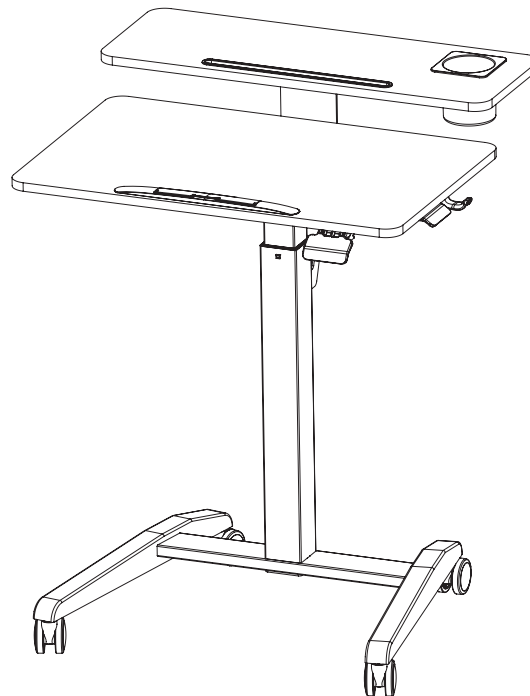




Desktop Max.load 8kgs/17.6lbs





Installation

INSTRUCTIONS

 PARTS INCLUDED

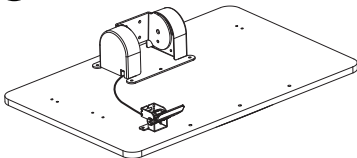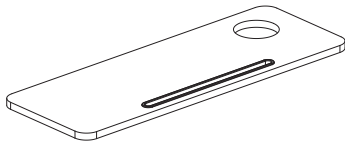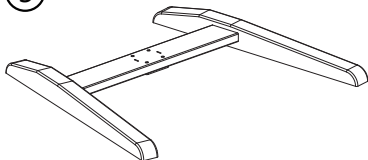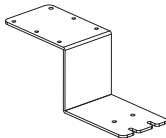
①  (x1)	②  (x1)		
③  (x1)	④  (x1)		
⑤  (x1)	⑥  (x2)	⑦  (x1)	
 M5x12(X12) A	 M6x40(X4) B	 M6x20(x4) C	 (x4) D
 (x1) E	 S=5mm(x1) F		

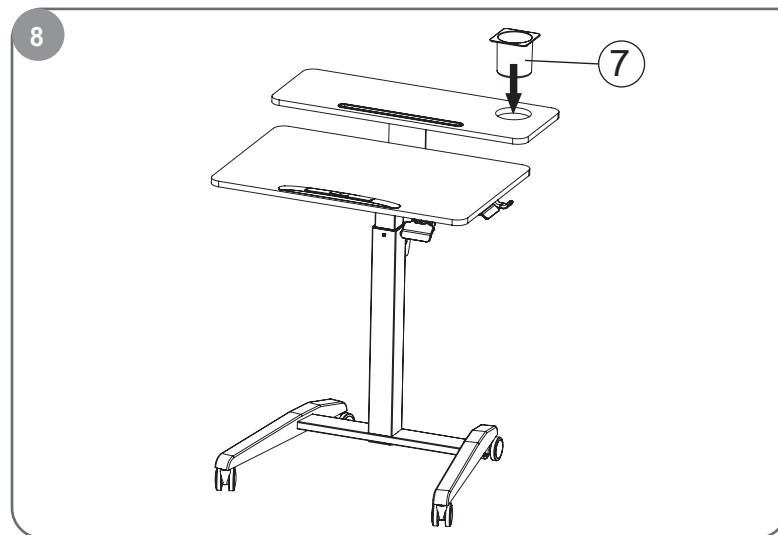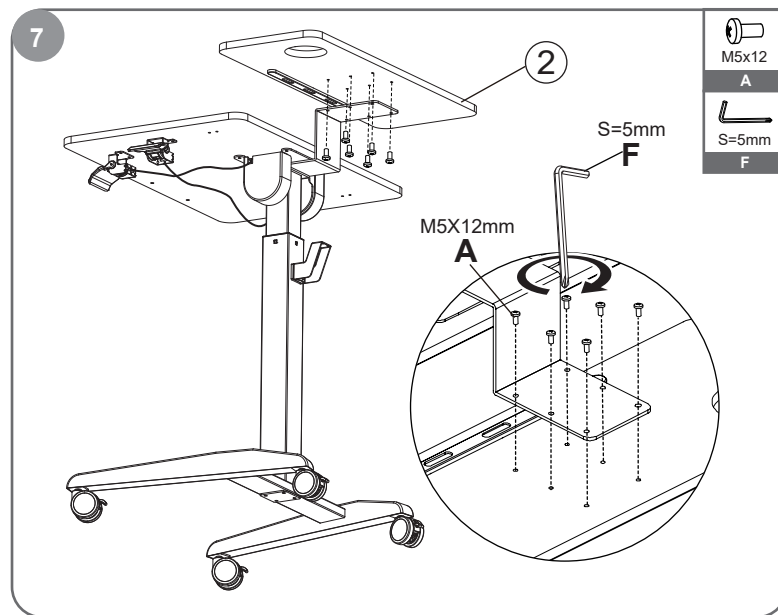

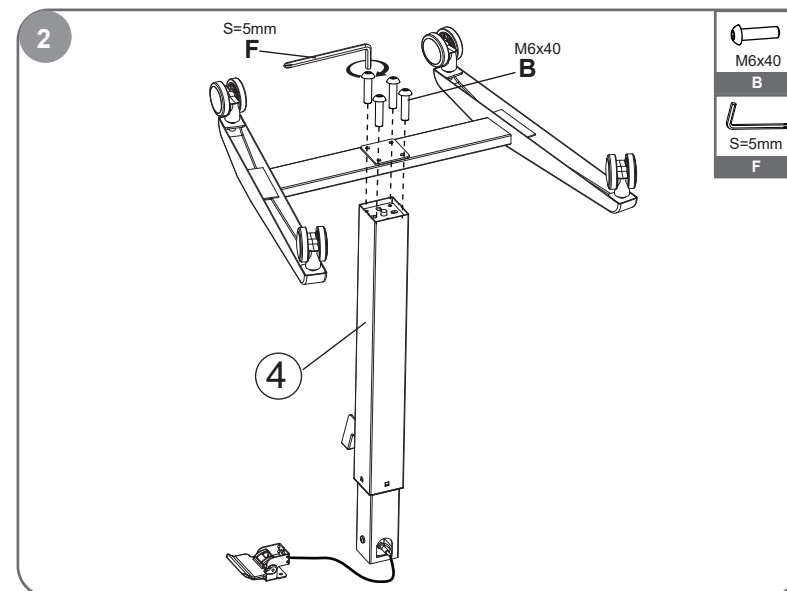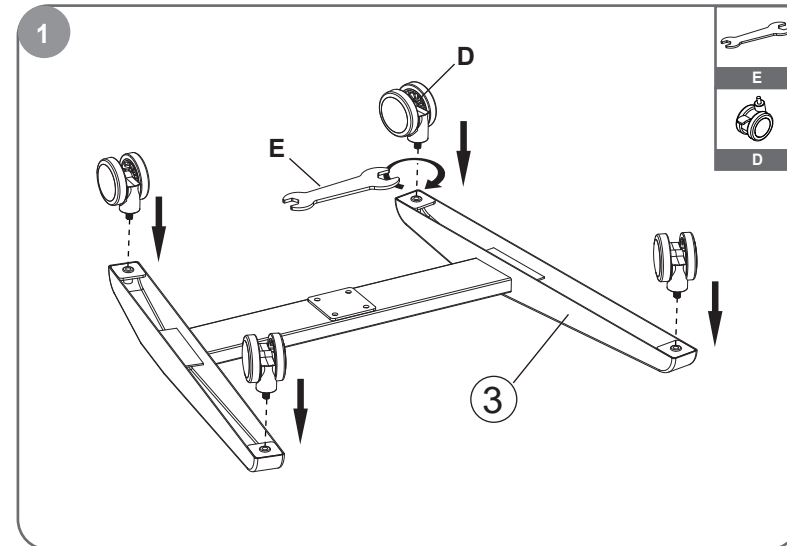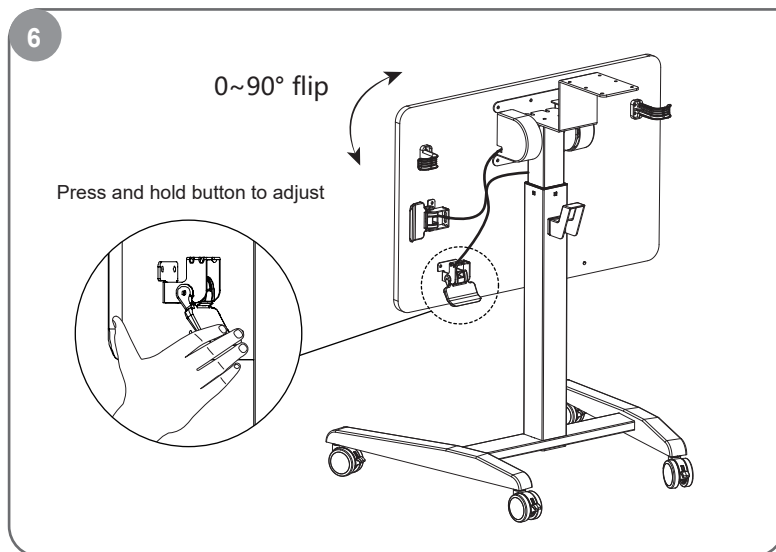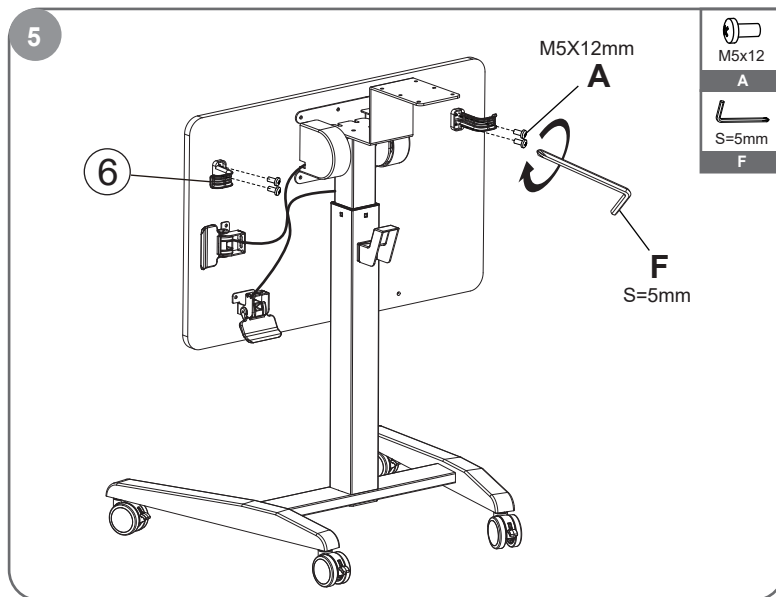

3

Screw in about 3mm first,
do not tighten.

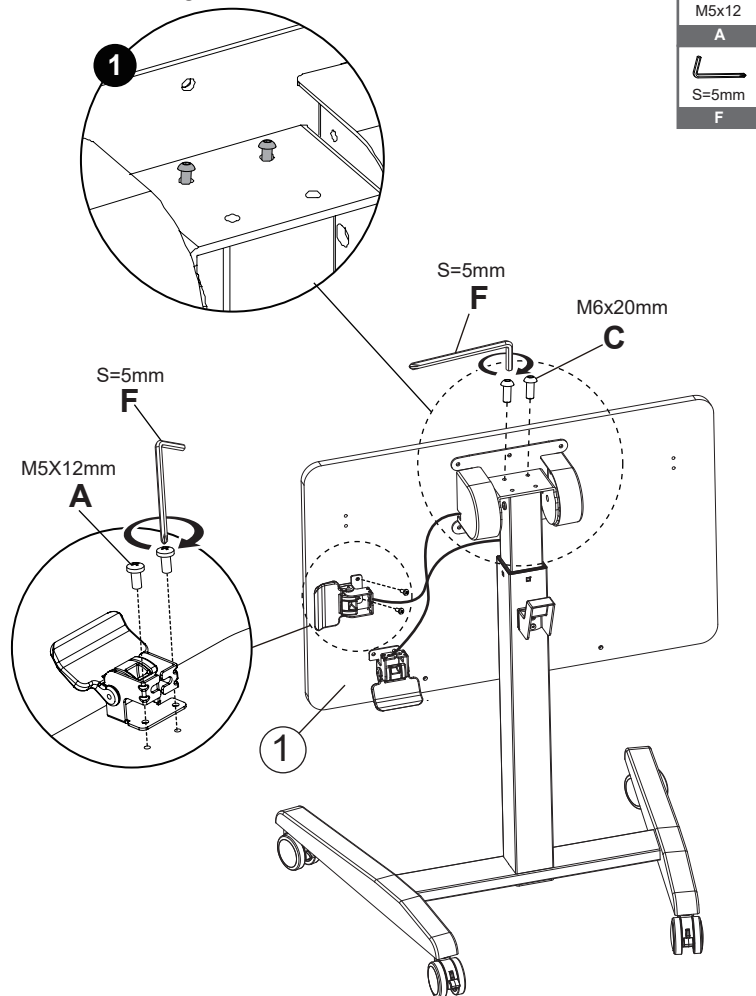

4

The screw is inserted into the
sheet metal groove and tightened.

