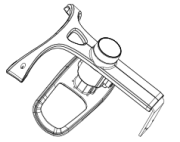
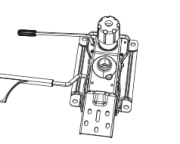
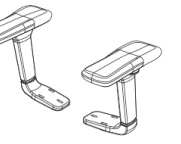
 
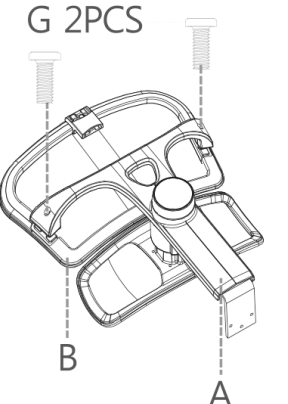
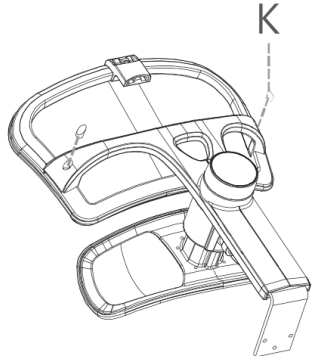
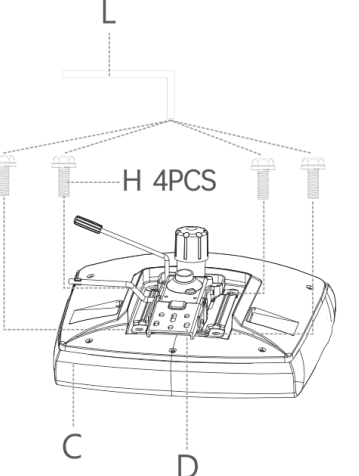
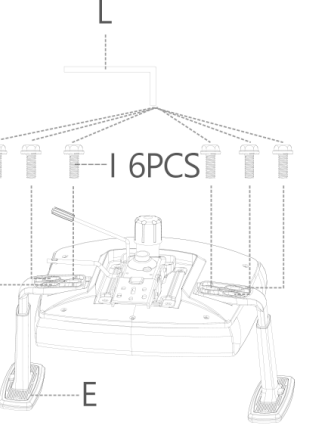
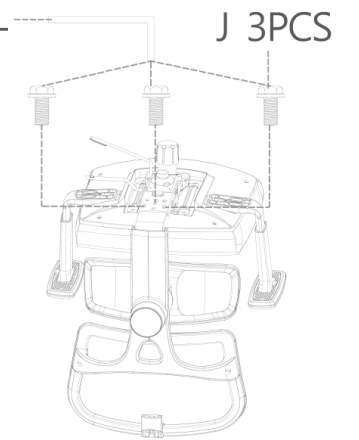
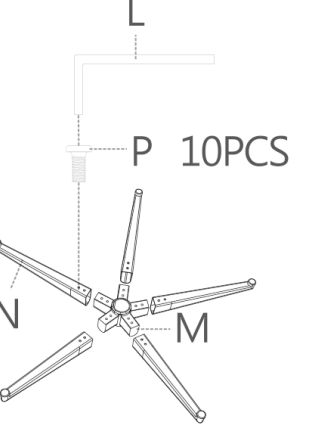
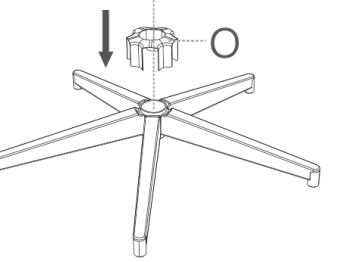
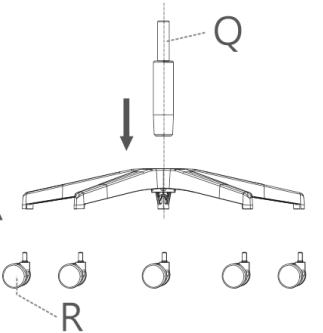
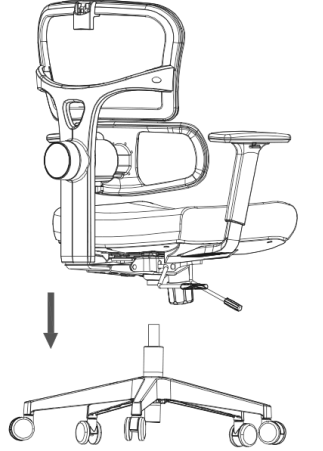
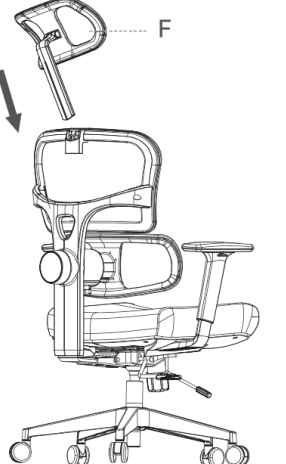


USER MANUAL




PARTS LIST

A  1PC	B  1PC	C  1PC
D  1PC	E  1SET	F  1PC
G  M6*16mm 2PCS	H  M6*35mm 4PCS	I  M6*35mm 6PCS
J  M8*16mm 3PCS	K  1SET	L  1PC
M  1PC	N  1PC	O  1PCS
P  M6*12mm 10PCS	Q  1PC	R  5PCS

INSTALLTION GUIDE

Step 1 Upper and Lower Backrest Assembling 	Step 2 Backrest Screw Cover Assembling 	Step 3 Mechanism Assembling 	Step 4 Armrest Assembling 
Step 5 Backrest Bracket Assembling 	Step 6 Base Assembling 	Step 7 Base Cover Assembling 	Step 8 Gas Lift Assemb Wheels Assemb 
Step 9 Put the Seat and Base Together 	Step 10 Headrest Assembling 		

ADJUSTMENT INSTRUCTIONS

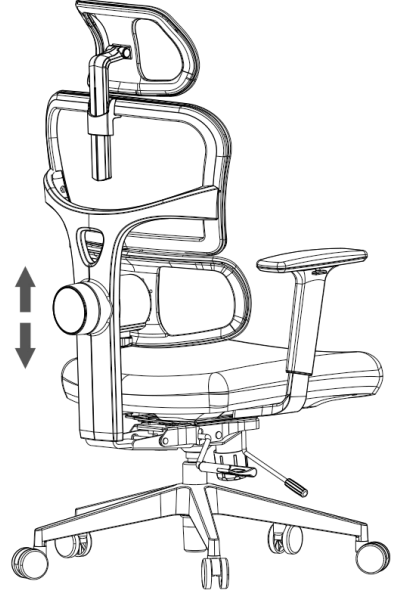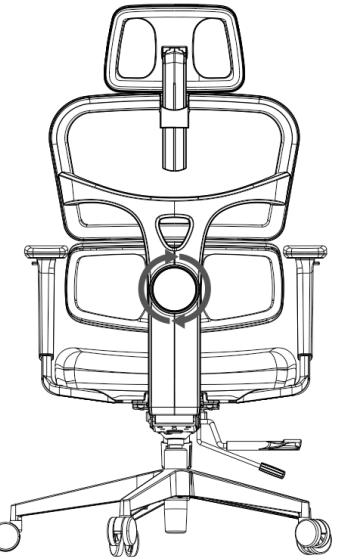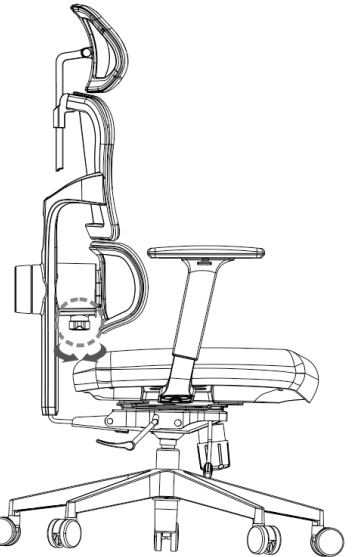Seat Back Tilt Adjustment 	Seat Depth Adjustment 	Seat Back Height Adjustment 	Seat Height Adjustment 	Armrest Adjustment Regulacja podłokietników 
Lumbar Support Strength Adjustment 	Lumbar Support Lock /Unlock Function 	Backward Tilt Strength Adjustment 	Headrest Adjustment 