

USER MANUAL




Standing Desk Chair STANDING-MATE




Parts List


(Note: Drawings are only for reference)

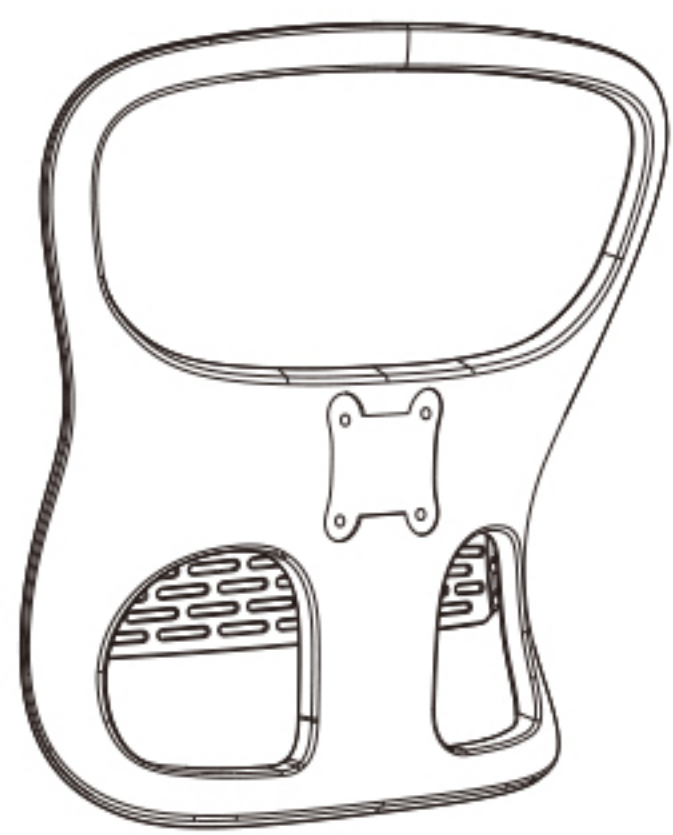

BACKREST x1

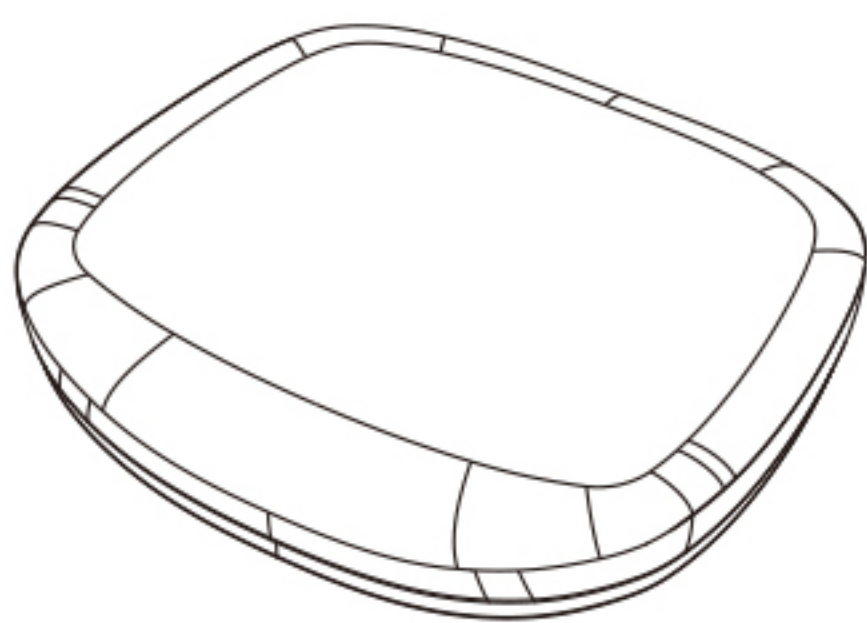


CHAIR SEAT x1

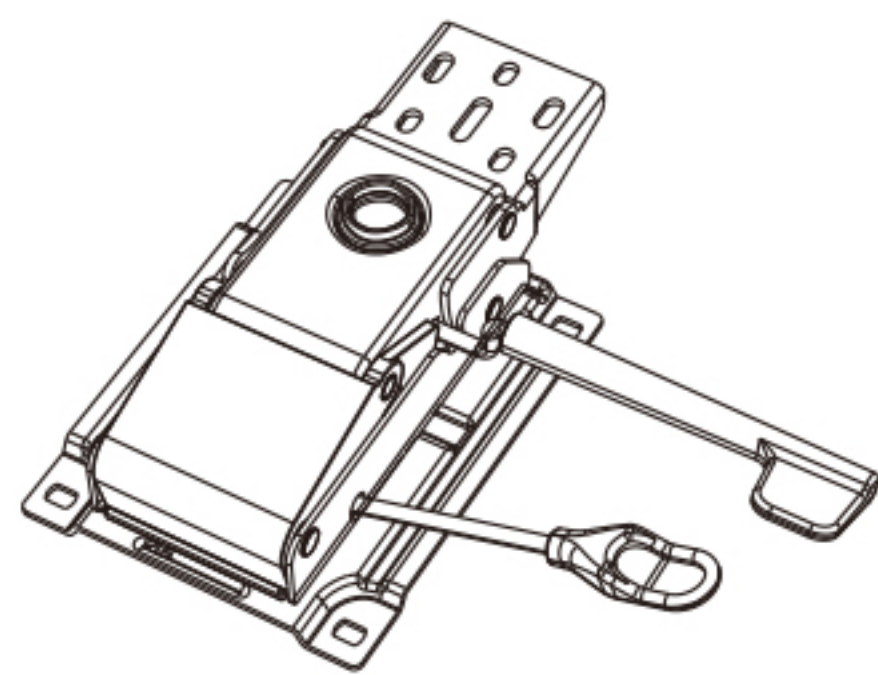


MECHANISM x1




BACKREST
BRACKET x1

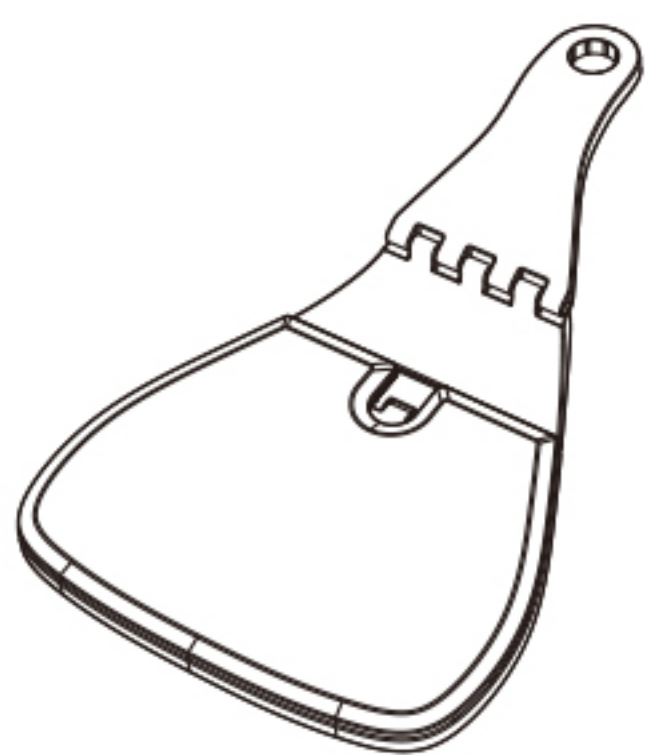


STANDING
MAT x1

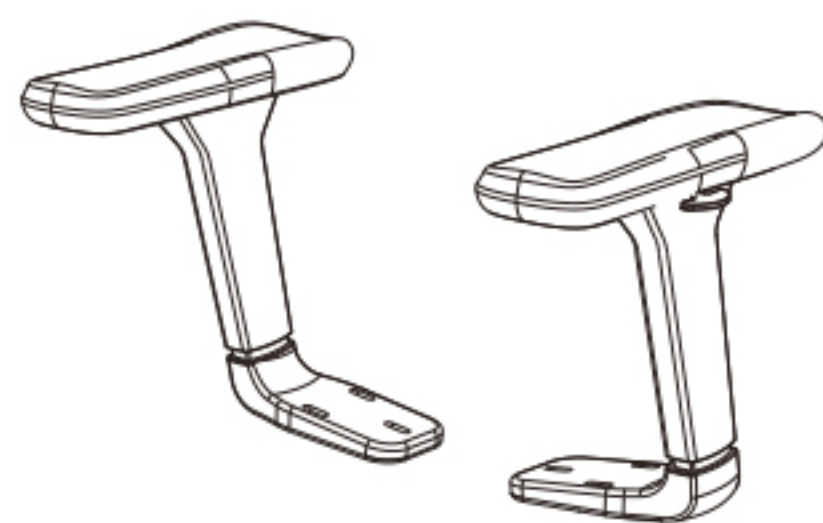

ARMREST x2

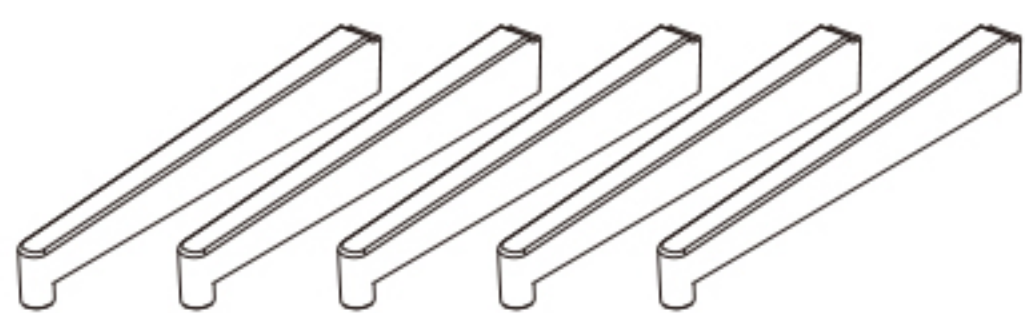


BASE PART 1 x5

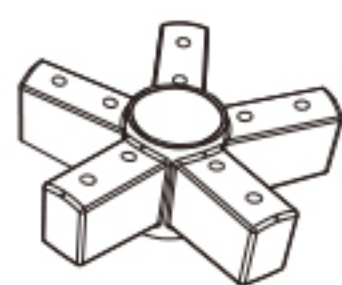

BASE PART 2 x1



BASE PART 3 x1

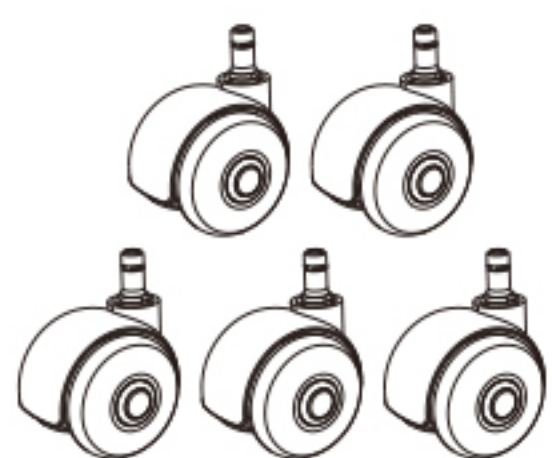

WHEELS x5



SCREWS COVER x1




GAS LIFT x1



BACKREST
BRACKET
SCREWS **x4**
M8*16mm



MECHANISM
SCREWS
PART 1 **x2**
M6*20mm

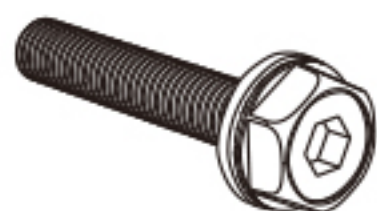


MECHANISM
SCREWS
PART 2 **x2**
M6*35mm



BACKREST
SCREWS **x4**
M6*20mm



BASE
SCREWS **x10**
M6*12mm

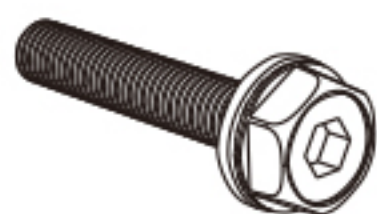


ARMREST
SCREWS **x6**
M6*35mm



ALLEN KEY **x2**

Installation Guide


1 Backrest Assembling

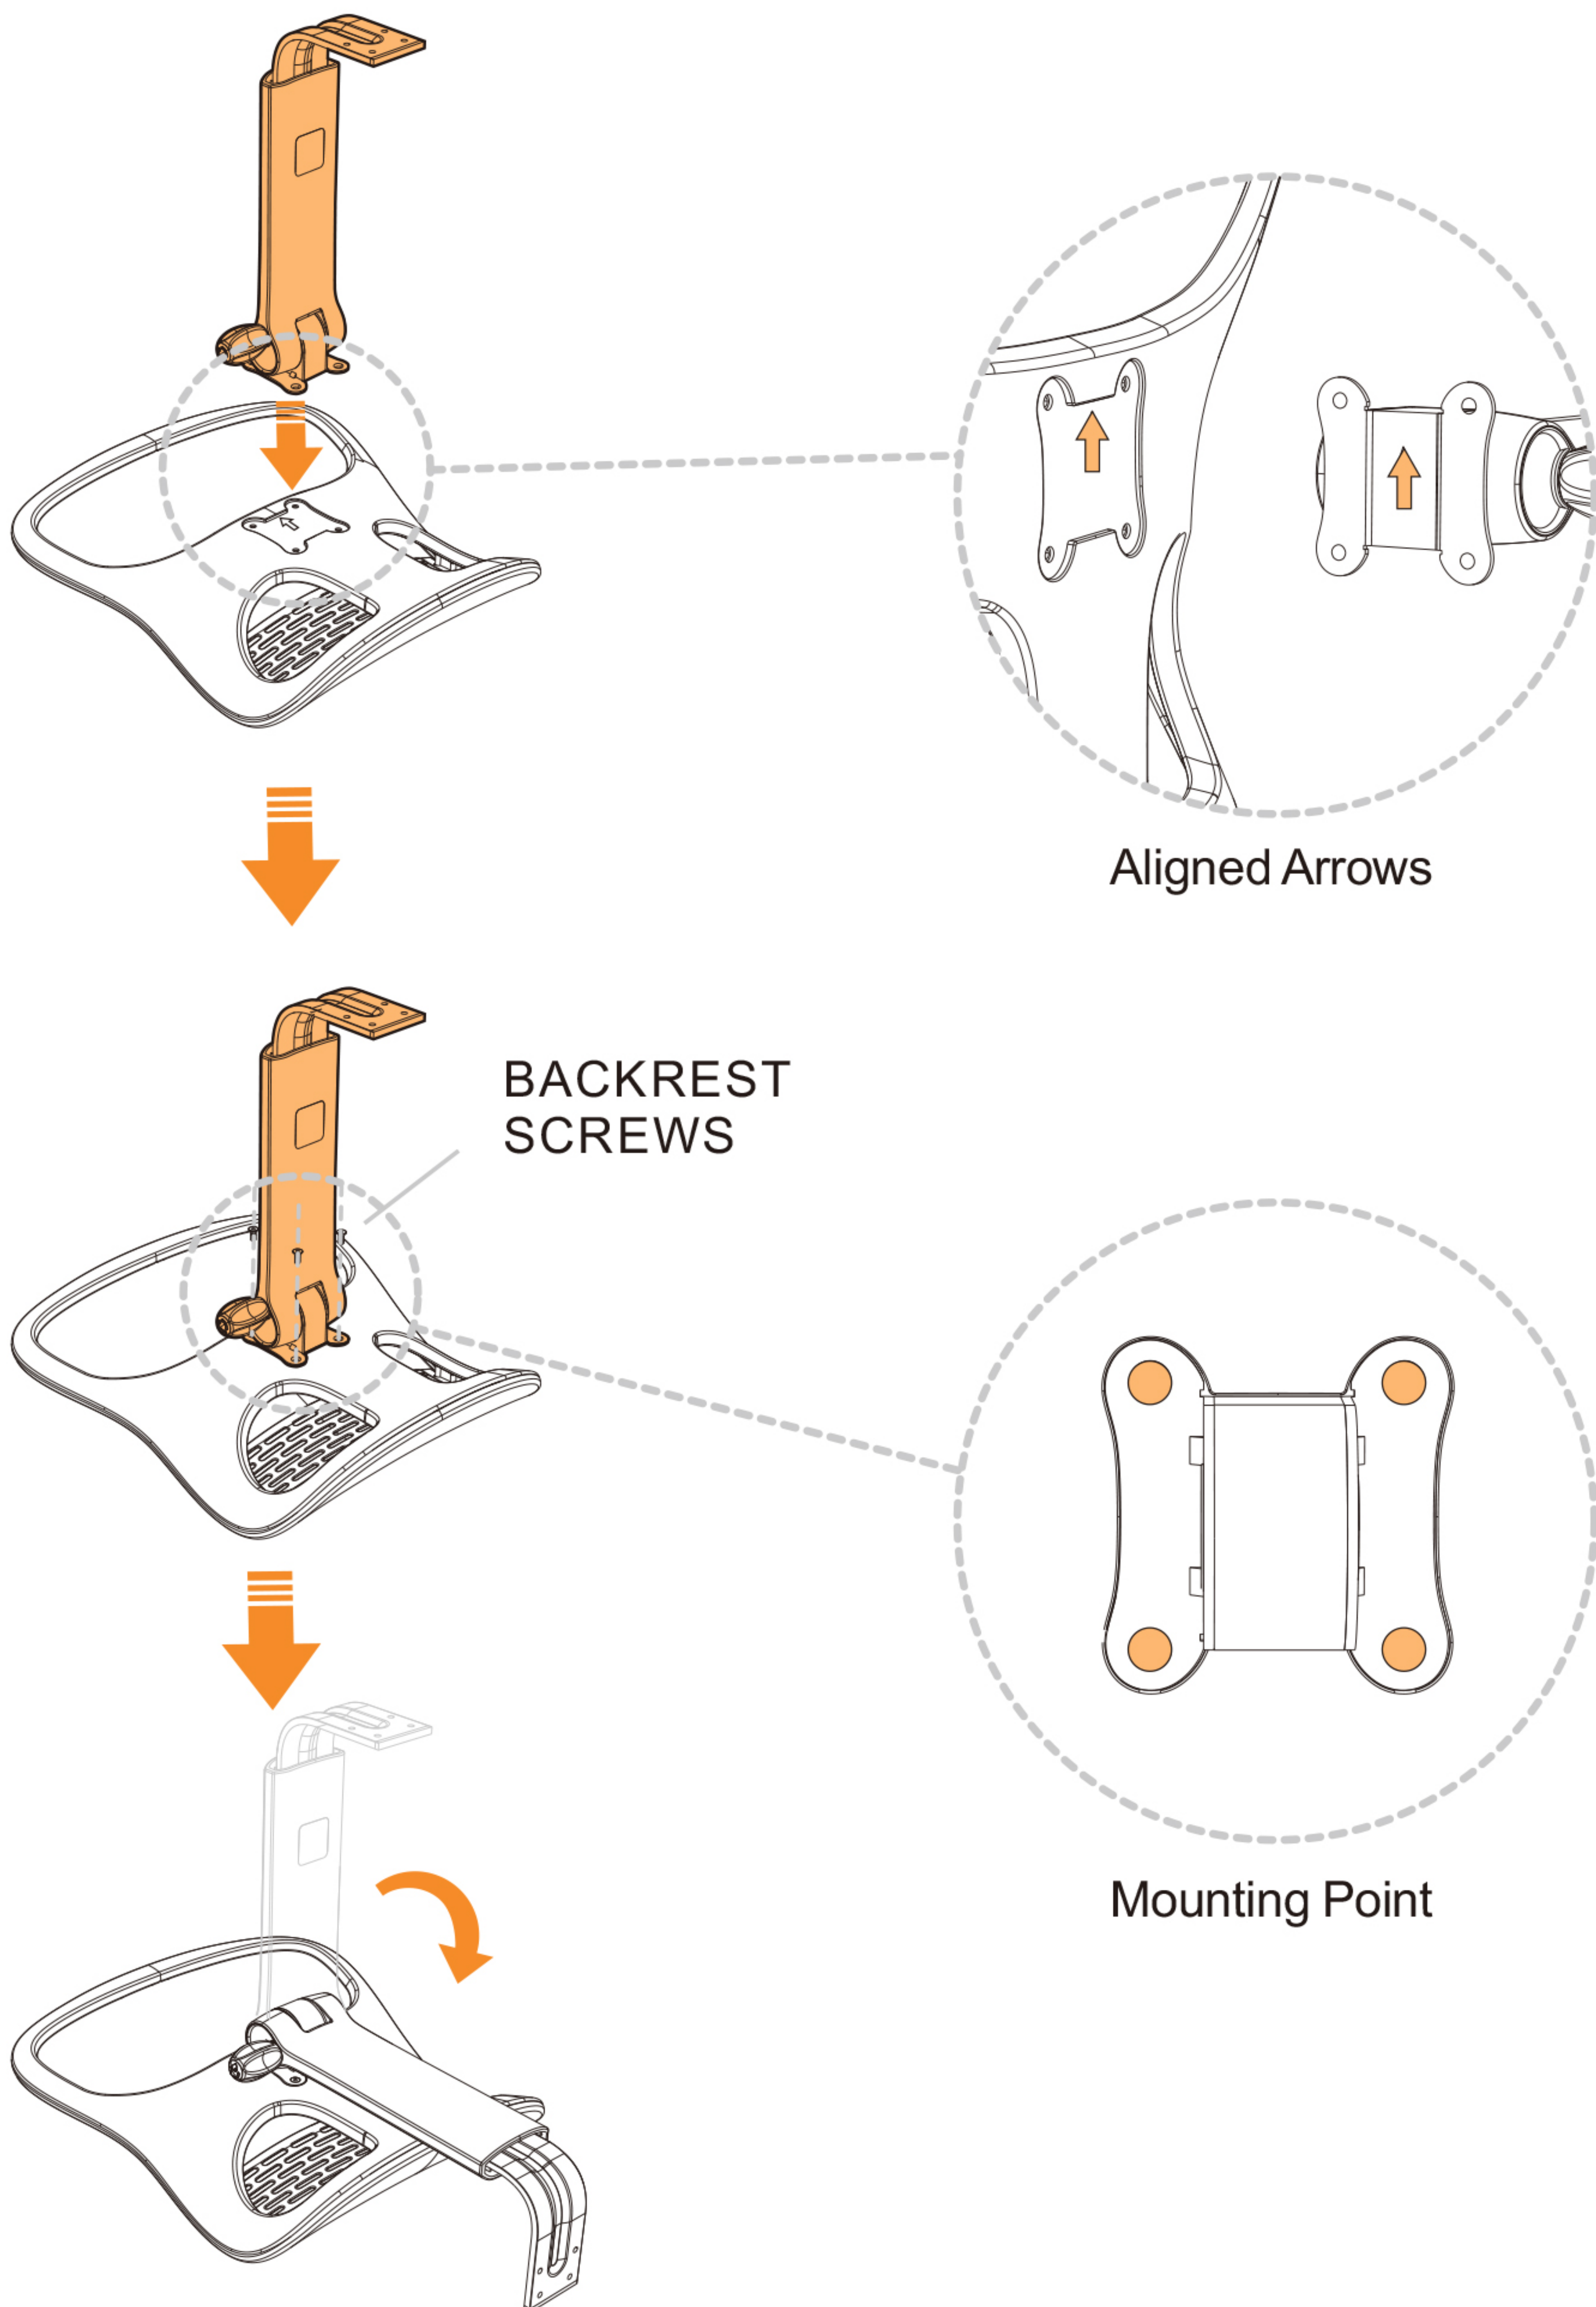

Orient & Align: Ensure the bracket is in the correct direction.
Secure : Fix the four (4) M6*20mm screws to complete assembly.
Rotate 90°: Flip the backrest bracket 90.

2

Mechanism Assembling

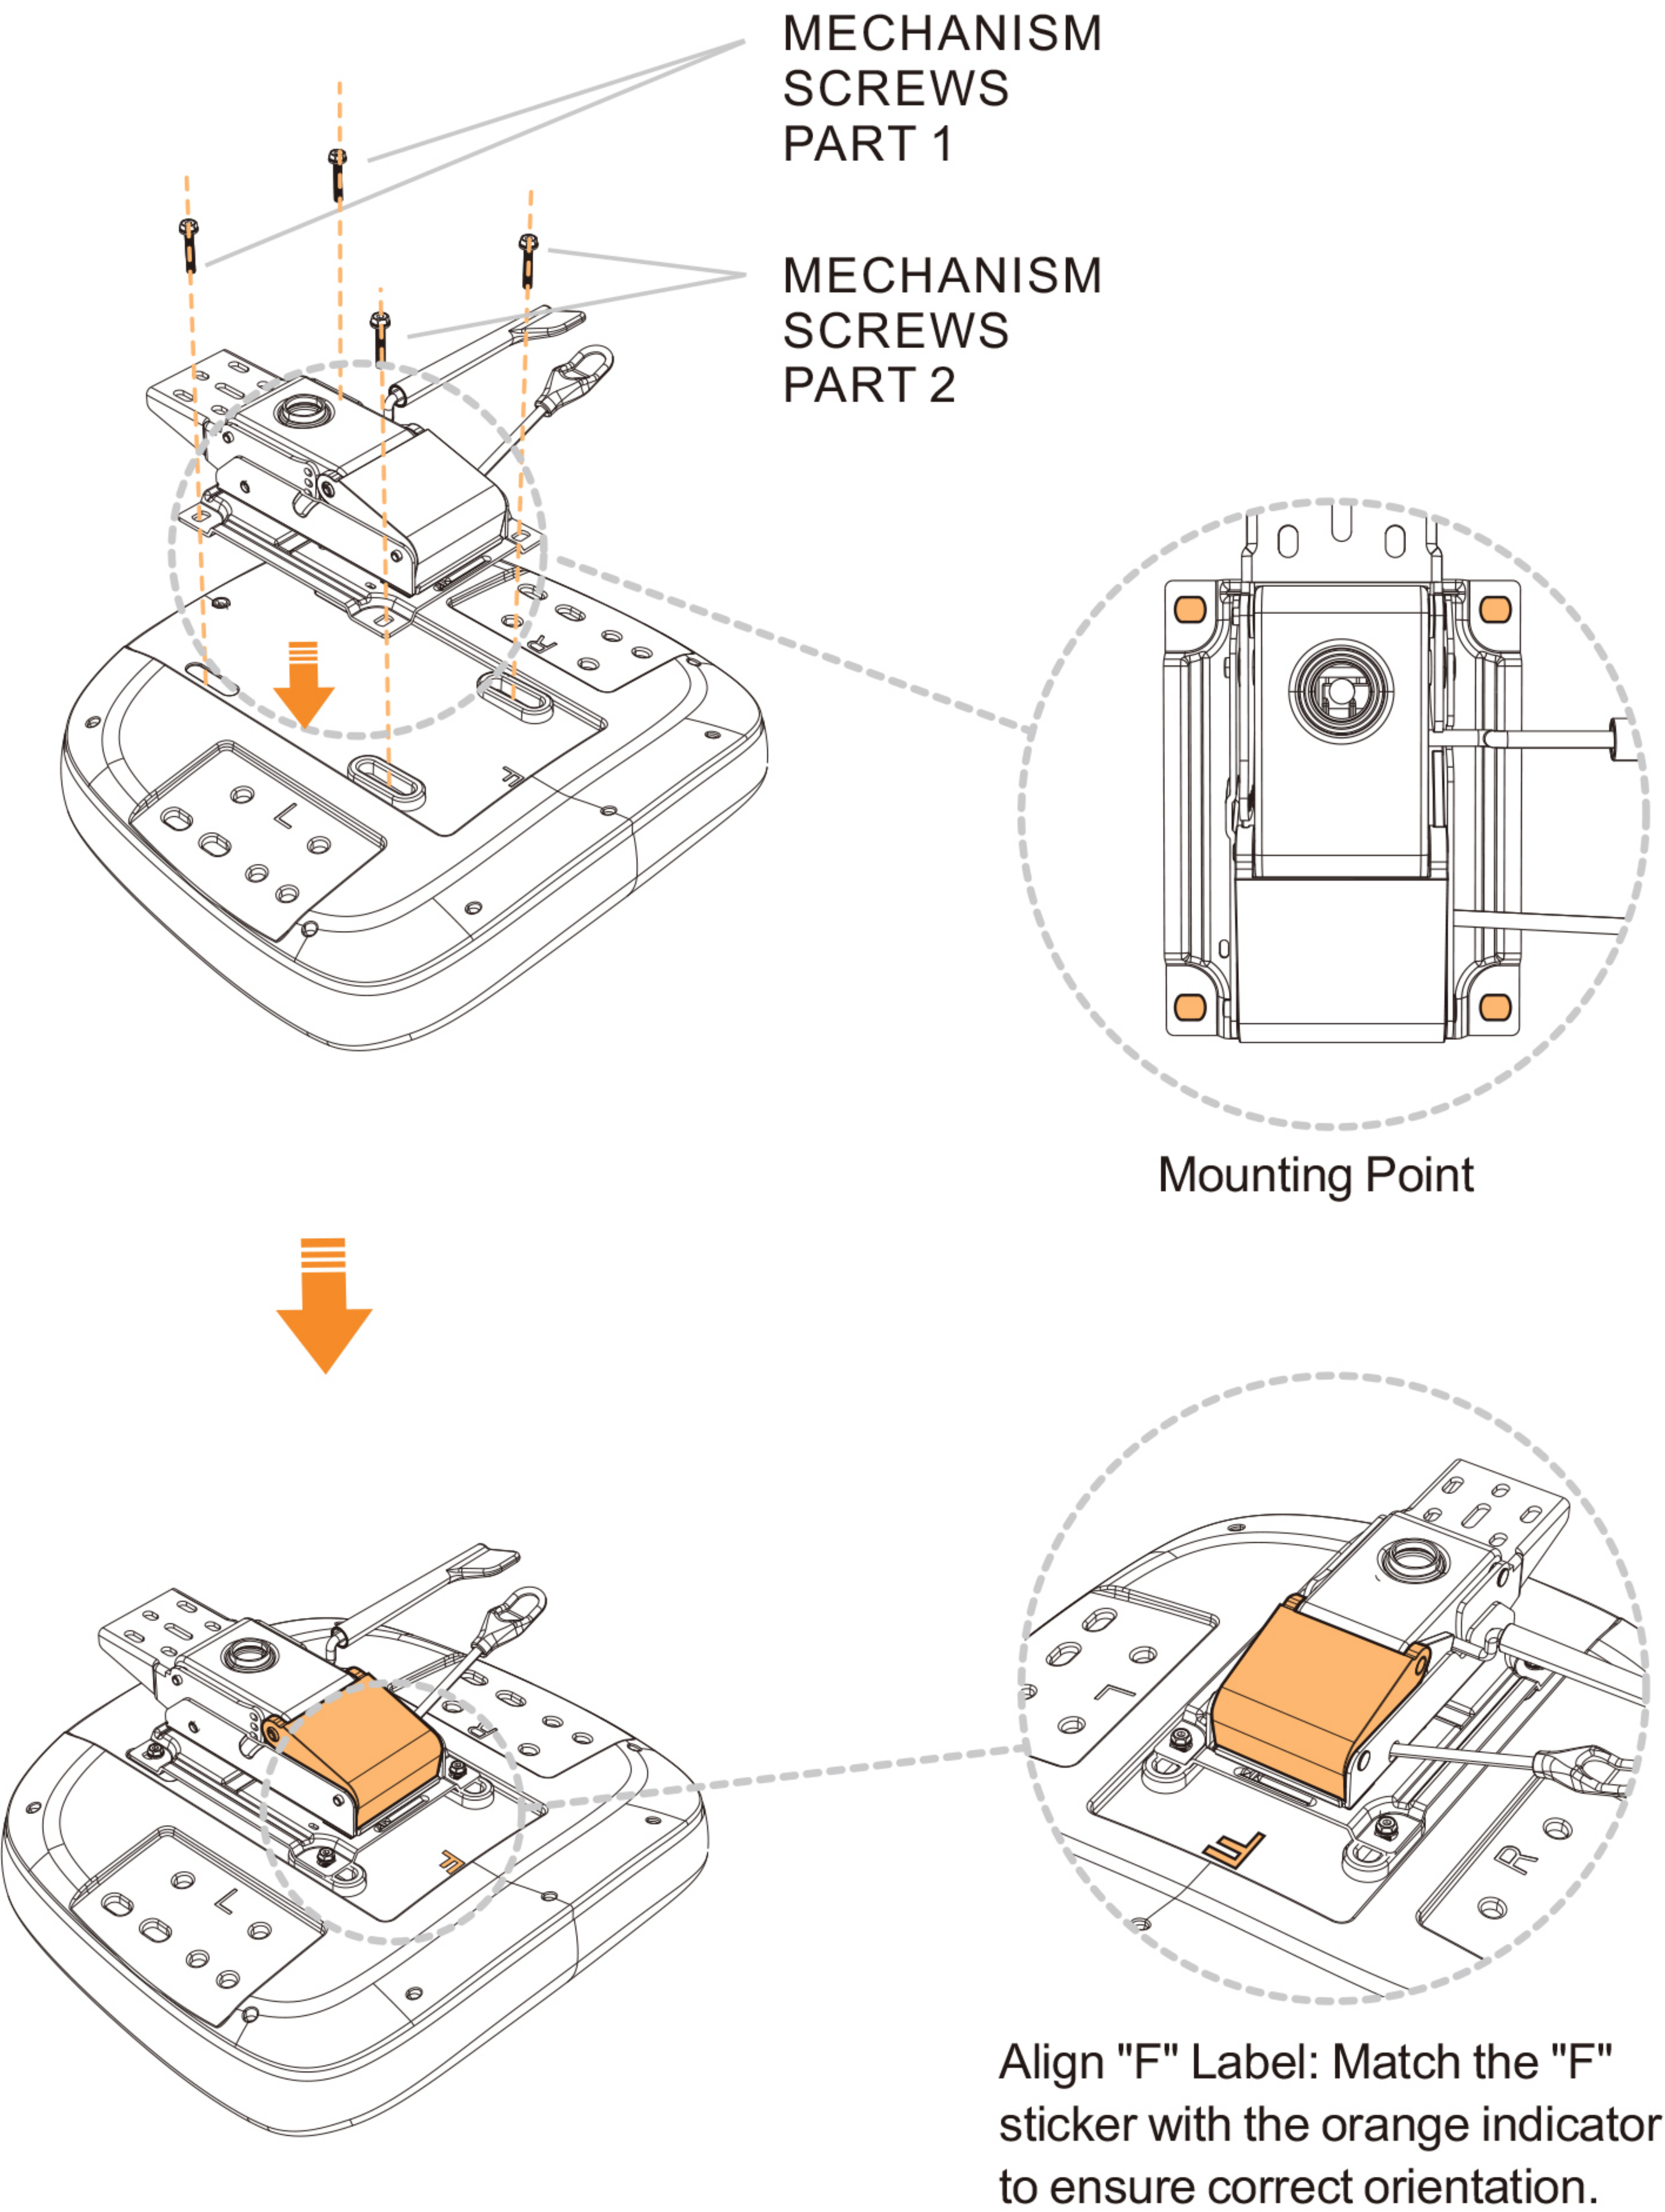


Align Mechanism: Line up the mechanism with the pre-drilled holes on the bottom of the chair seat.

Install Fasteners: Use two (2) M6*20mm Screws for front; two (2) M6*35mm Screws for rear.

3

Armrest Assembling

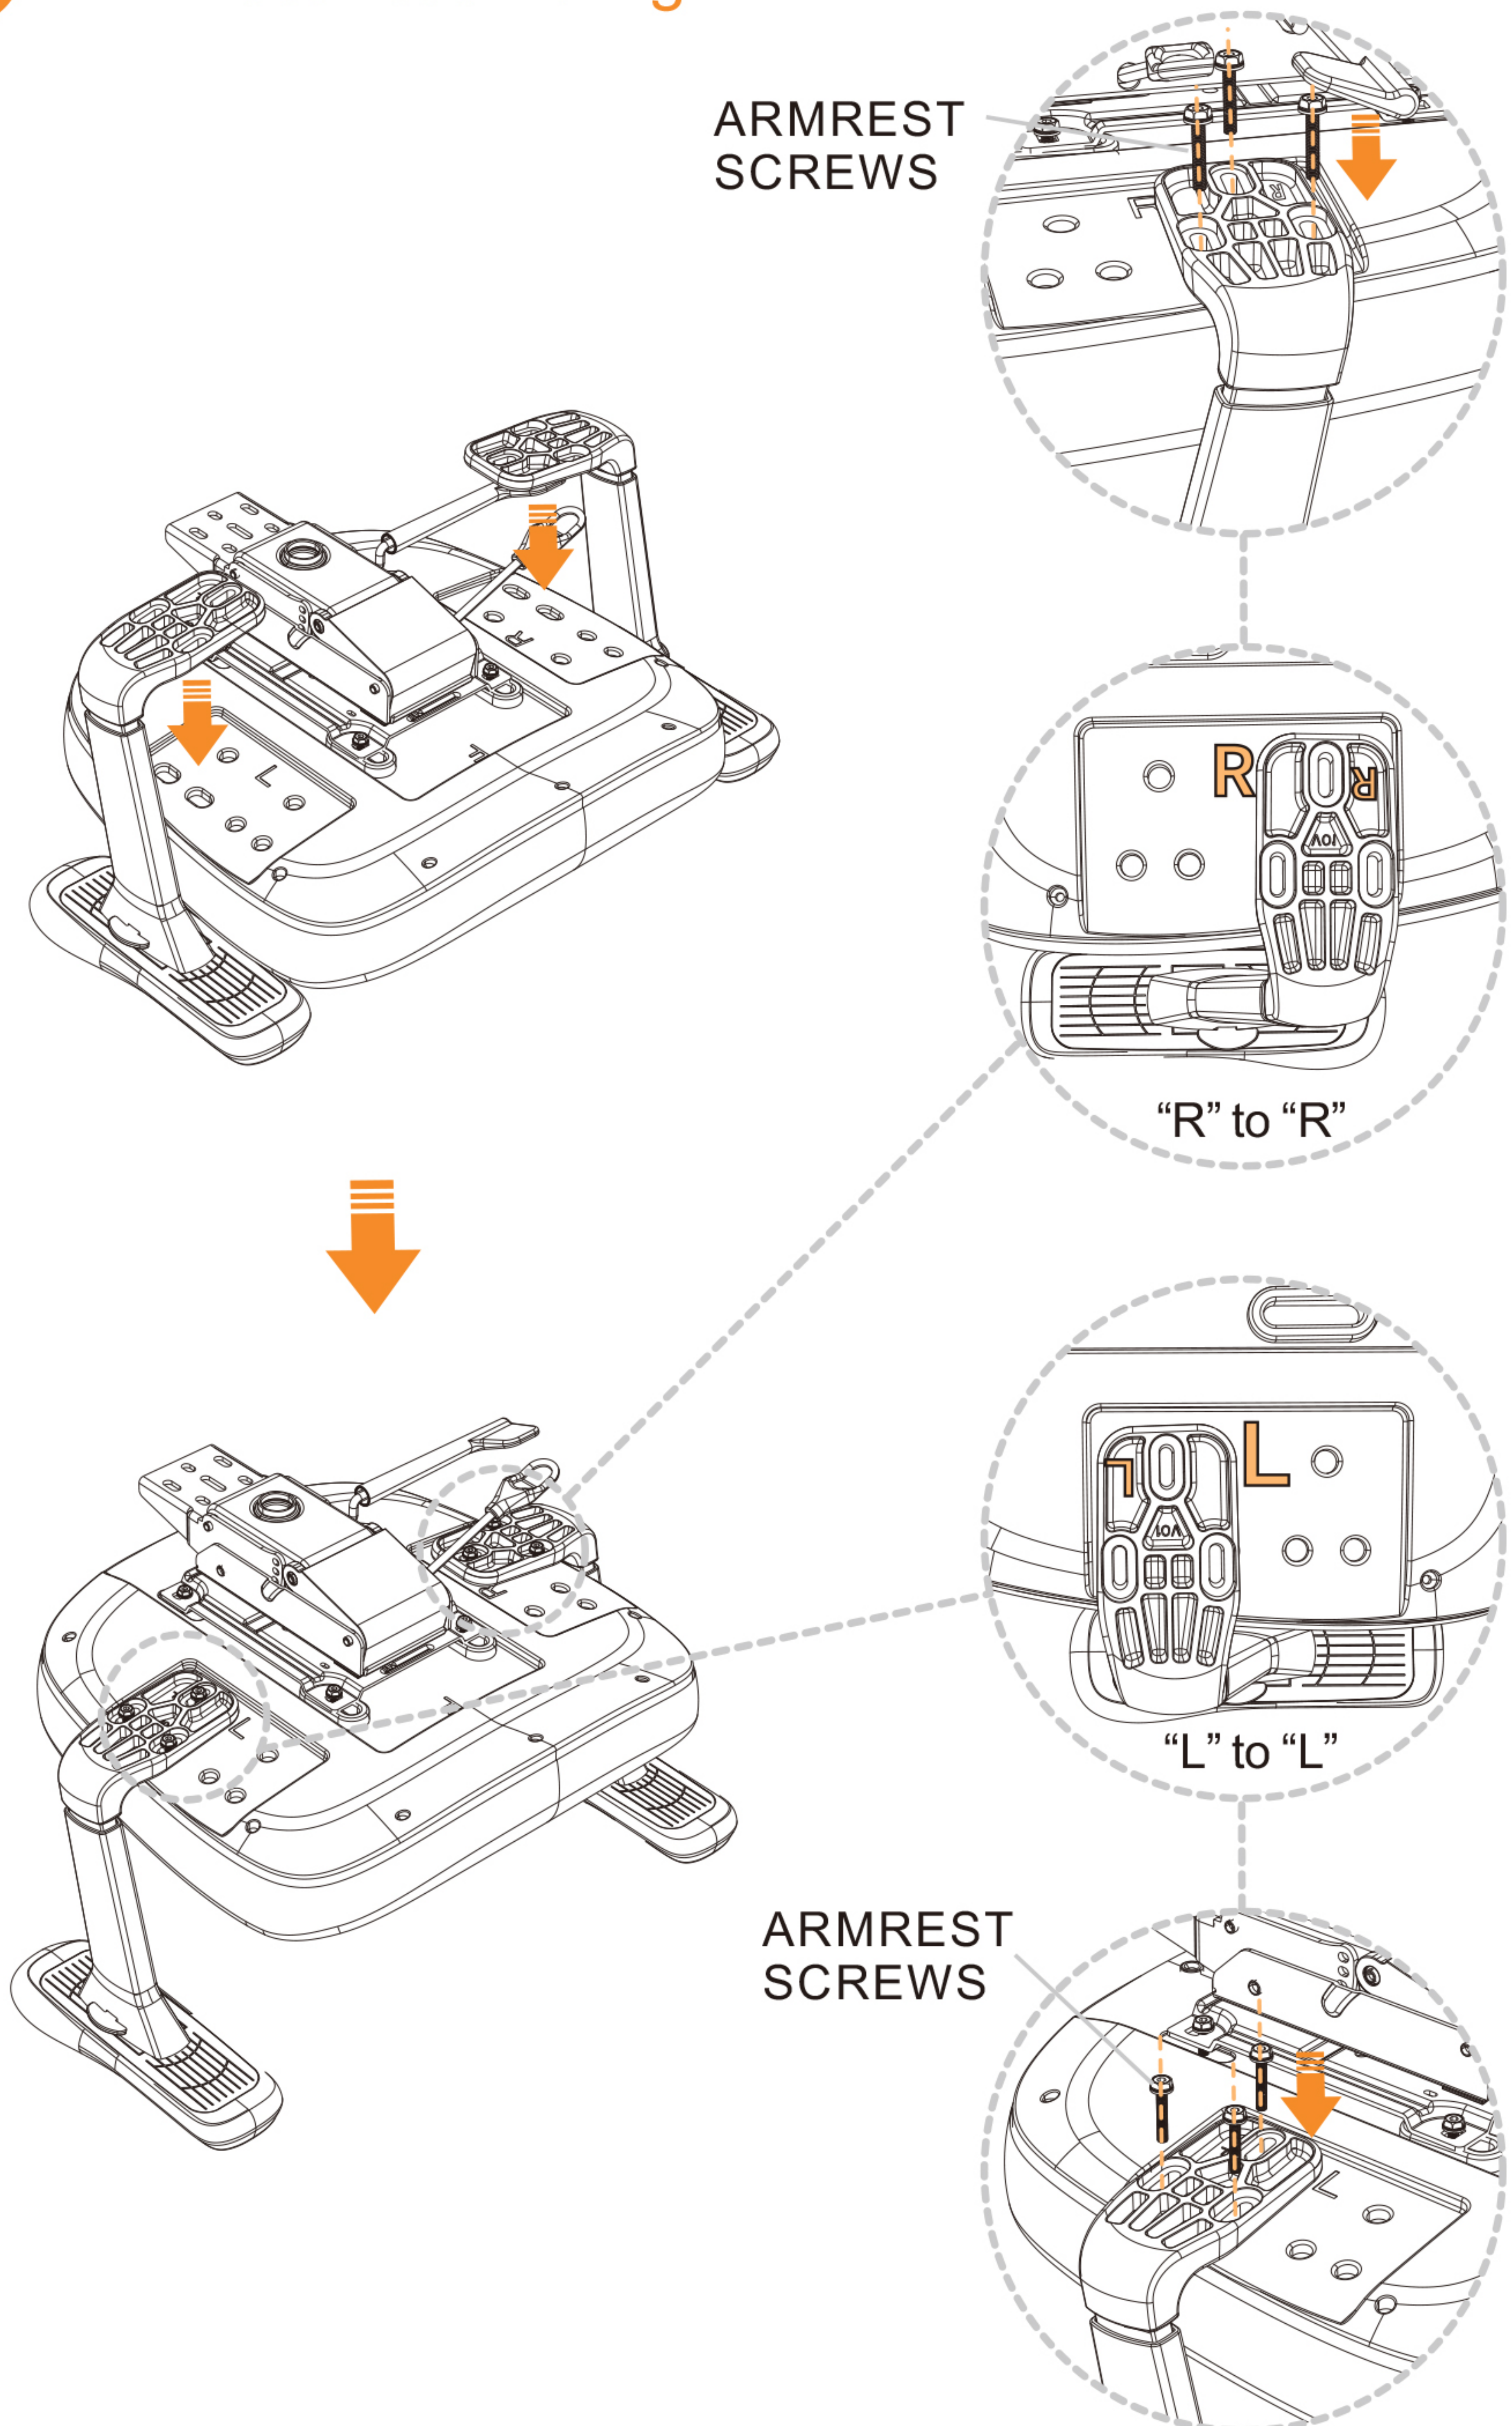


Align Armrest : Line up the left and right armrest with pre-drilled holes on the bottom of the chair seat.

Install Fasteners : Use three (3) M6*35mm screws for the left armrest, three (3) M6*35mm screws for the right armrest.

4


Backrest Bracket Assembling

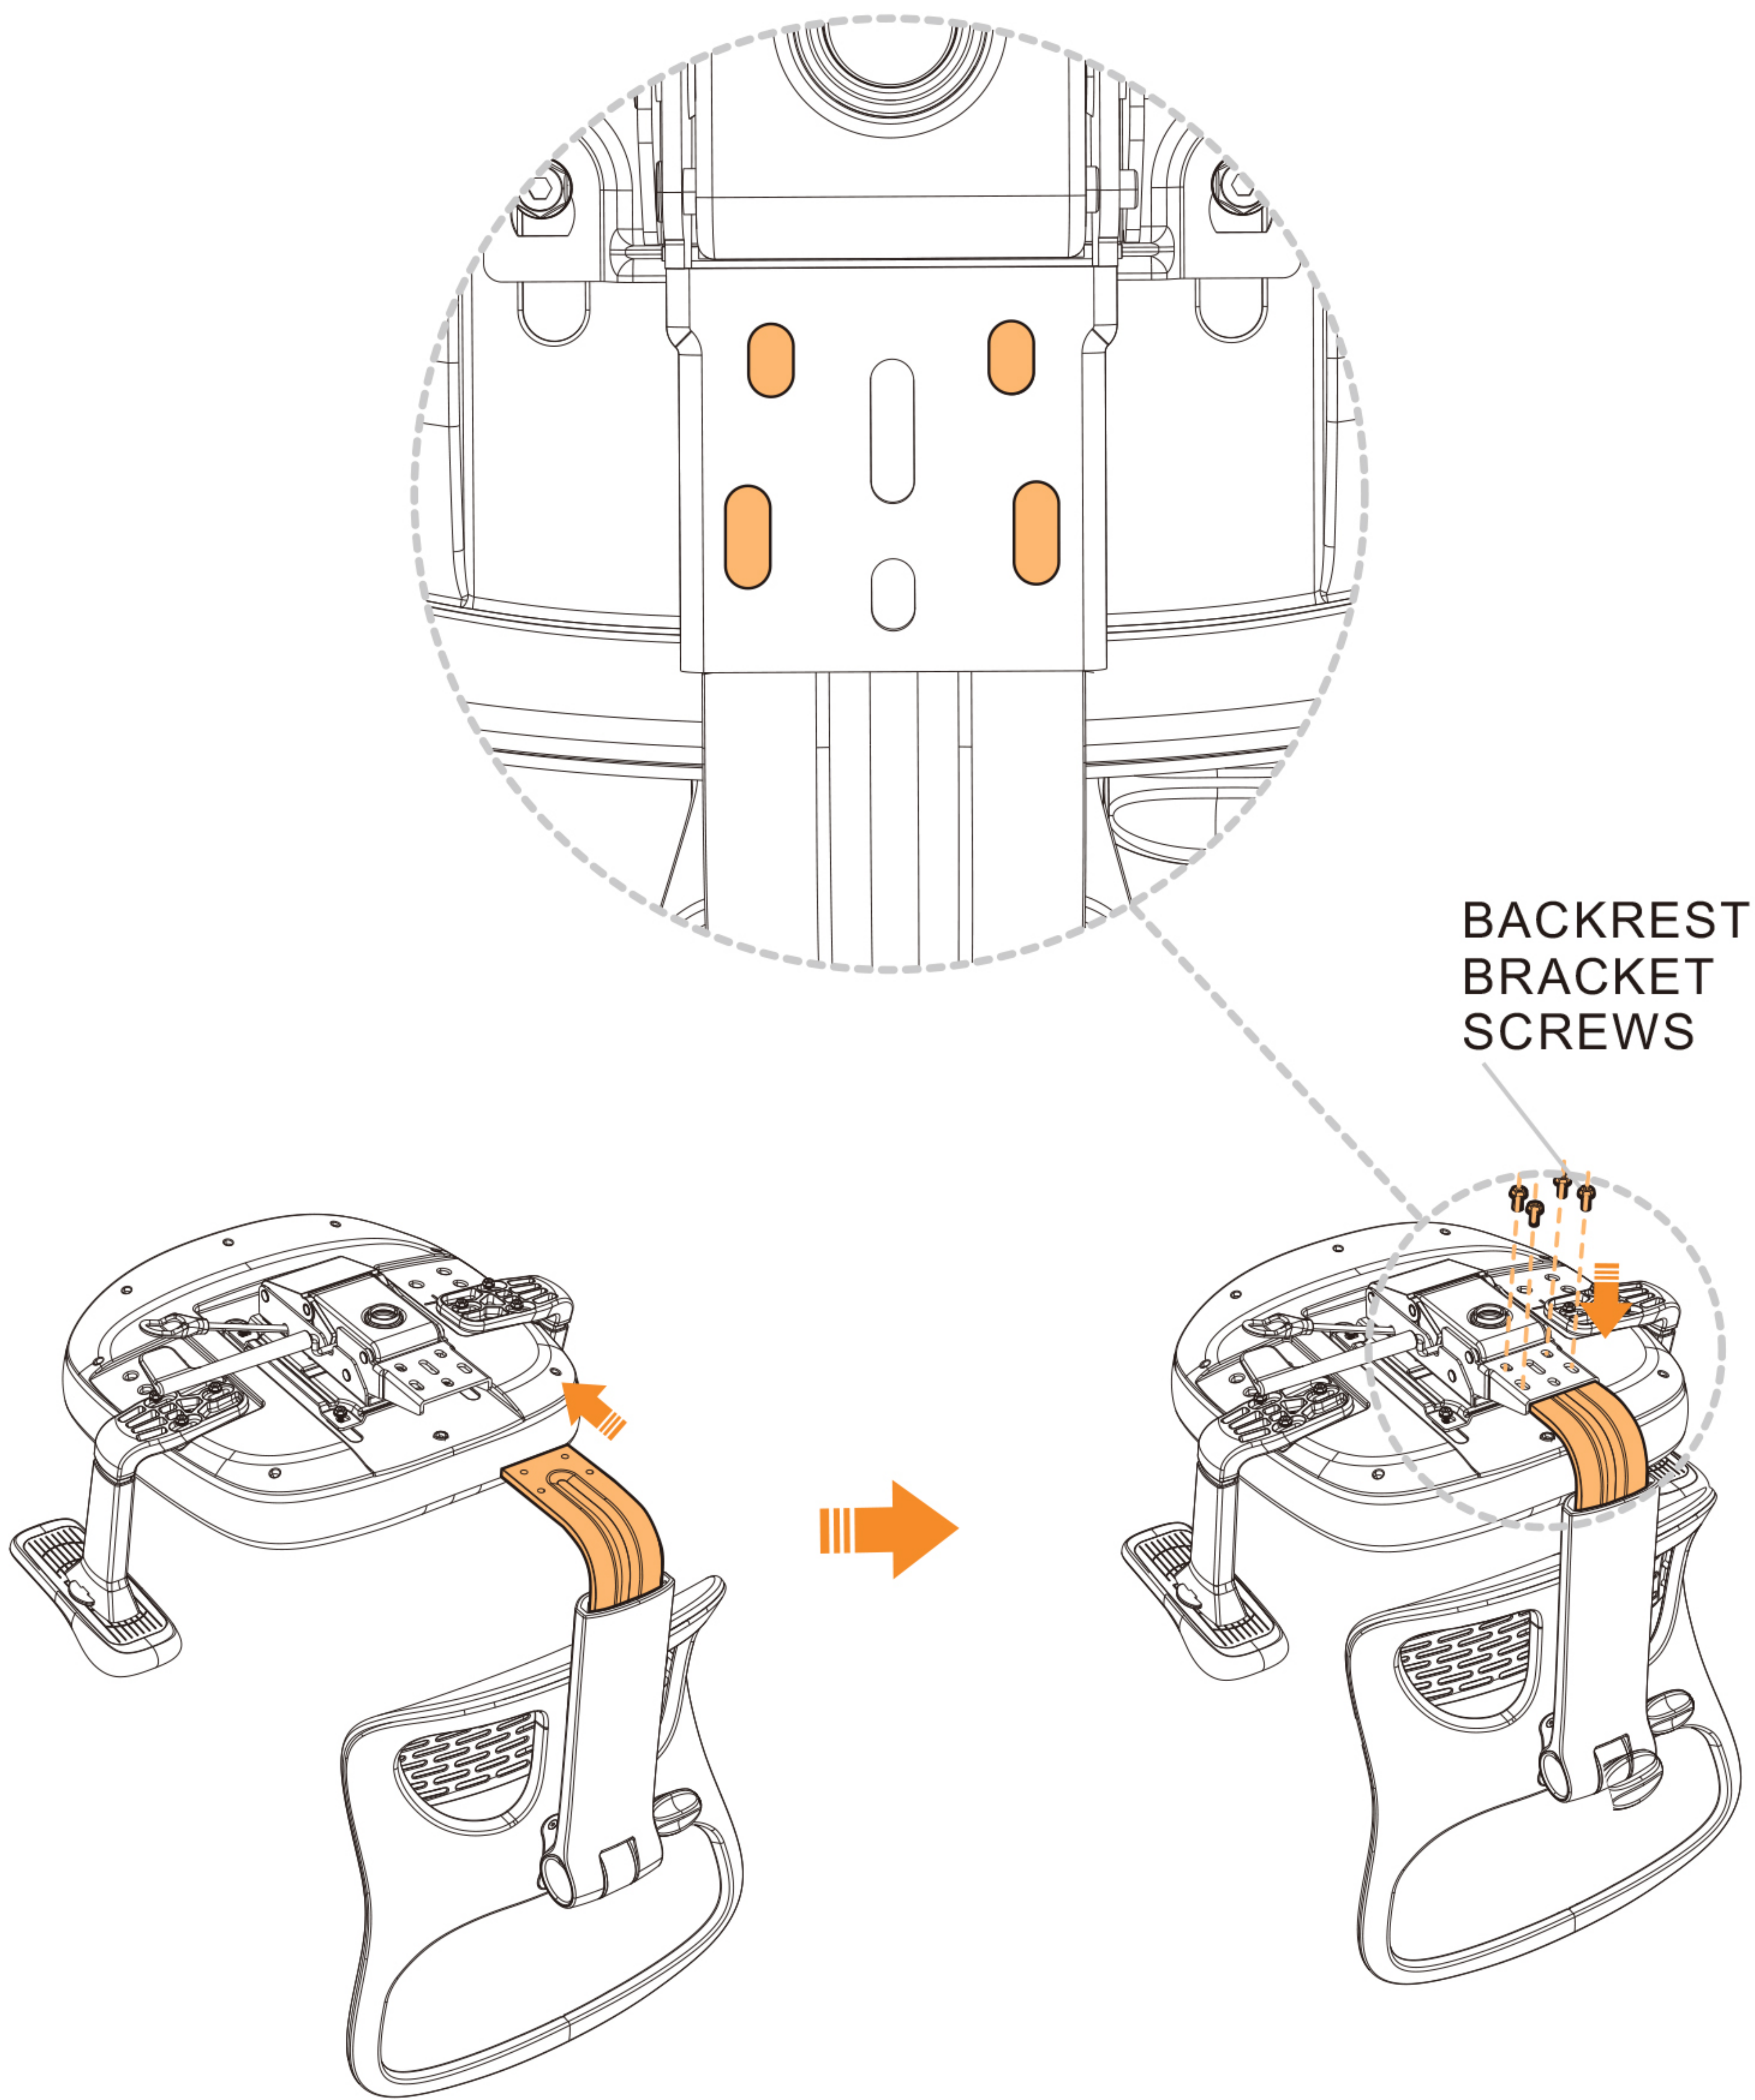

Insert Bracket: Slide the end of the backrest bracket into the slot on the mechanism.
Tighten Screws: Secure using four (4) M8*16mm Bracket Screws.

5


Base Assembling Wheels Assembling

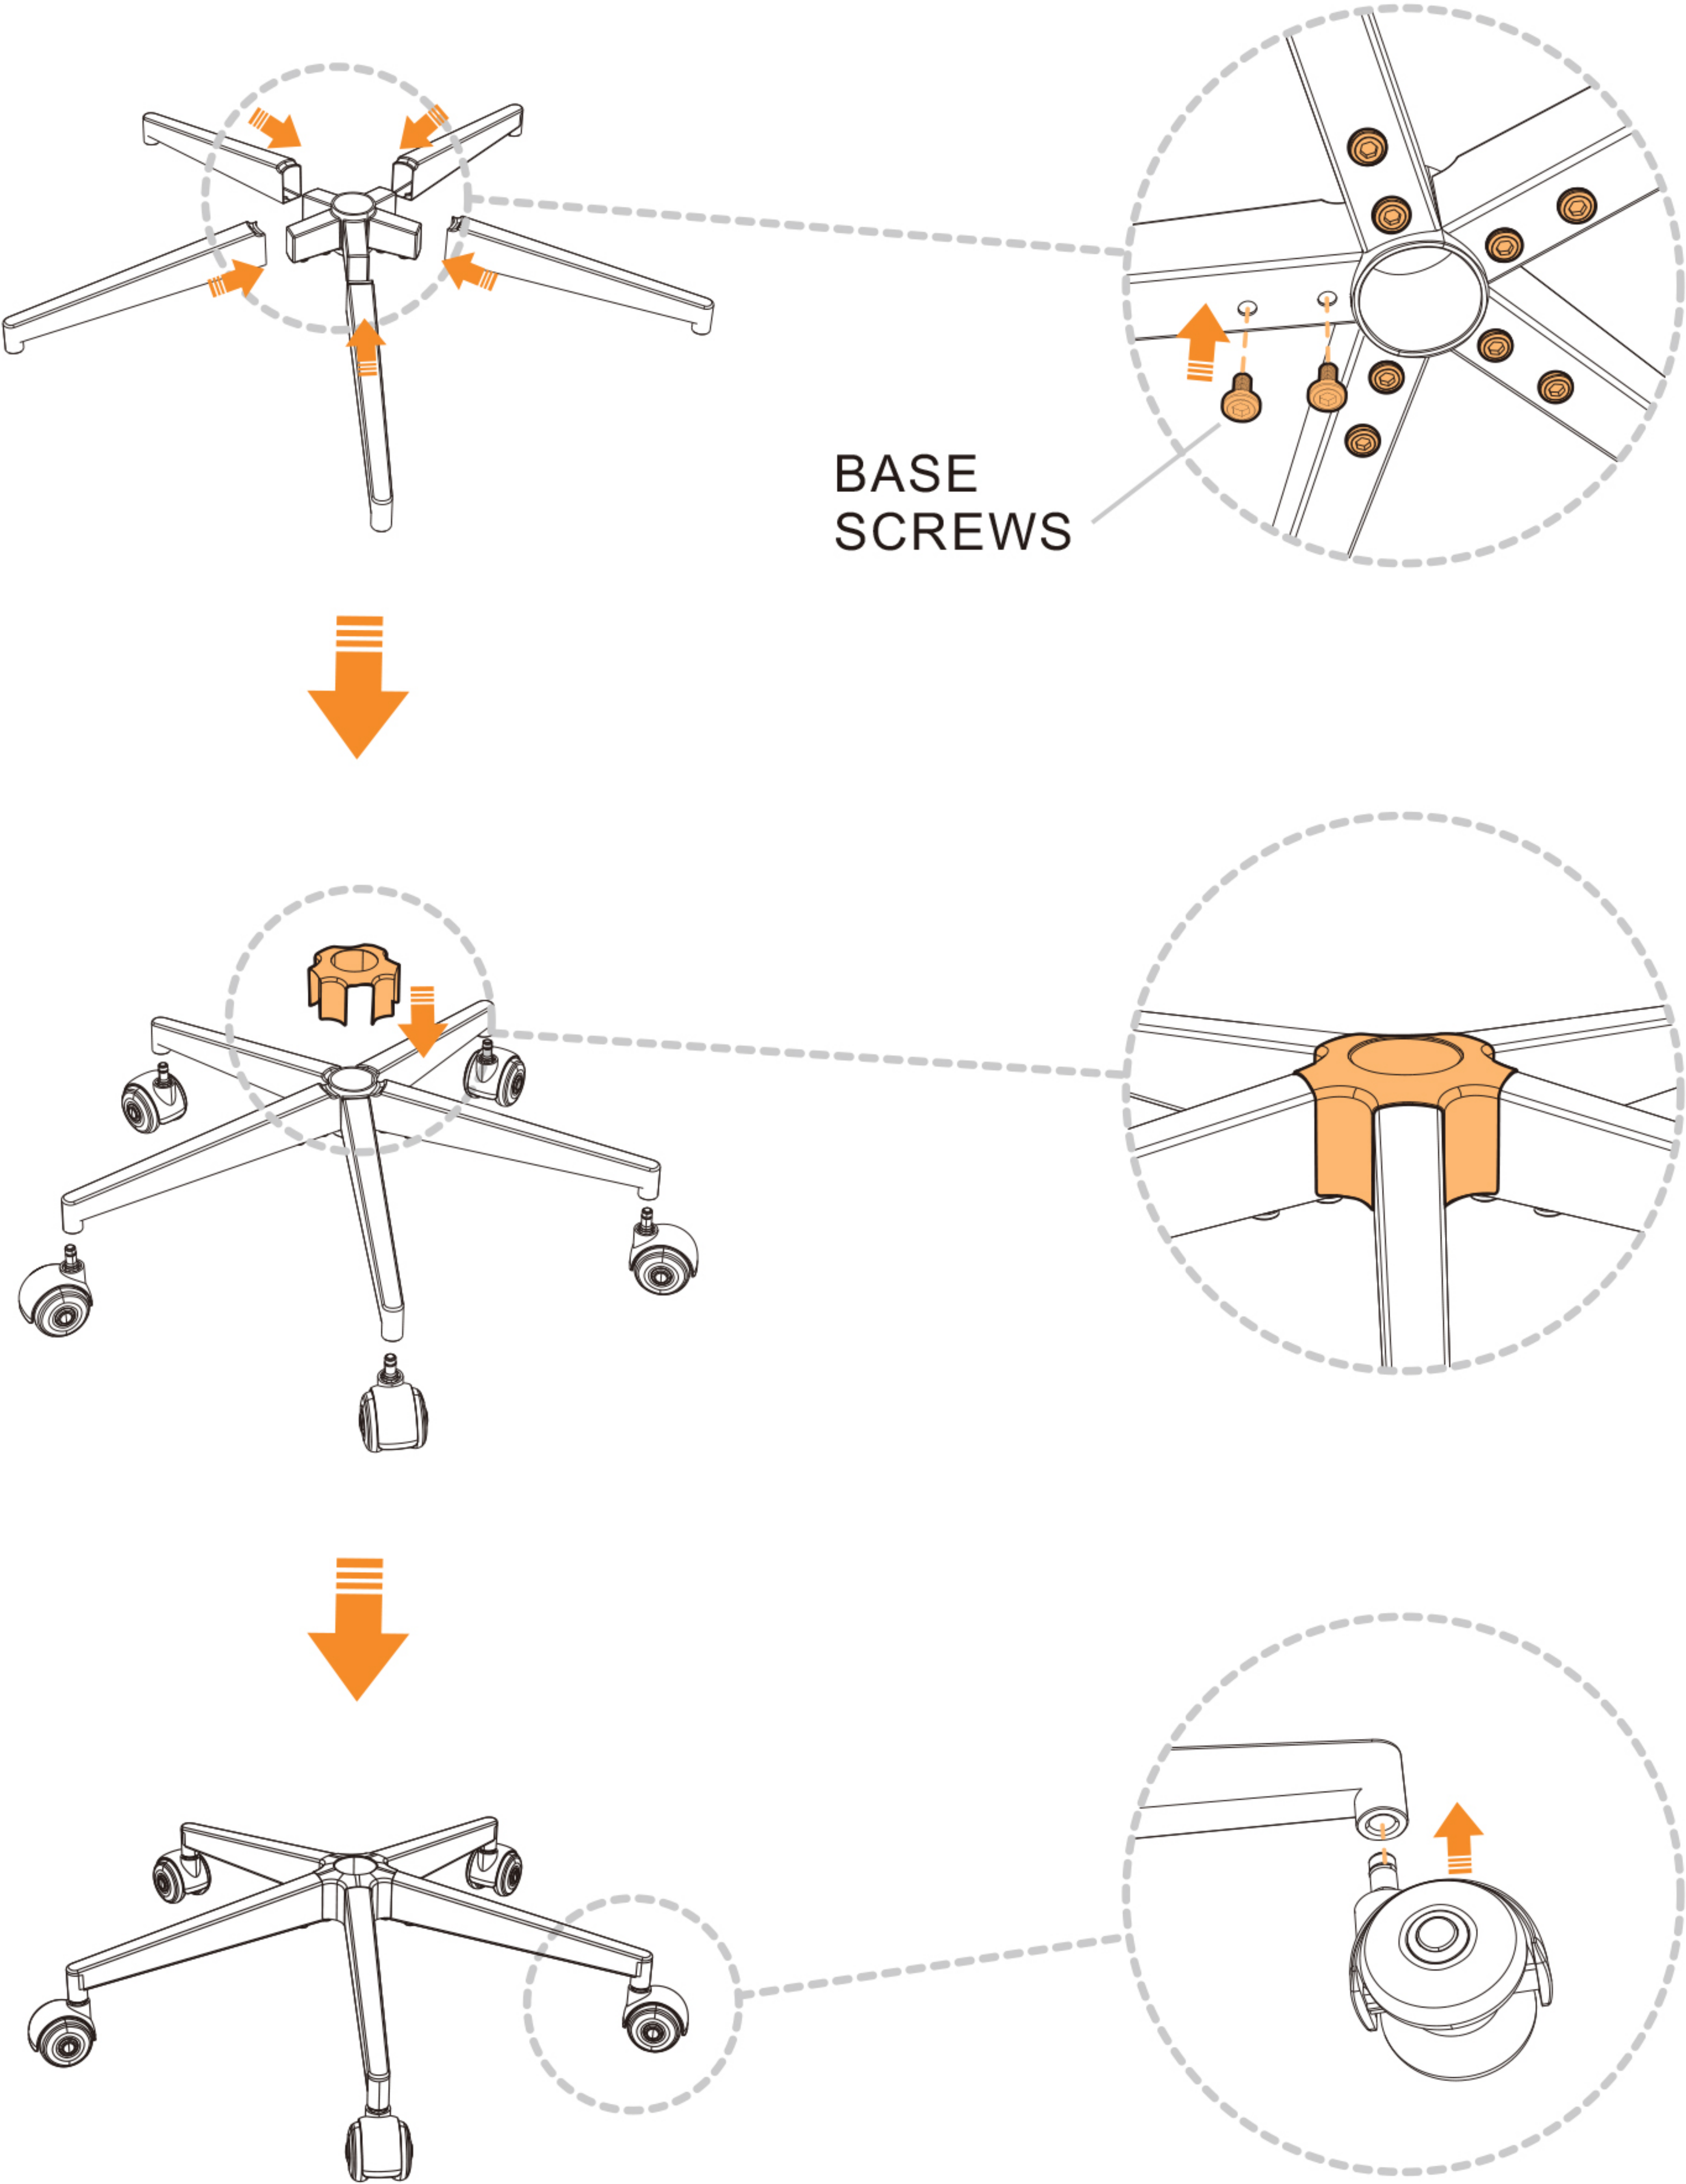

Install Wheels: Firmly press the five (5) wheels into the base sockets.
Assemble Base: Connect base parts using ten (10) M6*12mm Base Screws.

6


Standing Mat Assembling Gas Lift Assembling

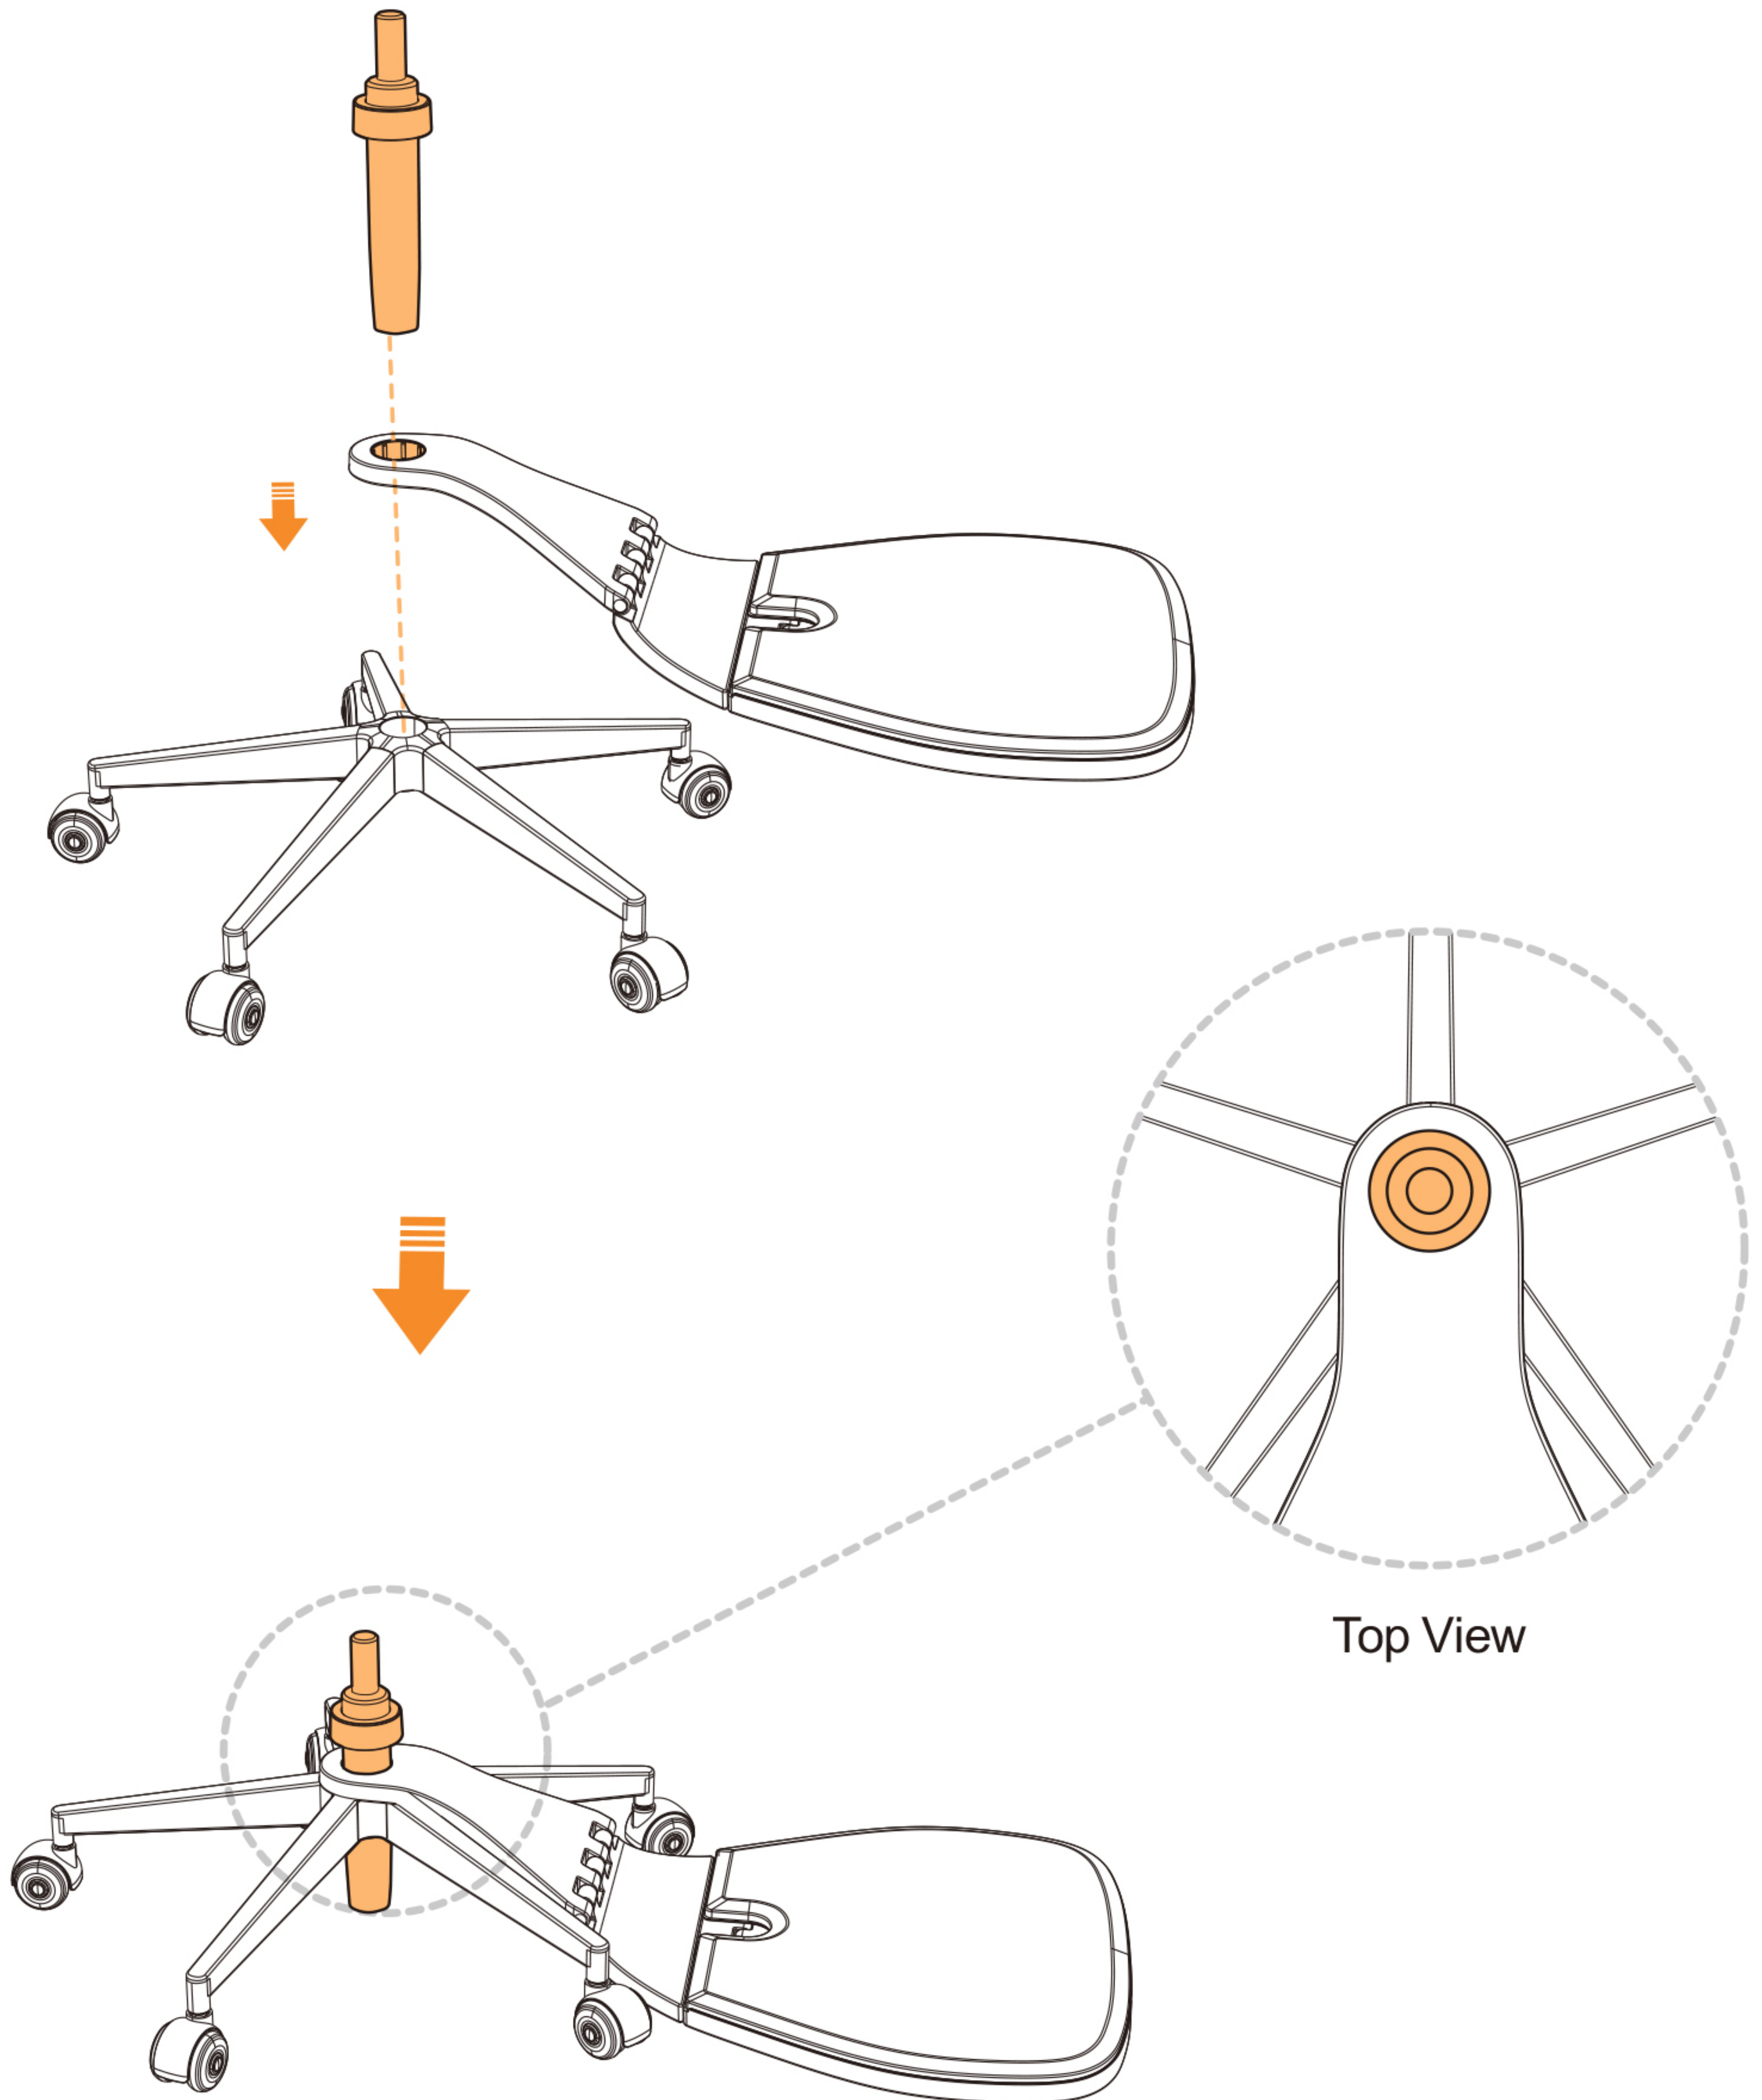

Insert Gas Lift: Pass the Gas Lift through the Standing Mat and into the center hole of the Base.

7

Put the Seat and Base Together

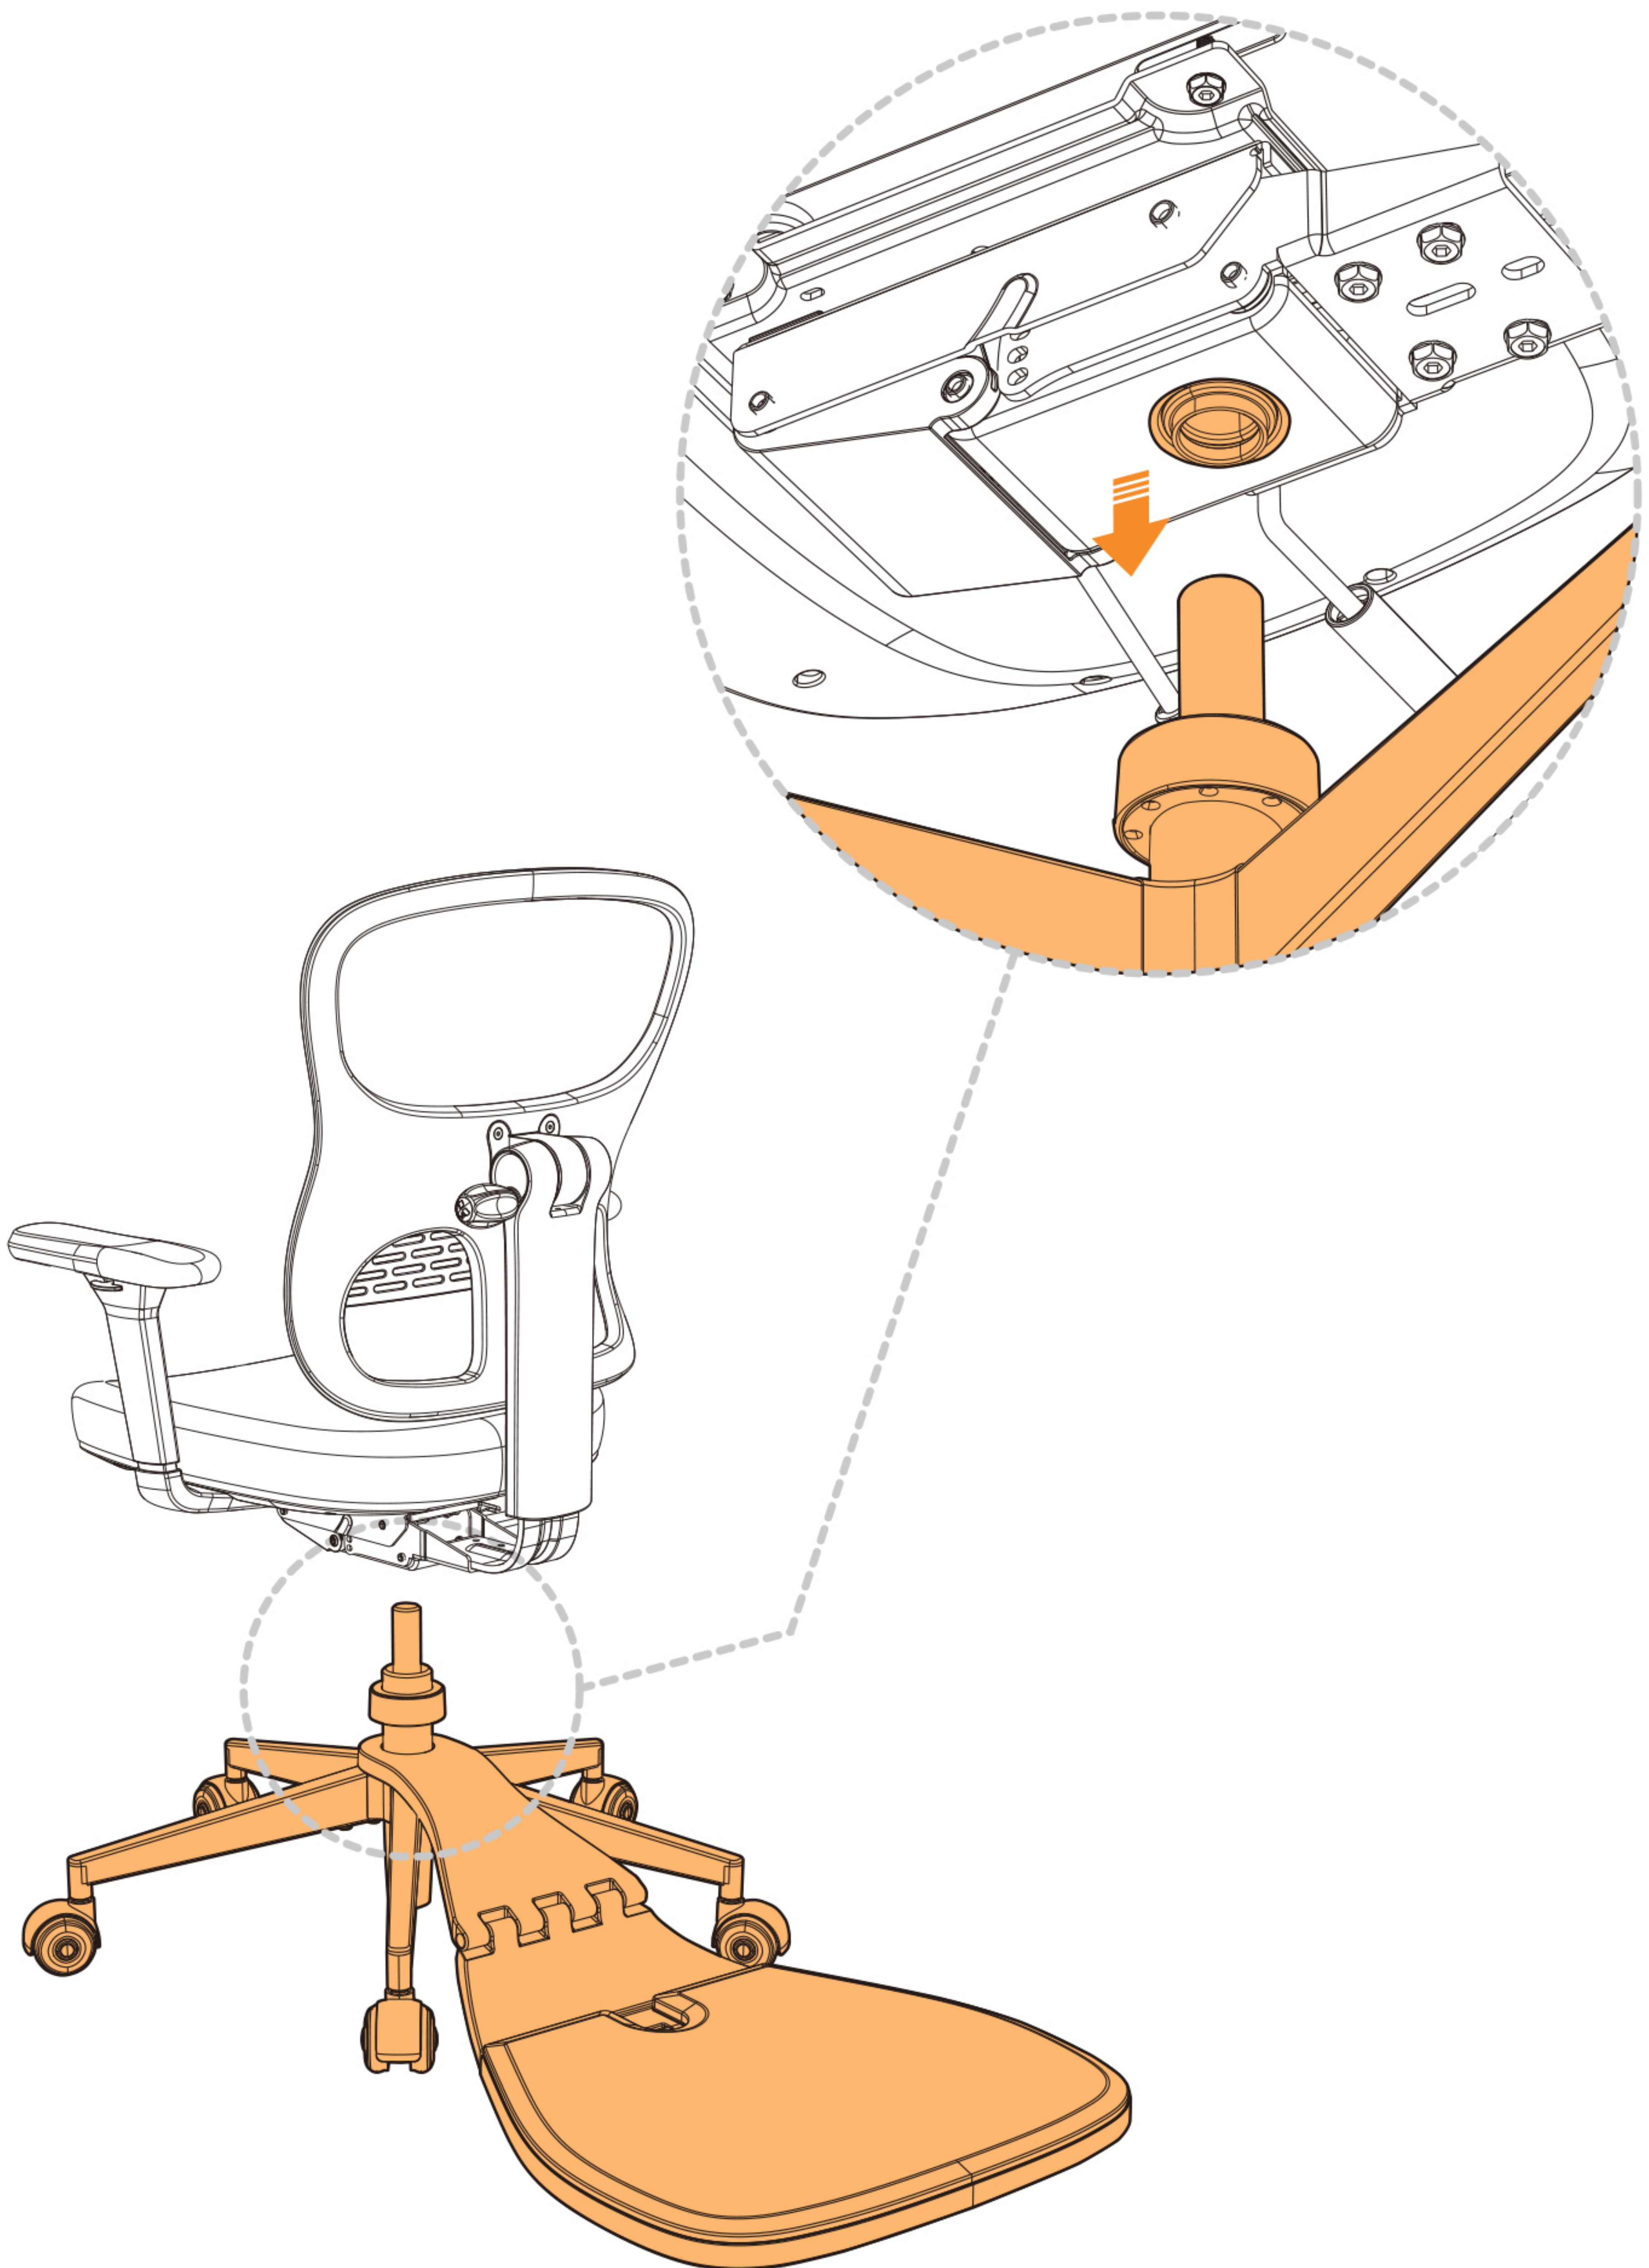


Seat and Base: Lower the seat mechanism onto the gas lift.

Apply Pressure: Press down firmly on the seat to ensure a secure fit.

8

Screws Cover Assembling

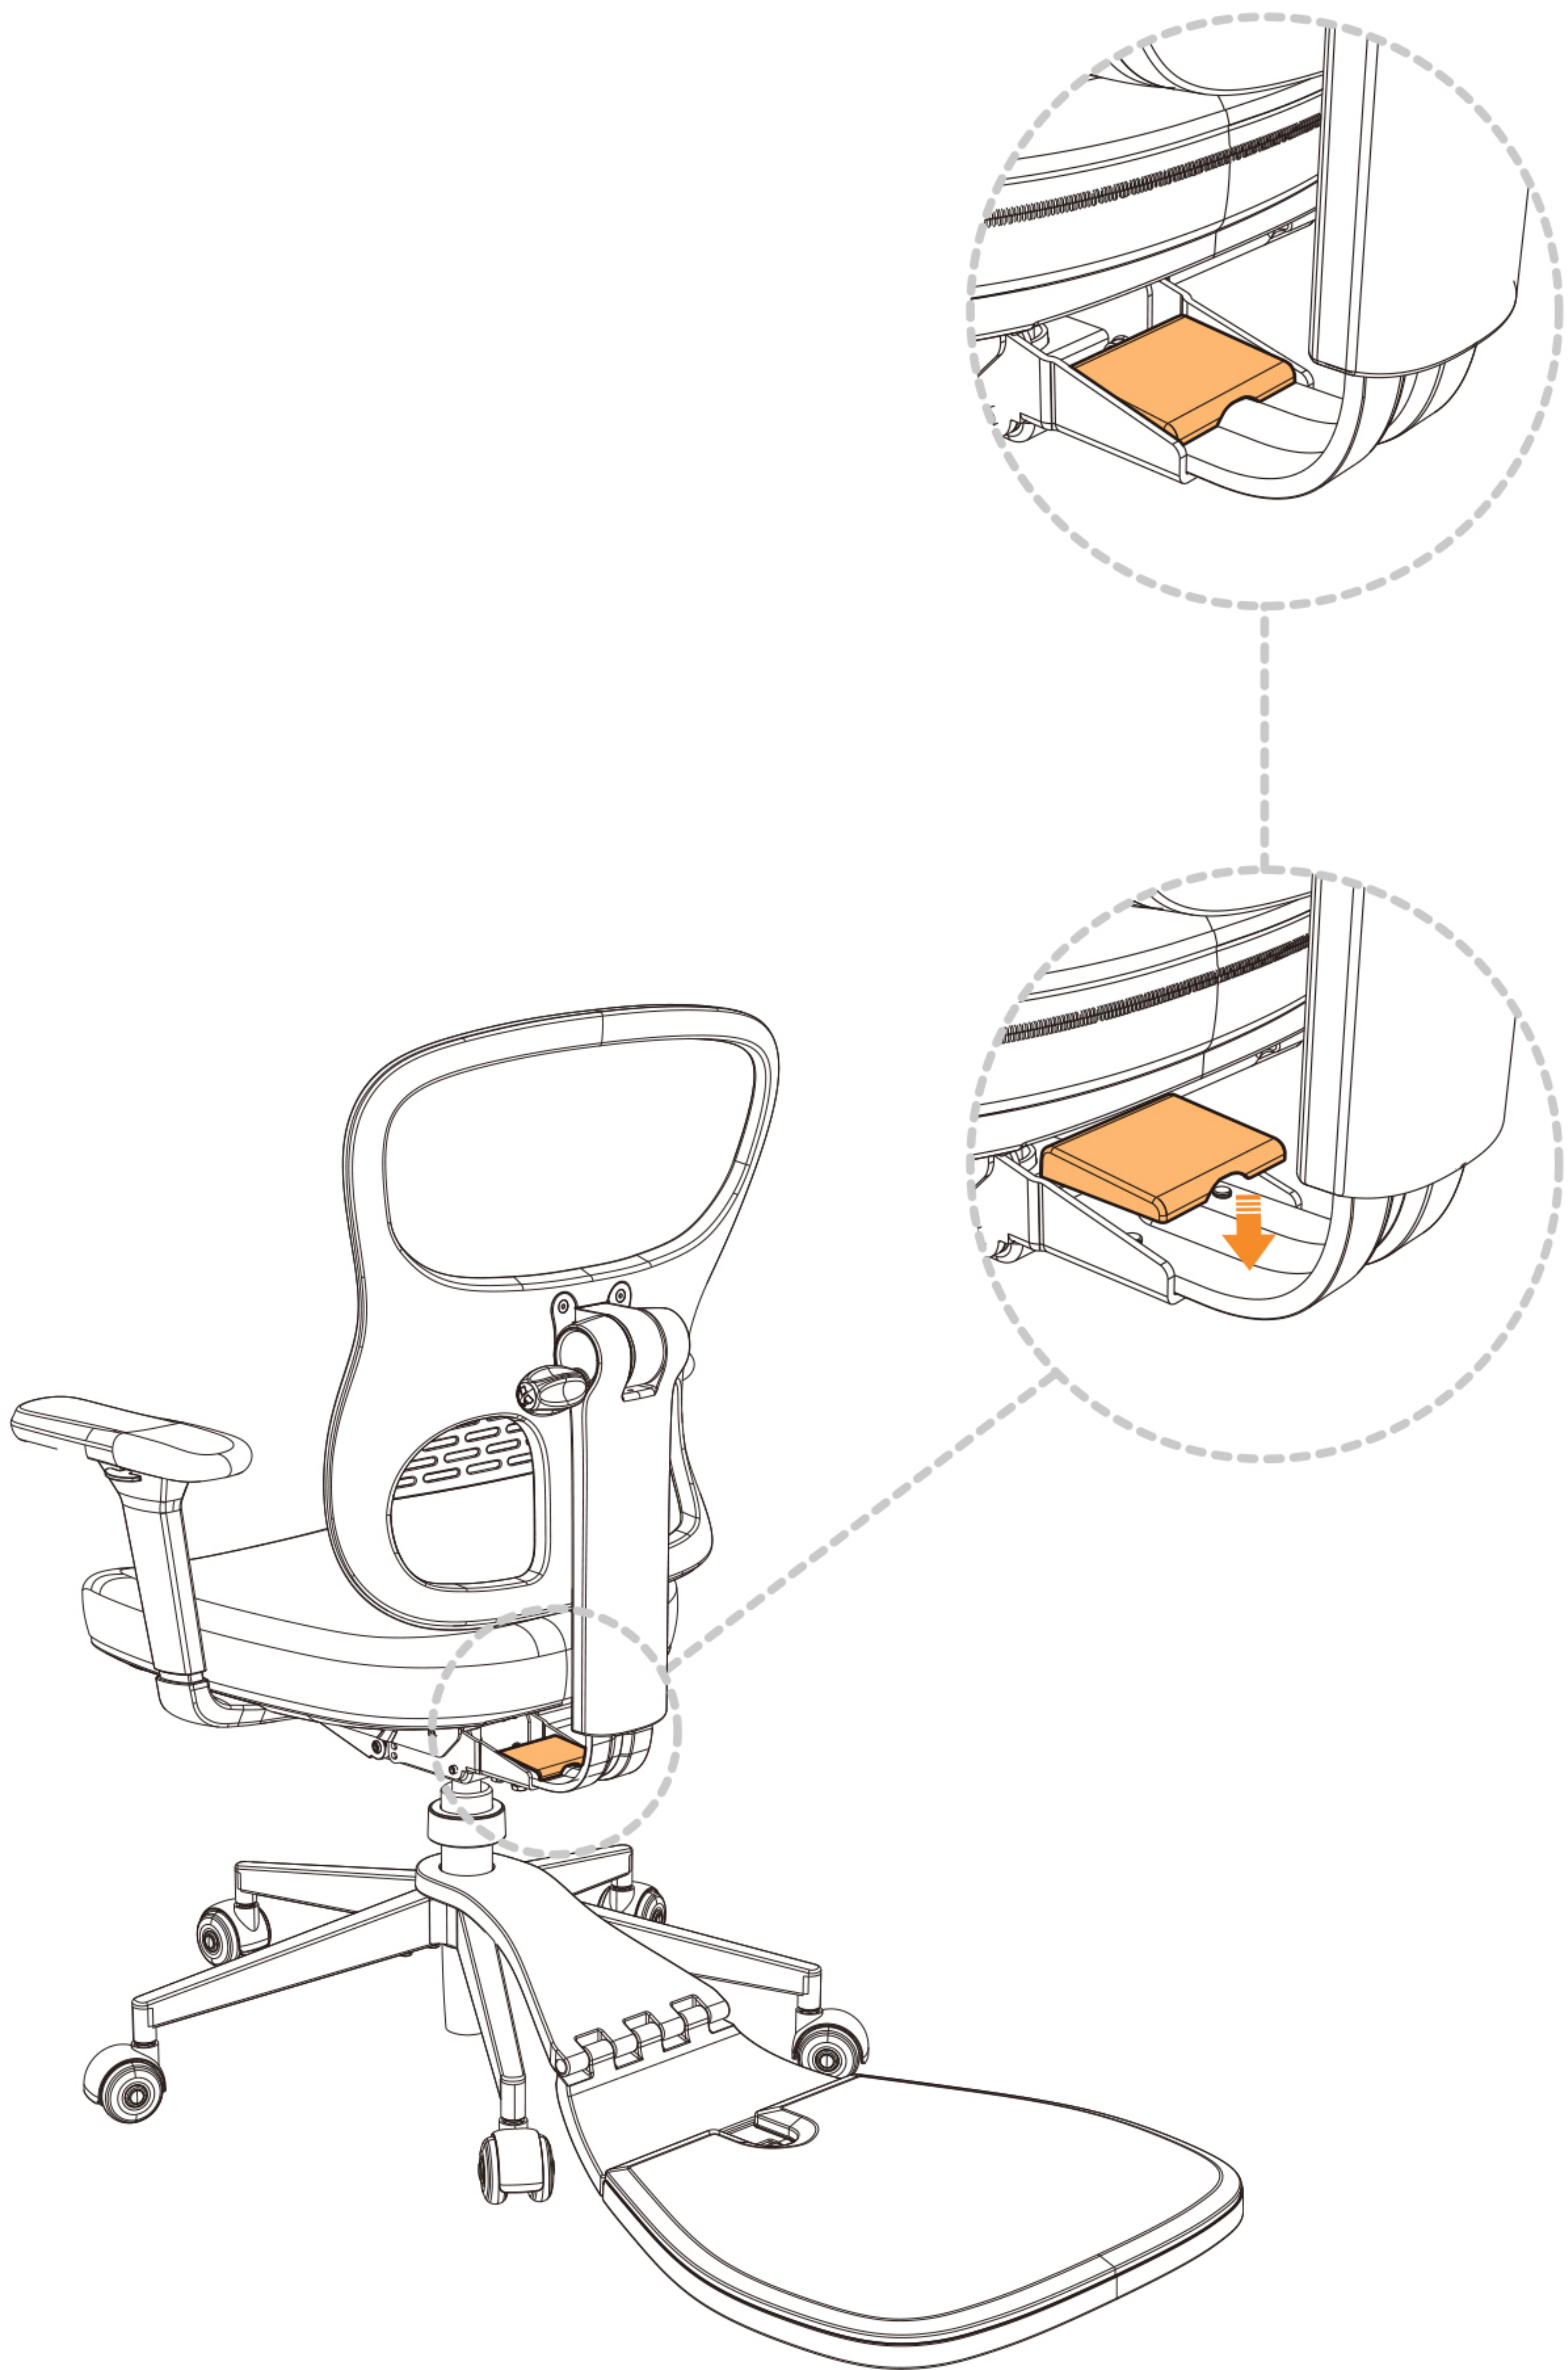


Cover Screws: Snap the screws cover over the bracket connection point to hide fasteners.

Adjustment Instructions




Lifting the backrest to its highest position will release the lock and automatically reset it to the lowest position.

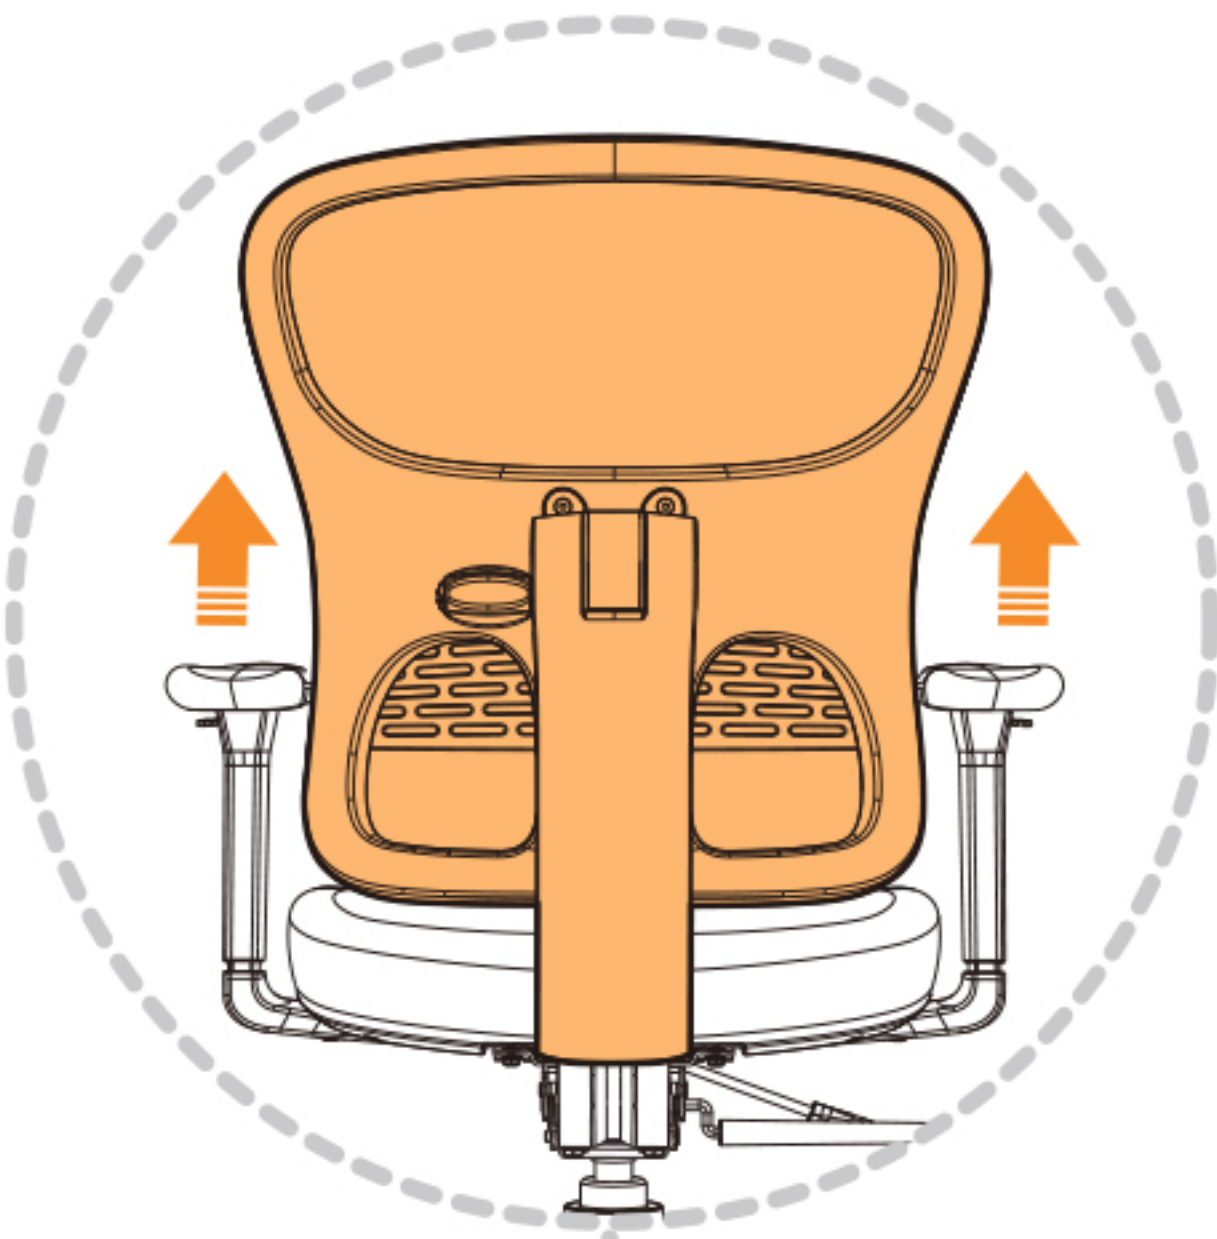

Seat Back Height Adjustment

Lift the backrest slowly to lock into various positions.

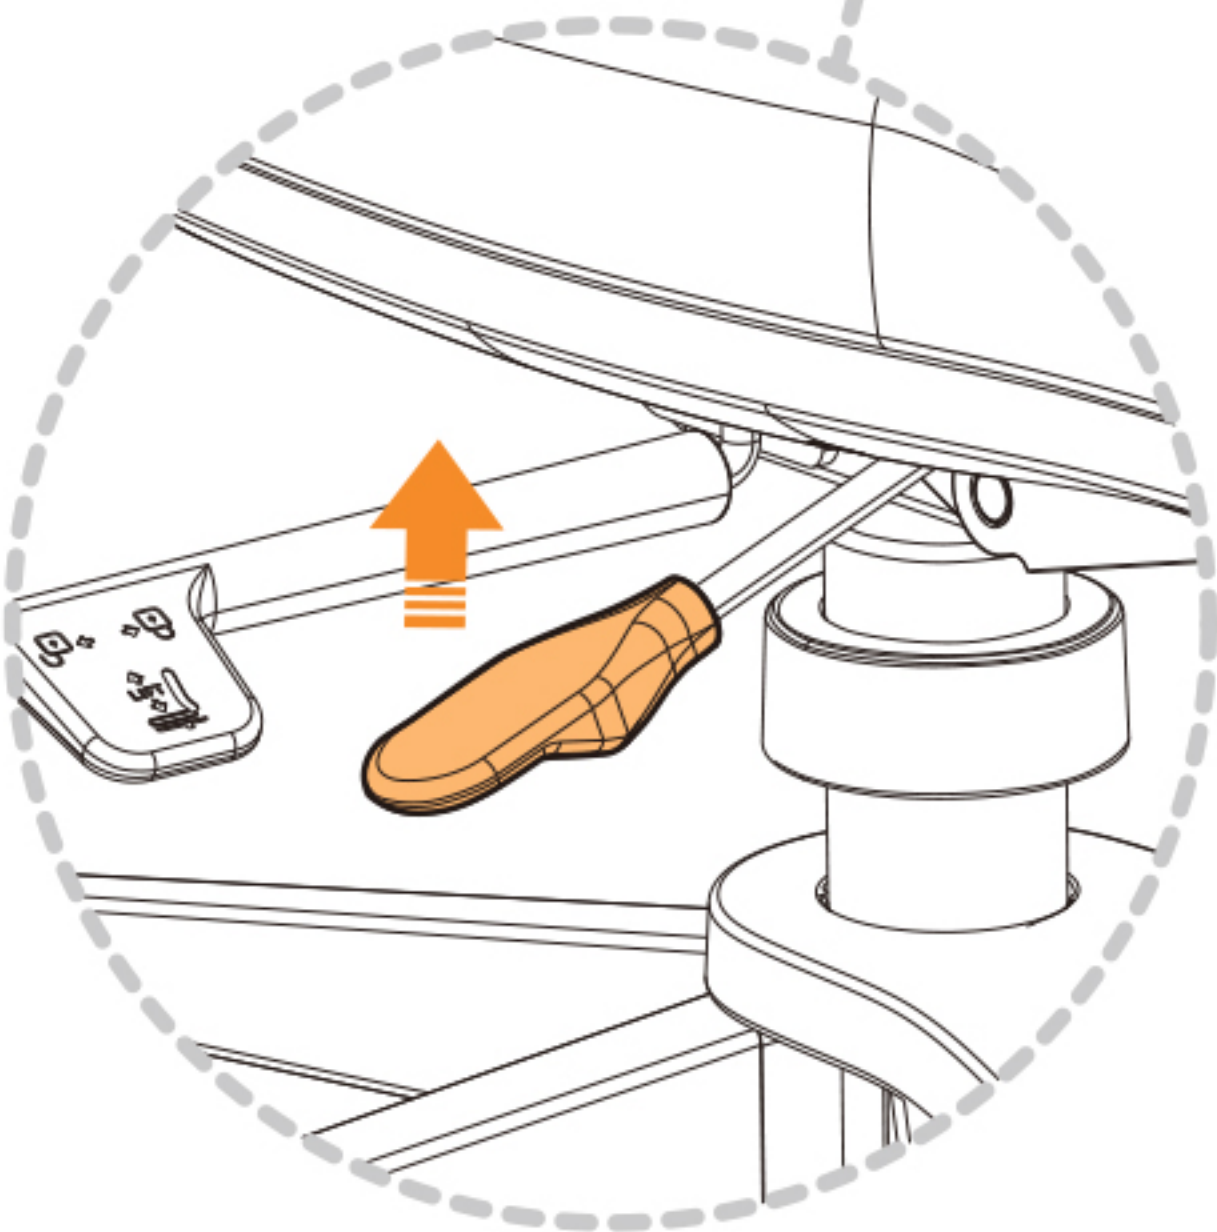


Seat Depth Adjustment

Lift the lever and slide the seat forward or backward to adjust depth.




Please Note: If you do not lean your body back on the backrest with force when unlocking the adjustment mechanism, the backrest will get stuck, and it will not restore to the upright position.

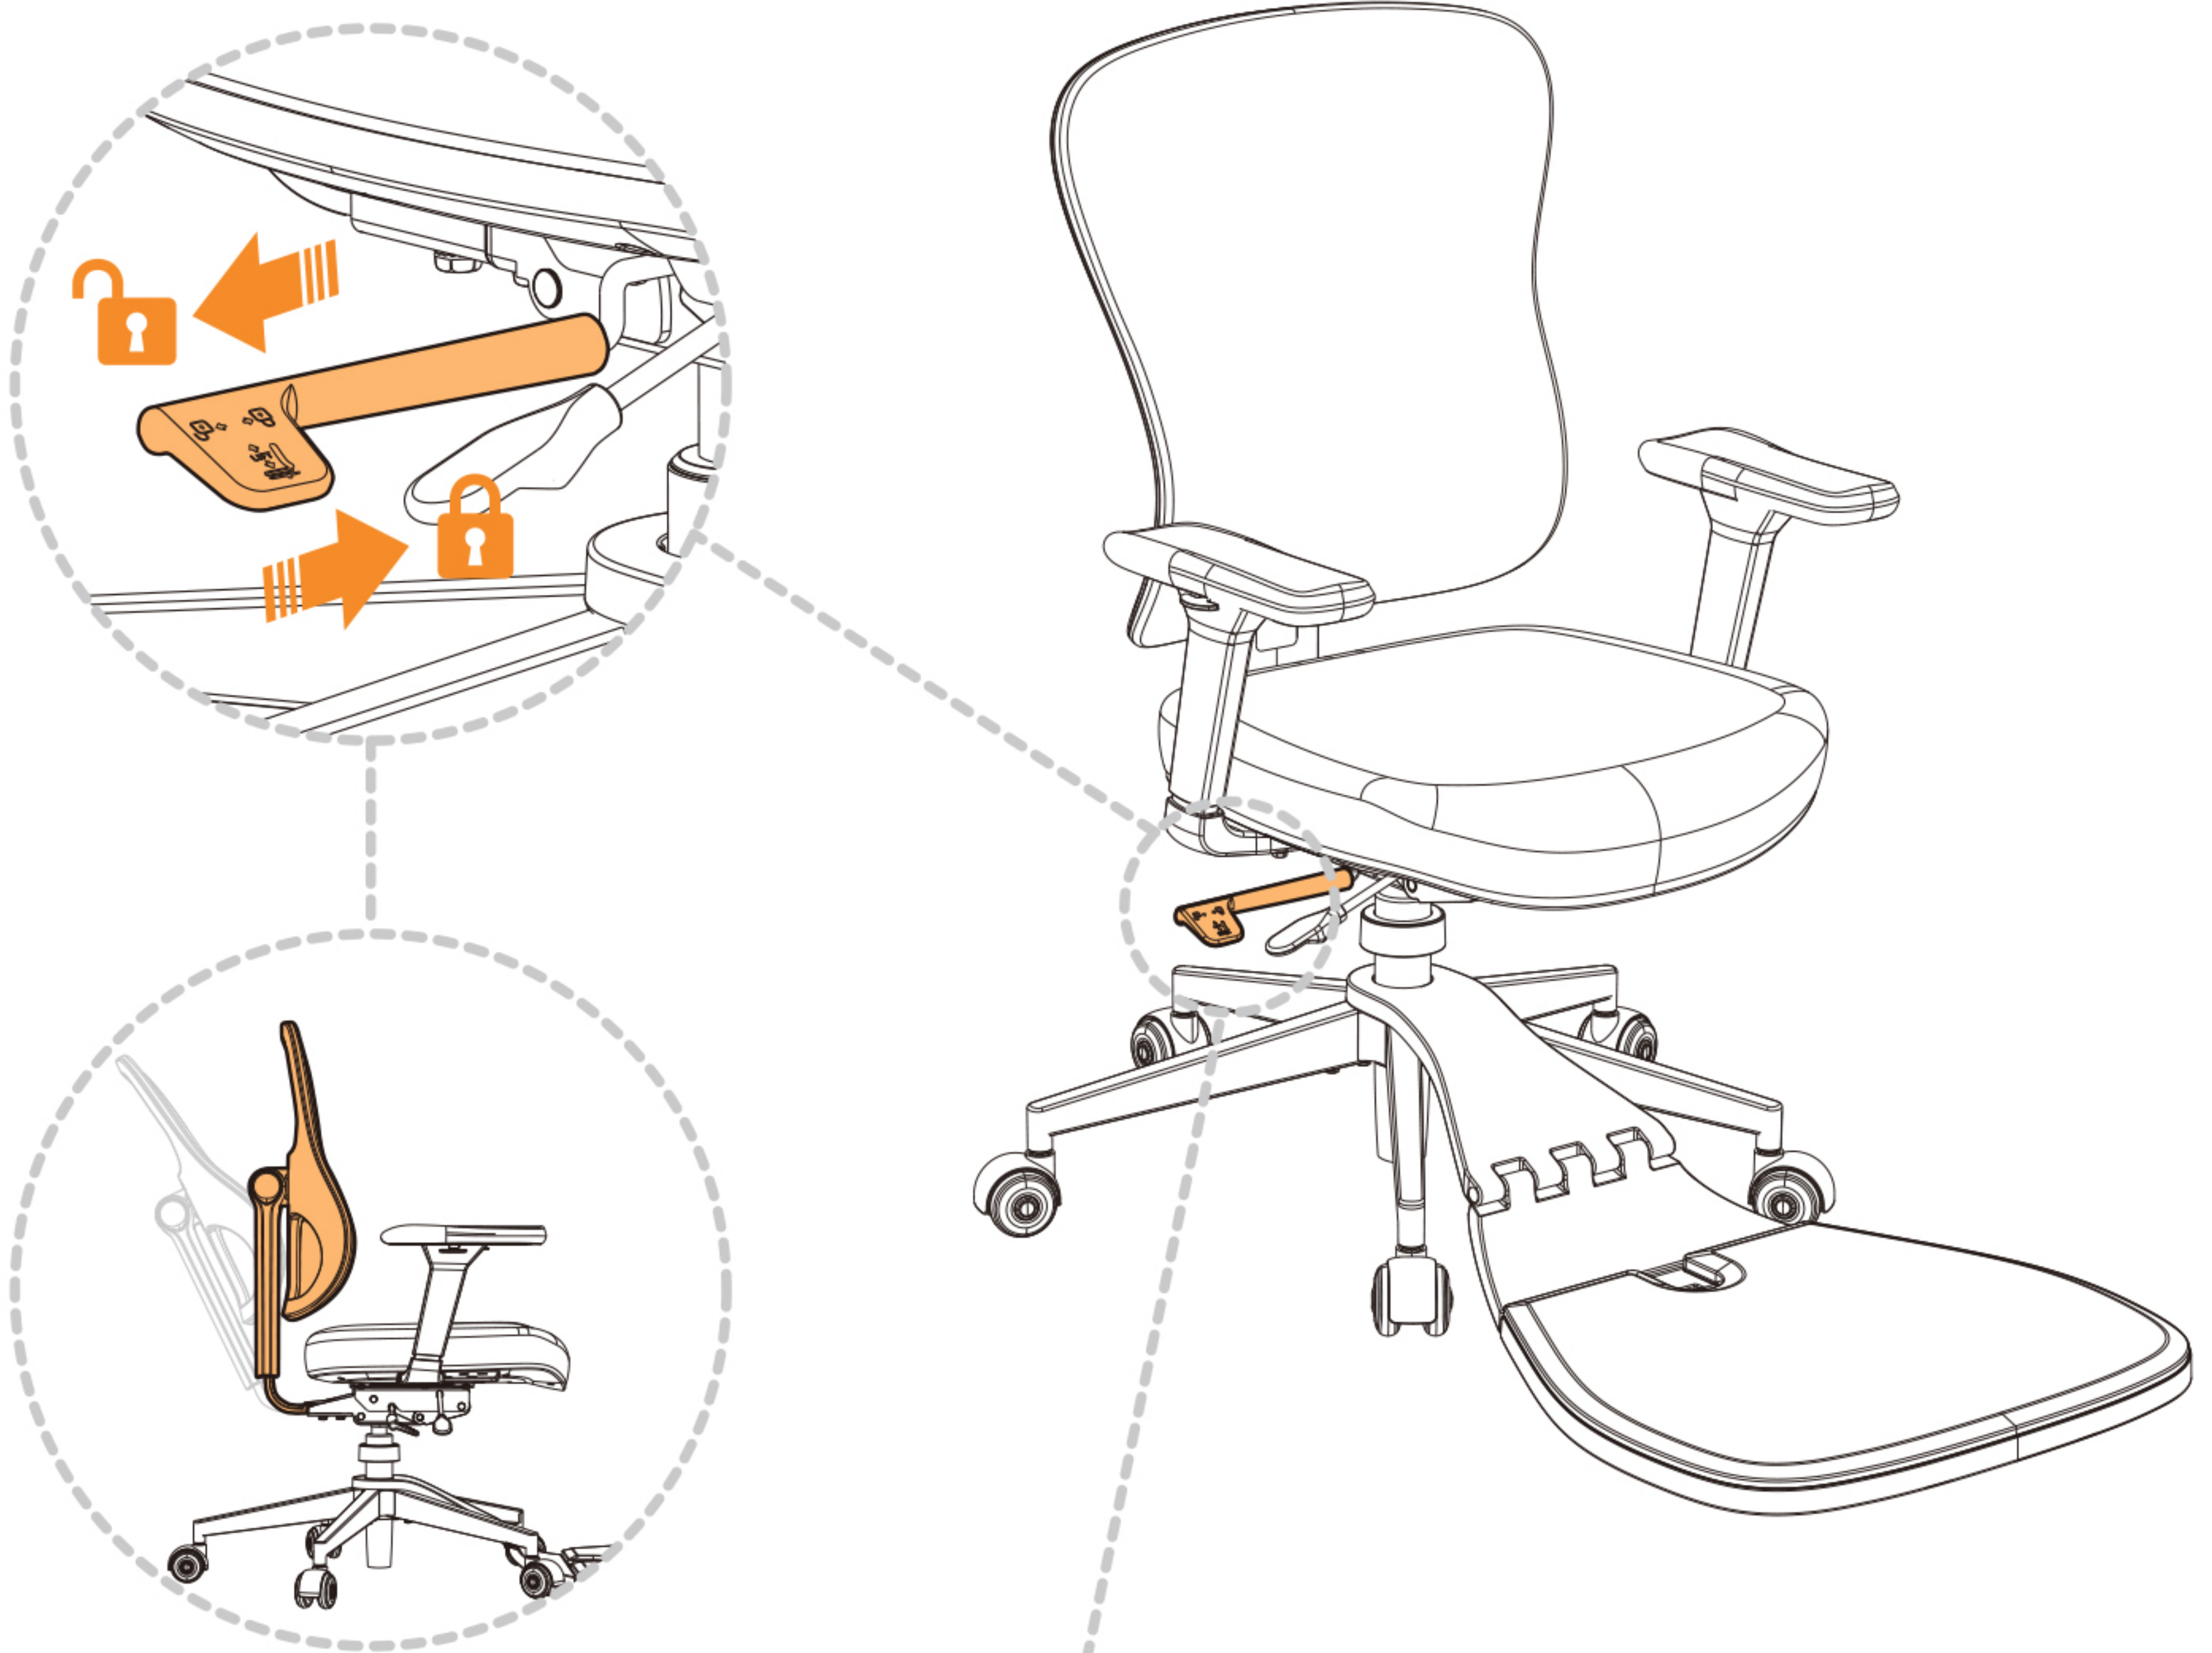

Seat Back Tilt Adjustment

Pull out the lever, then lean backrest with force and adjust the angle of the tilt, push inward to lock it.


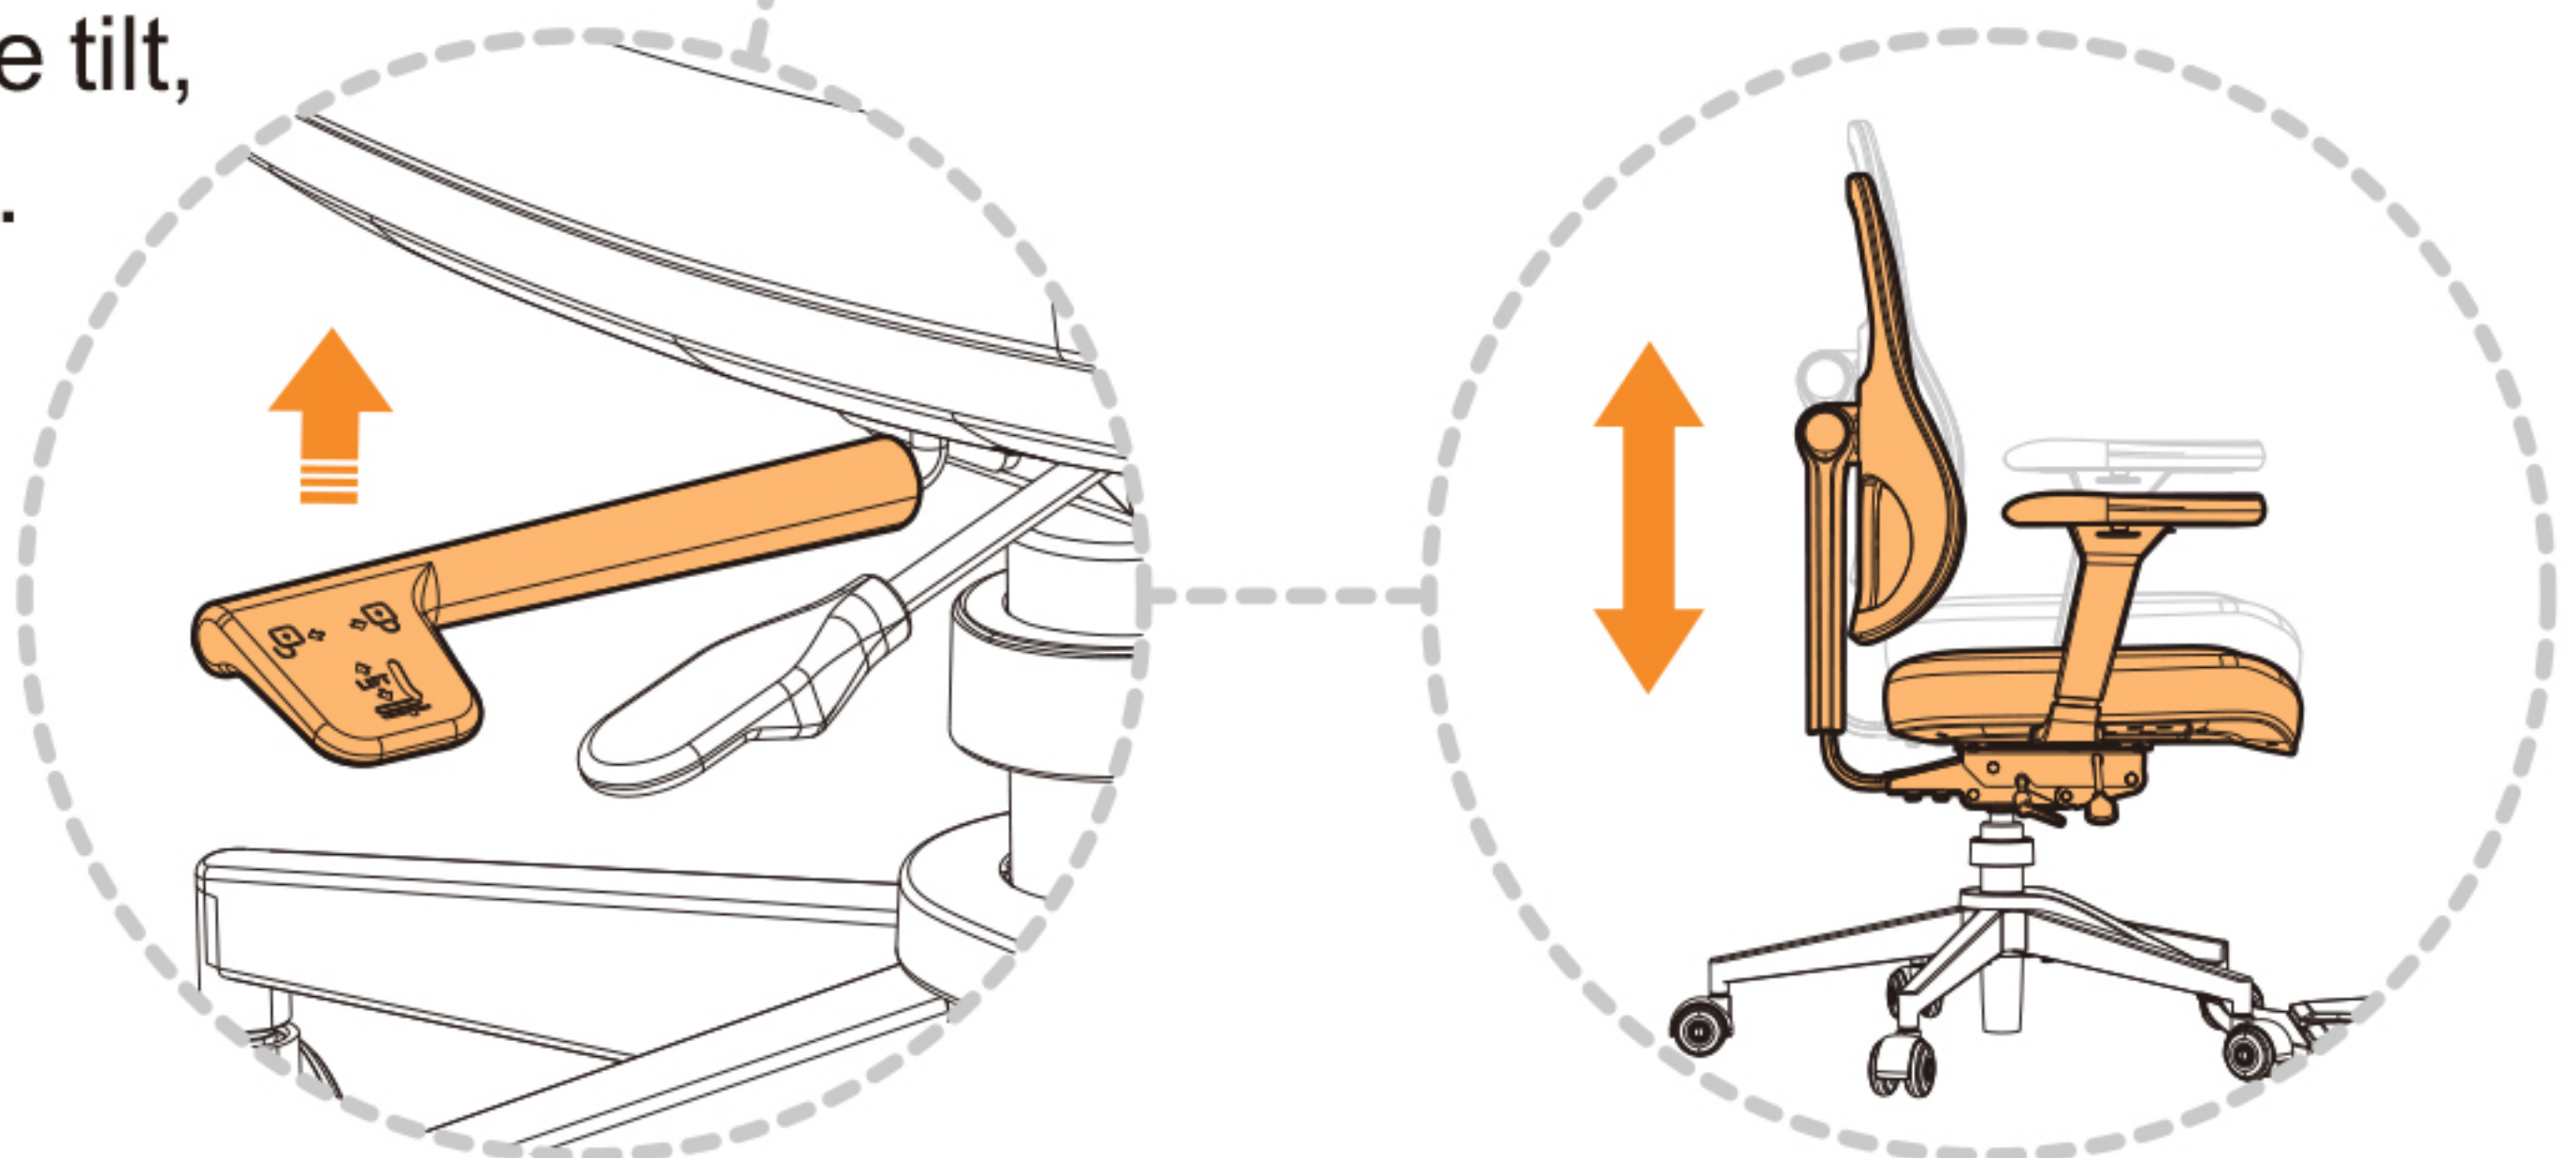


Seat Height Adjustment

Lift the lever to raise or lower the seat.




Safety Warning: When using the chair in "Standing/Leaning Mode," you **MUST** unfold the Standing Mat and stand on it. This acts as a counterweight to prevent the chair from tipping over.

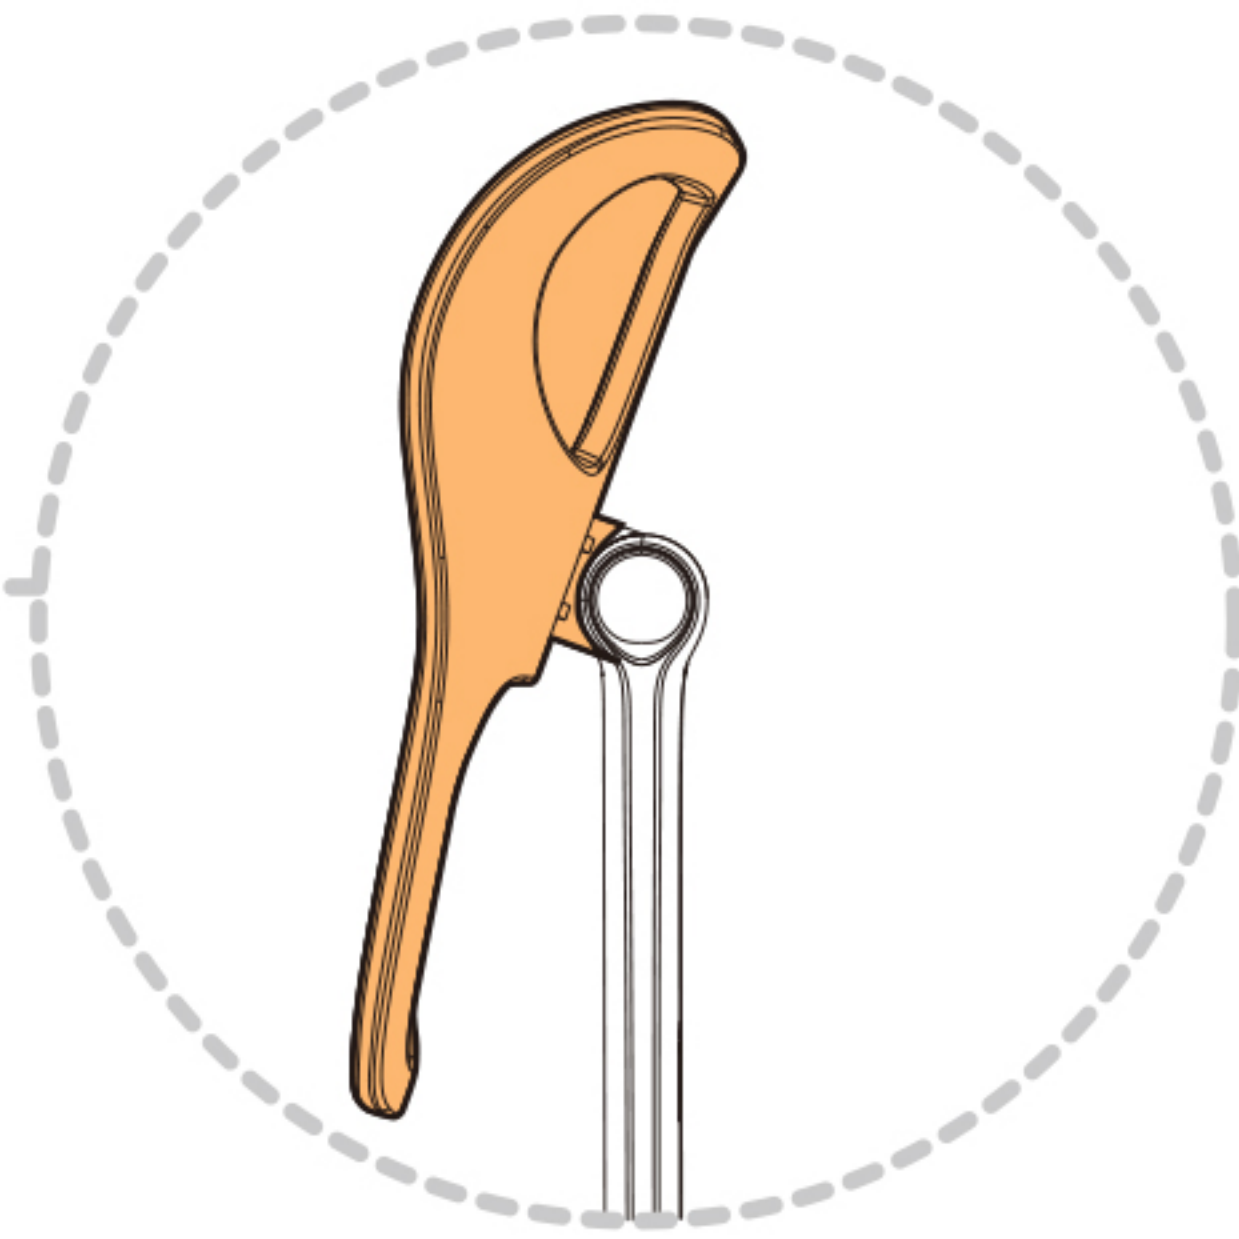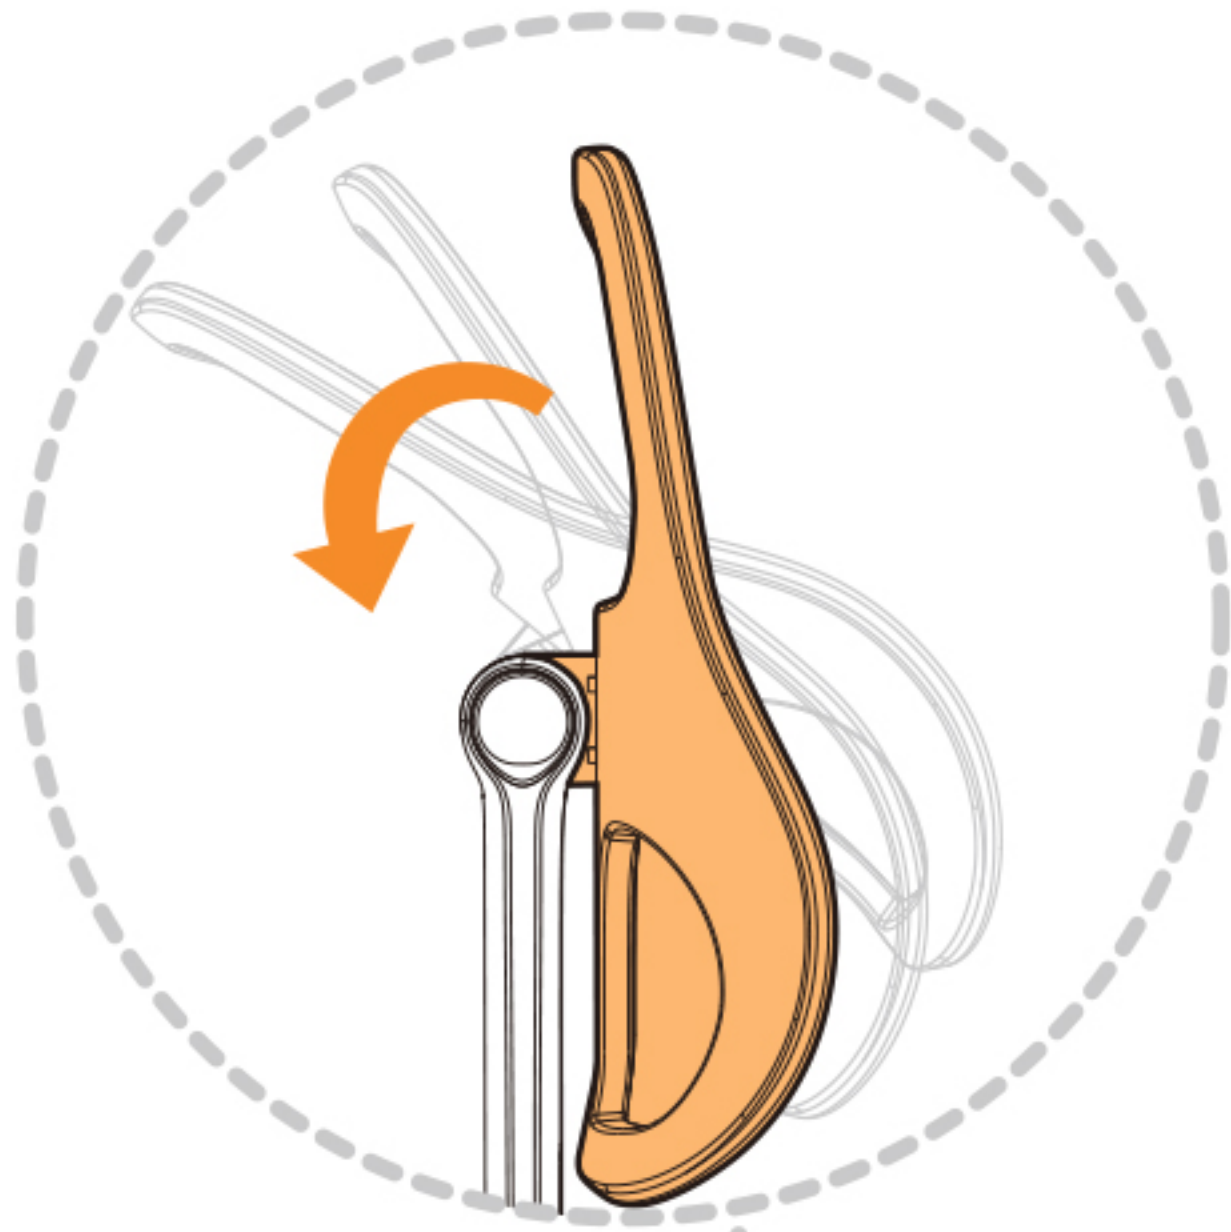

Multi-Angle Support

Rotate the backrest padding to support various postures including Sitting, Standing, Leaning, and Reclining.

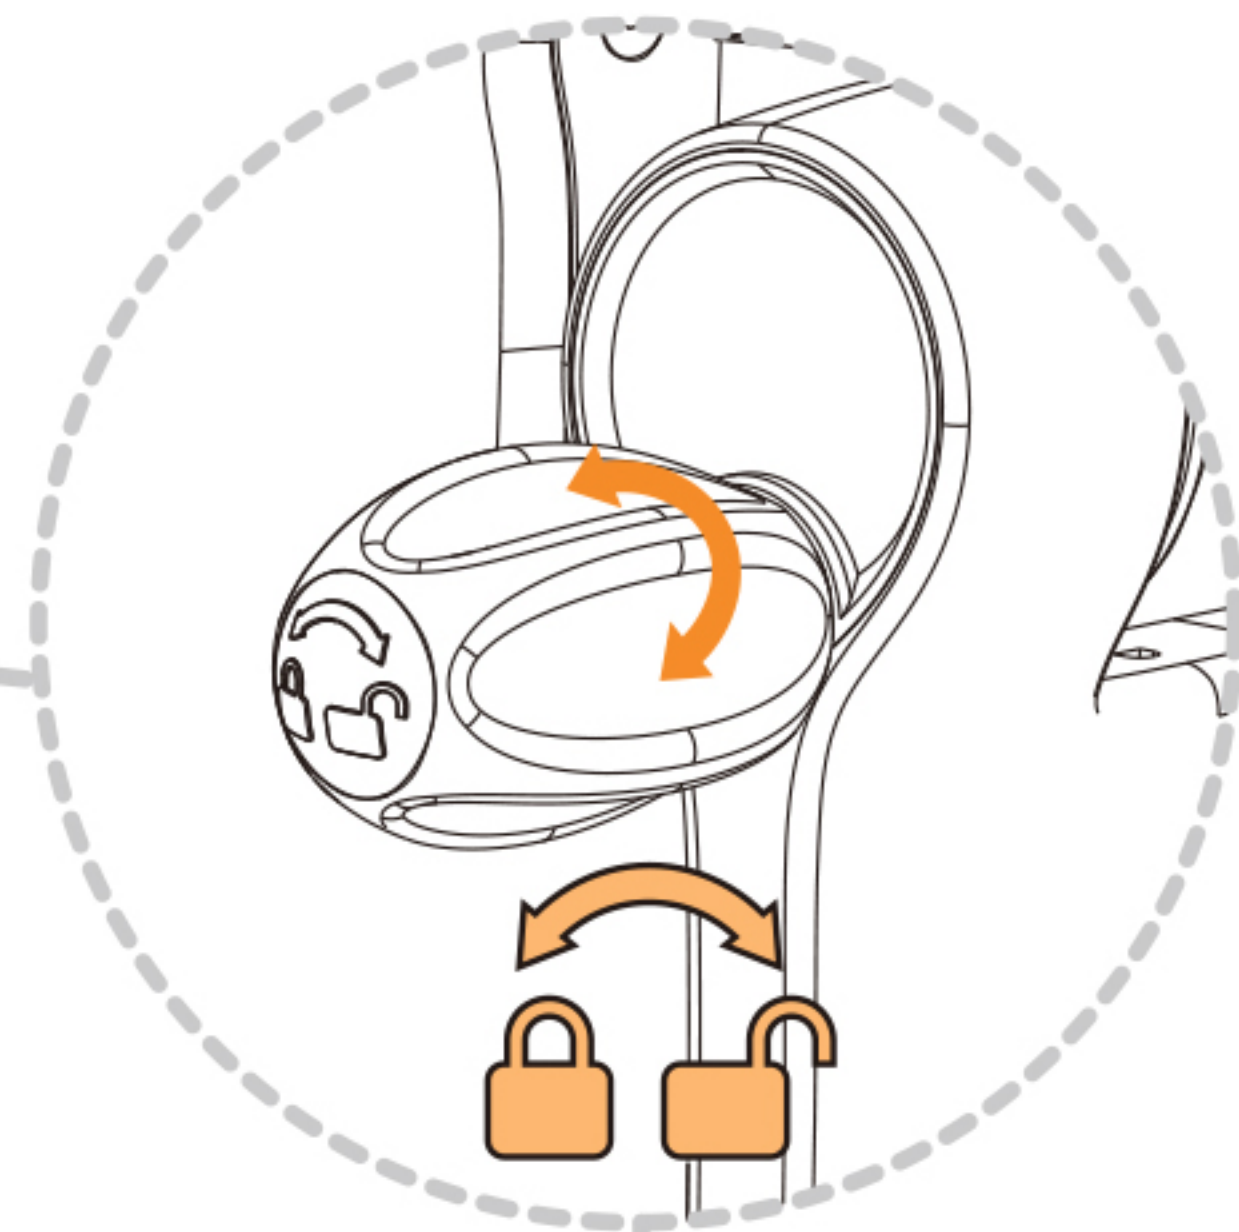

Dual-Position Lock

Secure the backrest into one of two locking positions for stable and customized support.



Folding & Unfolding

Expand the standing mat for active use, or fold it away for compact storage as needed.

After-Sales Policy

Q: What services are available during warranty period?

A: You can contact your seller to get free replacement parts from us if there are any quality problems.



STANDING-MATE