



Step 3: Attach TV to Wall Plate

Use two people to lift the TV into position and hook the TV brackets onto the wall plate. The two spring loaded Quick-Lock brackets will snap into wall plate. If you want to release the TV, just pull cord to release both Quick-Locks and pull the bottom of the TV away from the wall. Then lift the TV up and away from the wall plate.

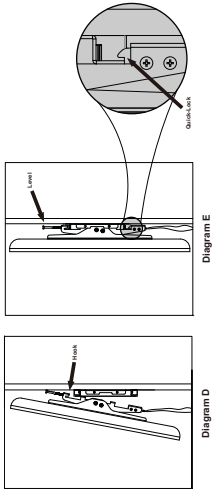


Step 4: Level the TV

For minor level adjustment, tighten the two top screws using a Phillips screwdriver to ensure the TV hangs level. You may need to pull down slightly on the Quick-Lock release cord to relieve pressure.

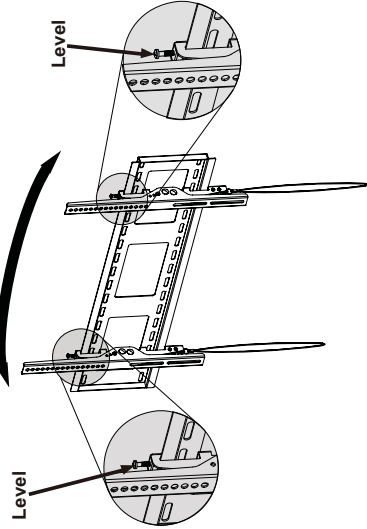


Step 5: Tilt the TV

With your TV mounted to the wall plate, simply tilt the TV to your desired viewing angle, between $+10^{\circ}$ and -5° , and your installation is complete. As an added feature, this model can be locked into position at three tilt positions. Use the M5 x 10mm bolts (J) to lock the tilt arm in place at either -5° , 0° or $+5^{\circ}$.

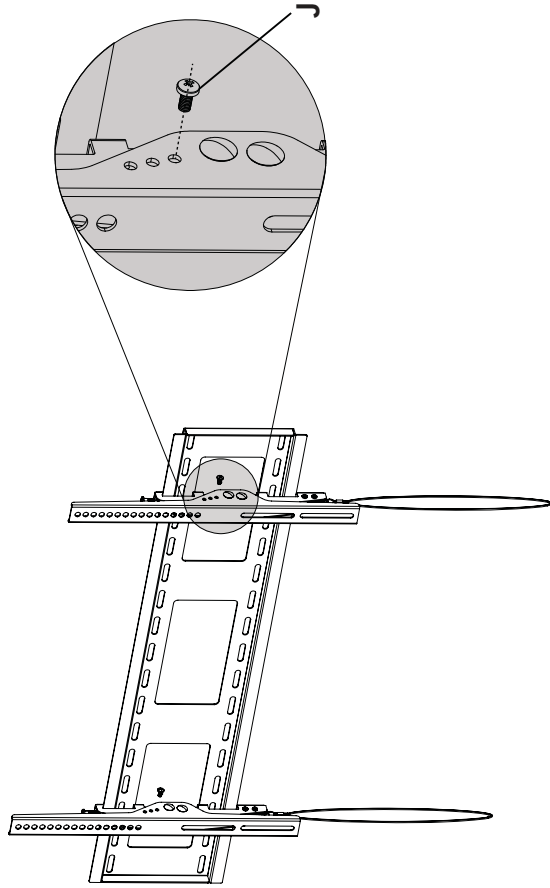

Universal LCD/LED Flat TV Wall Mount

Installation Guide

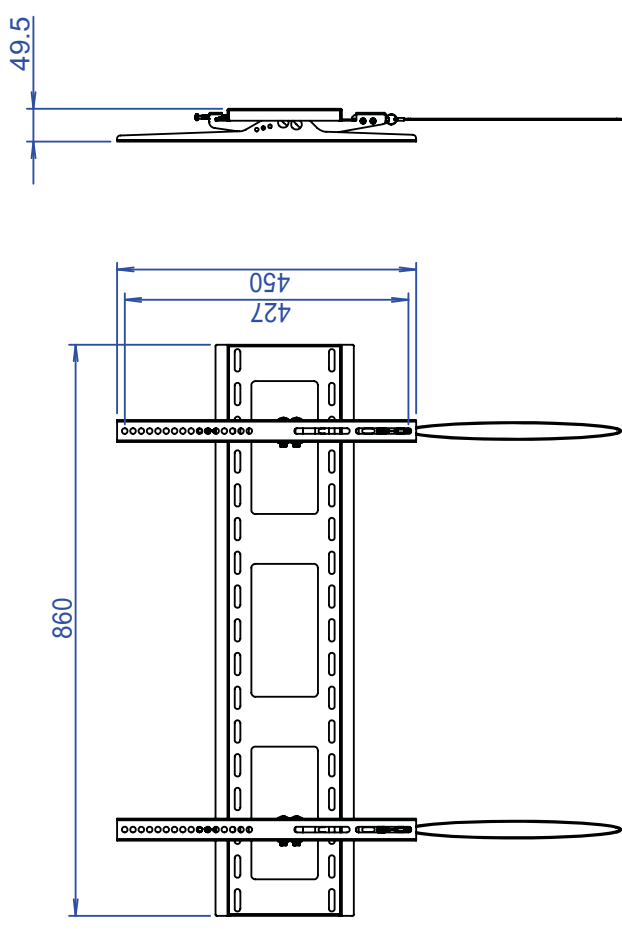

Heavy Duty Steel and Supports 37"-90" TV

VESA 100x100-800x400


Load Capacity: 150lbs(68kg)

Tilt Range $-5/+10$ degrees, Level ± 3 degrees

Spring Lock for Quick and Simple Installation

All Hardware Included


Supplied Parts and Hardware List

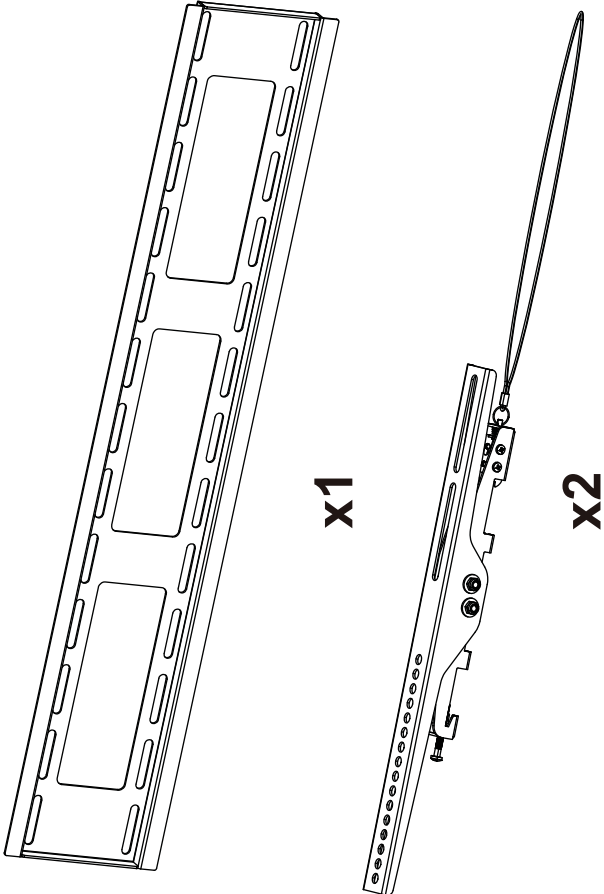

Step 1: Mount Wall Plate


Wood Stud Wall

The Wall Plate must be mounted to two wood studs. Use a stud sensor to locate the two studs. Then use 5mm drill and pre-drill four holes.

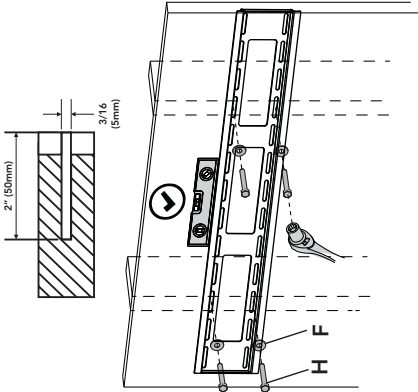

Brick or Concrete Wall

Using the Wall Plate as a template, mark four holes at your desired height. Use 11mm drill and Pre-drill four holes, insert the Concrete Anchor(I).

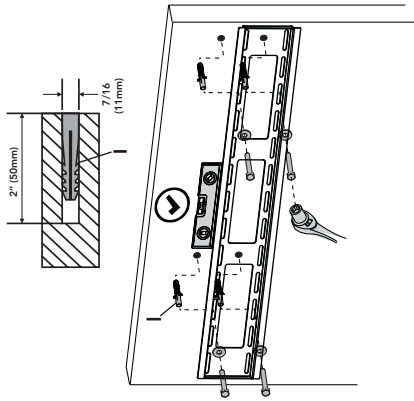

Step 2: Attach TV Bracket

Select the correct diameter bolt and hand thread into the back of the TV to determine the correct length. Use washer(E)for bolt A and B, C and D(M8) not need washers. If your TV has a curved back or deep recesses, you can use the spacers (G). Attach TV bracket arms to the back of the TV.

- | | | | | | | | | | |
|---|-----------|---|-----------|---|-----------|---|-----------|---|-----------|
|  | x4 |  | x4 |  | x4 |  | x4 |  | x4 |
| A: M6 x 15mm Bolt | | B: M6 x 25mm Bolt | | C: M8 x 20mm Bolt | | D: M8 x 35mm Bolt | | E: Washer | |
|  | x4 |  | x4 |  | x4 |  | x4 |  | x2 |
| F: Lag Bolt Washer | | G: 10mm | | H: Lag Bolt | | I: Concrete Anchor | | J: M5 x 10mm Bolt | |

