



INSTALLATION INSTRUCTION

Components:



A

Hexagon socket
countersunk head
screw M5x12 (x4)
(Pre-installed on BB)




B

Cross recessed pan
head screw M4x8
(x8)



C

Anti-slip
nut M4
(x8)

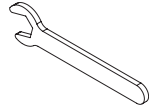


D

Open-end
wrench 7#
(x1)




E

L-shaped
hex key M3
(x1)

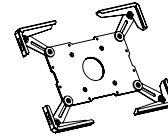

AA

Flat clamp (x2)

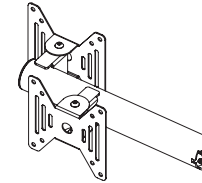

BB


Column (x1)




CC

Base (x1)


STEP 1: Install the base.

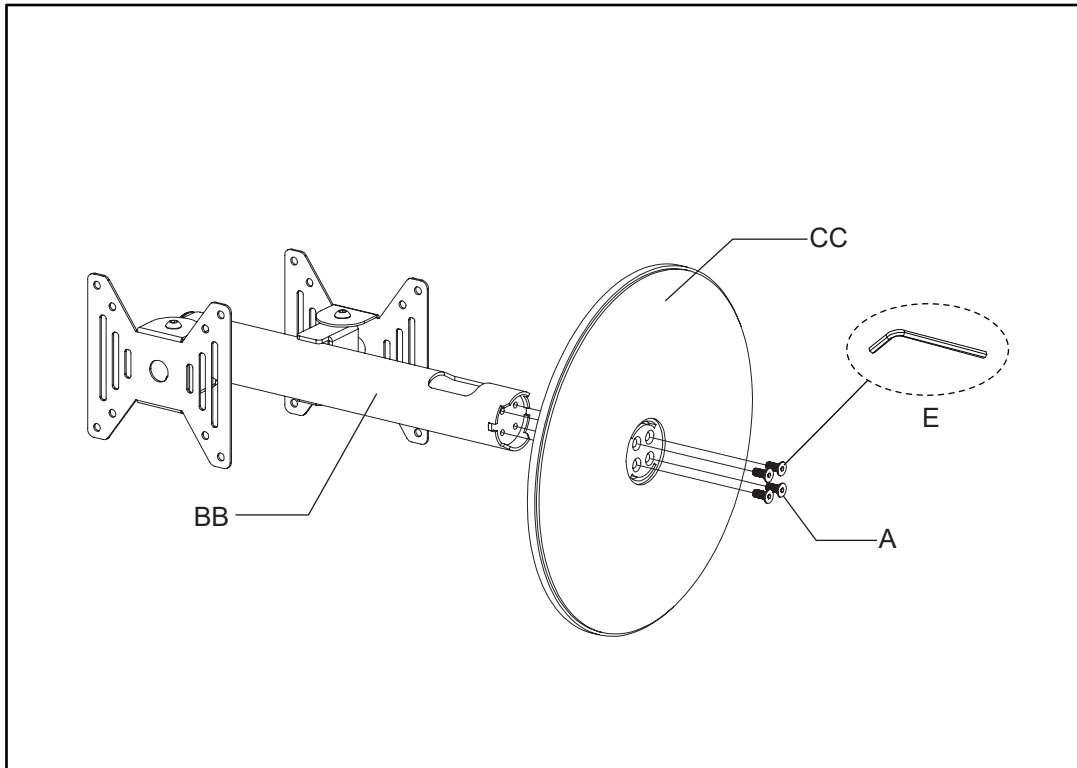


STEP 2: Install the flat clamps.

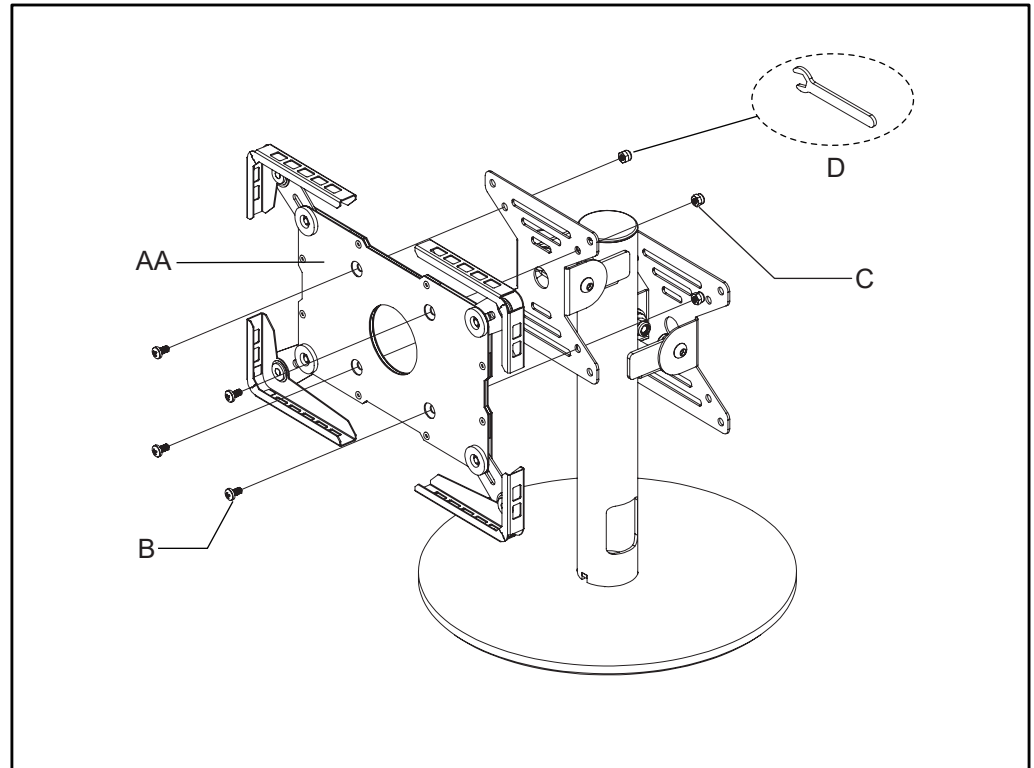

STEP 3: Install the other flat clamp the same way as Step 2.

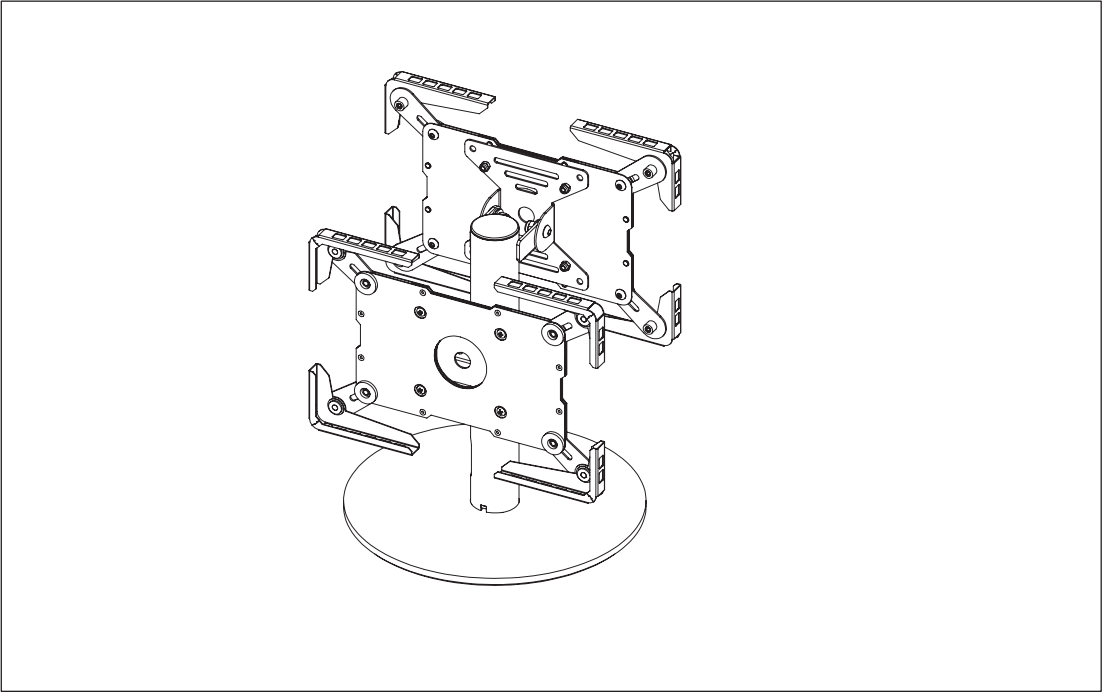

STEP 4:Manage cables.

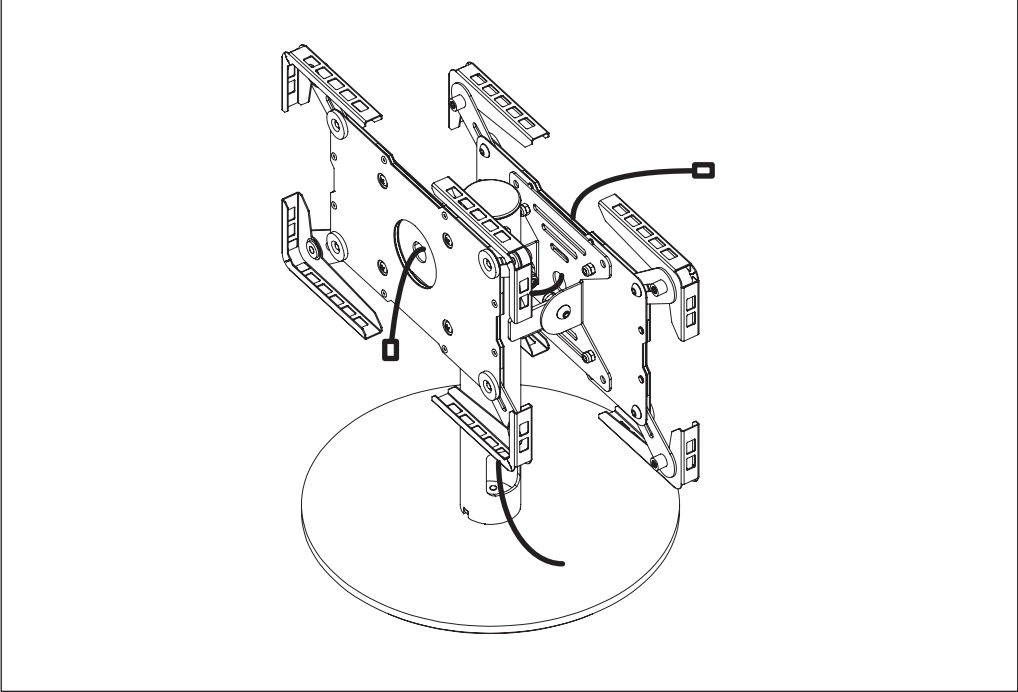

STEP 5:Install the tablet.

