



Silver-Mirror Mobile TV Stand

Installation Manual

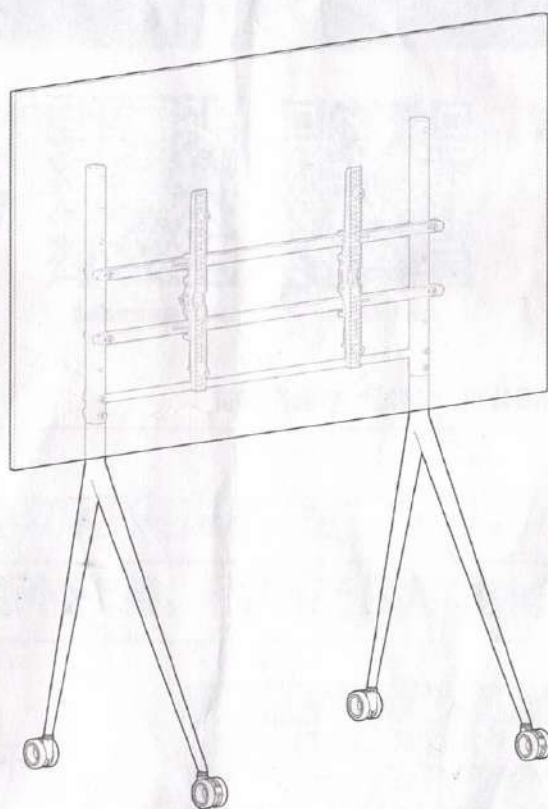


Please read this manual carefully before use and keep it for future reference.
Contact customer service if you have any questions.

Step 1

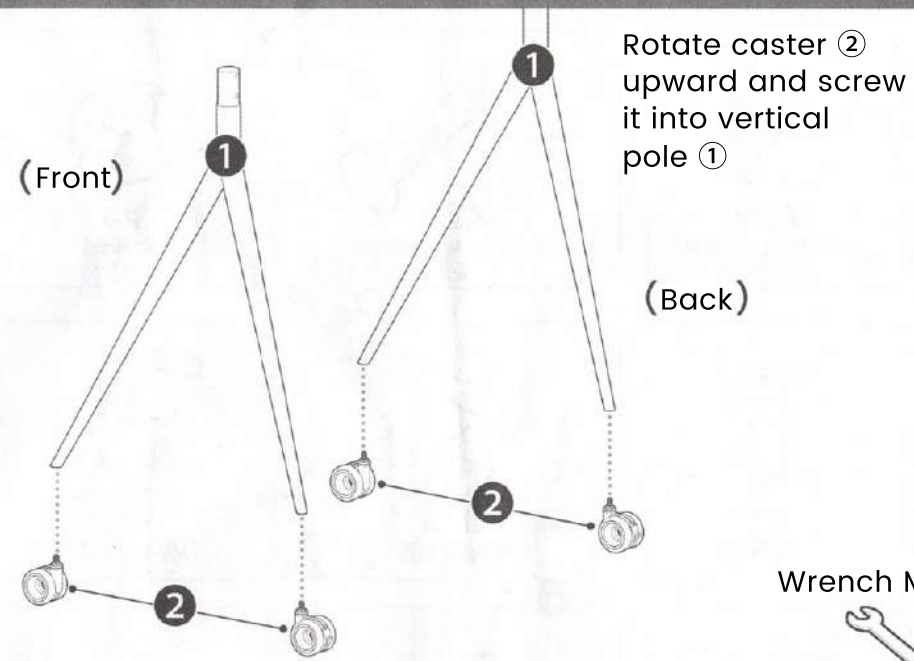


Step 2

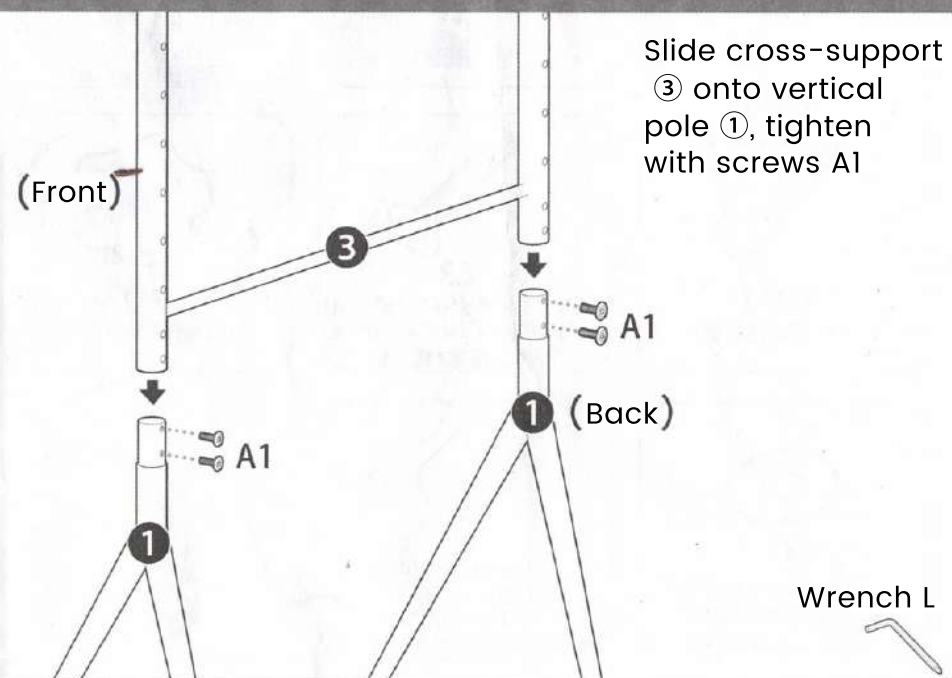

Step 3

(Front)

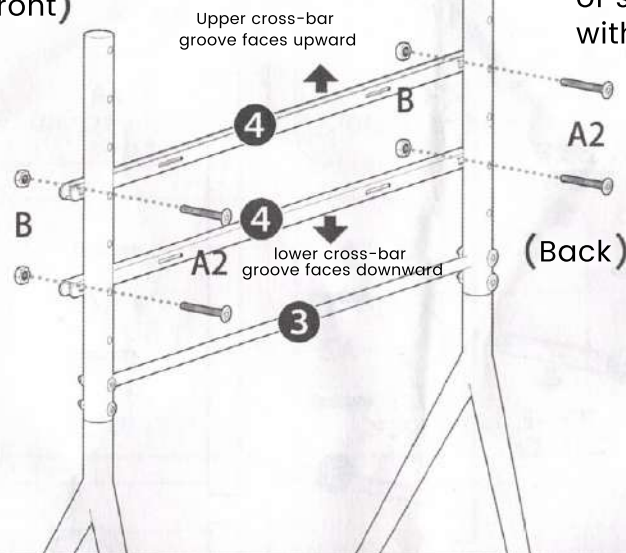


Hang cross-bar ④ onto the front side of support ③, fasten with A2 screws & B nuts.

Note: Install cross-bars on front side of stand. Upper cross-bar ④ groove faces upward, lower cross-bar ④ groove faces downward.

Wrench J, K



Step 5

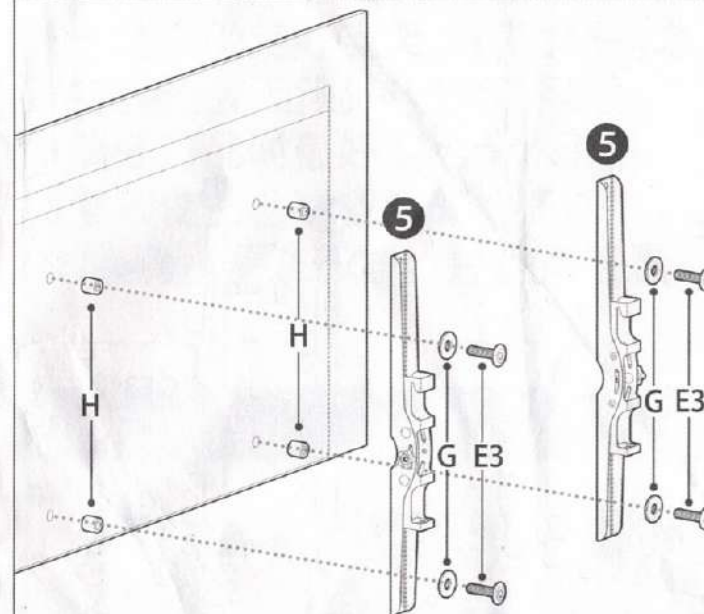


Secure two hooks ⑤ to four mounting holes on TV rear. Select suitable E3 screws & plastic spacers H according to diameter & depth of TV back holes. Fit metal washers G, tighten with E3.

Wrench K, L




Step 4

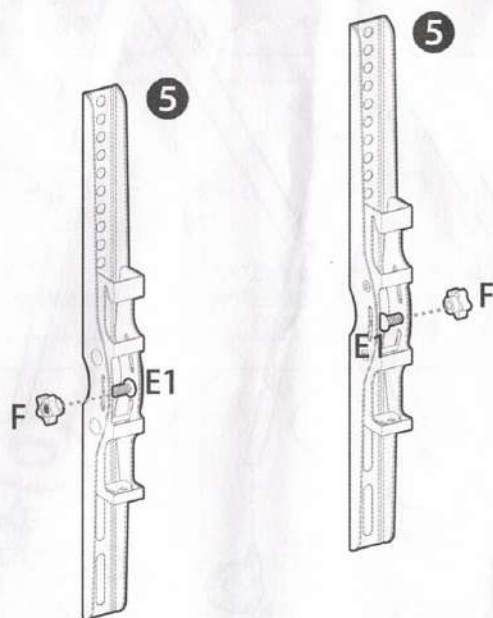

Slide E1 and F onto hook ⑤. Adjust tilt angle of hook ⑤ and lock tight.

Step 6


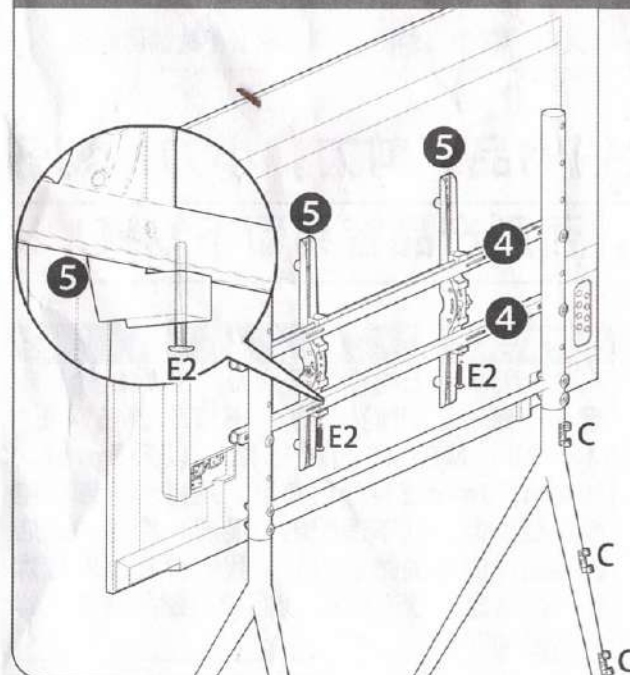


Hang TV-mounted hooks ⑤ onto cross-bars ④. Lock with E2 thumb screws to prevent TV from falling off. This step is critical!!!

Wrench L



Component Overview

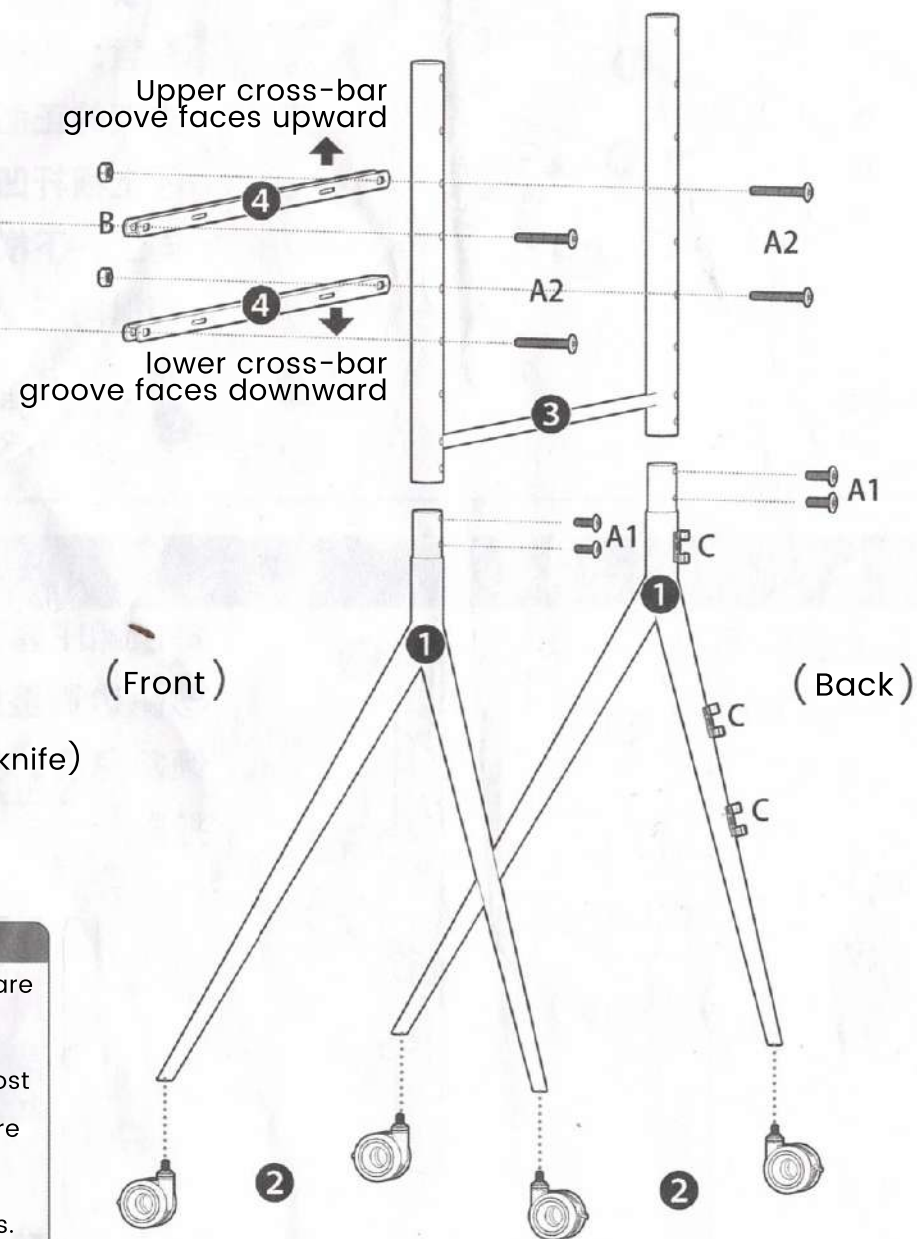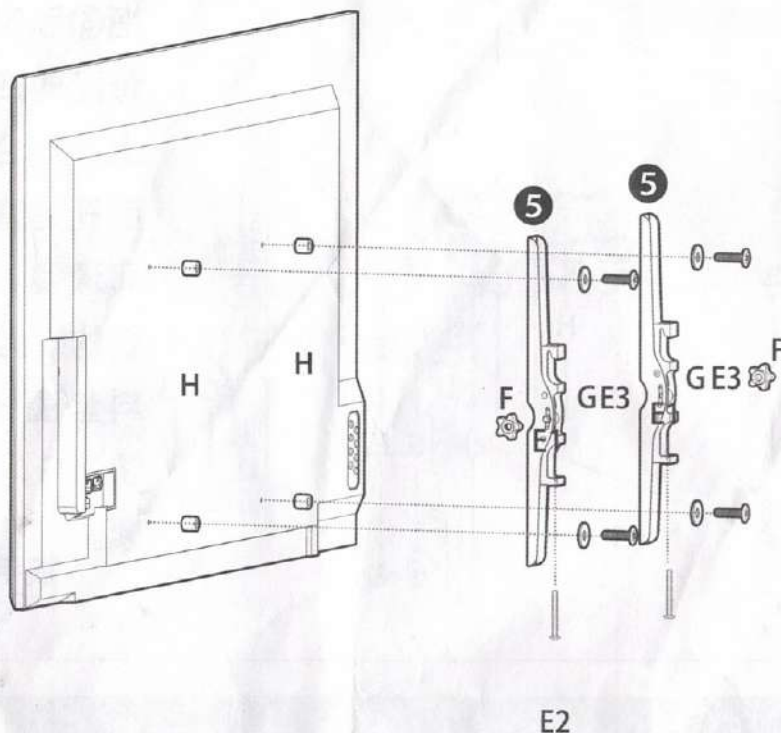

Warning: Do not scratch product surface with sharp objects (scissors, knife)

when removing outer packaging. Scratches may occur!

Additional Remarks:

Due to wide variety of TV models on market, E3 screws are provided in multiple specs: M625, M645, M825, M845.

Spacer options: 5mm, 10mm, 20mm. Compatible with most TVs. In rare non-compatibility cases, send photos to store customer service for replacement screws, or purchase locally. We cover screw cost. Contact support for details.

- ① Y-Shape Vertical Pole
- ② Swivel Caster
- ③ H-Shape Support Bar
- ④ U-Groove Cross-bar
- ⑤ Metal Hook

Parts List



A1*4

(M6*12 Hex Socket Screws,
1 spare included)



A2*4

(M8*70 Hex Socket Screws,
1 spare included)




B*4

(M8 Nuts,
1 spare included)



C*5

(Cable Clips)

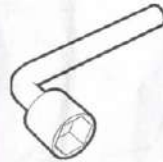


J*1

(M14 Socket Wrench)



K*1

(M8 L-shaped Wrench)

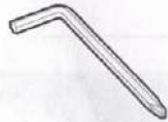

L*1

(M6 L-shaped Wrench)



M*1

(Open-end Wrench)



E1*2

(Cam Screws,
pre-installed on Hook ⑤)



E2*2

(M5*35 Thumb Screws)



E3

(M6*25 Screws4, M6*45 Screws4,
M8*25 Screws4, M8*45 Screws4;
select 4 out of 16 for installation)



F*2

(pre-installed on Hook ⑤)



G

(M6 Metal Washers4,
M8 Metal Washers4;
select 4 out of 8 for installation)



H

(5mm Spacers4,
10mm Spacers4,
20mm Spacers*4;
select based on TV
back hole flatness & depth)

Important Notes

- Confirm the front-back orientation of the stand before hanging the TV. Risk of tipping over if installed backwards.
- Clean only with clean water.
- Do NOT use acidic or alkaline cleaners. If contact occurs, rinse immediately with clean water and dry thoroughly.